



ZTE ZFive G LTE Battery Replacement

This guide provides the steps necessary to replace the battery for the ZTE ZFive G LTE.

Written By: Julian Mendoza



 **TOOLS:**

- [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Using the opening tool, pry open the rear cover from the crease at the bottom left corner.

Step 2



- Remove the battery from the bottom with an opening tool or fingernail.

Step 3



- ⓘ When installing the new battery, make sure the negative and positive ports are aligned.
- Push the battery into the slot.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-15 04:12:41 AM.