



# Pioneer FH-X730BS Disk Drive Replacement

This guide shows you how to replace a Pioneer FH-X730BS disc drive.

Written By: Cody Pesta



## INTRODUCTION




A broken disk drive can cause the user unable to play CDs on the radio receiver. This guide will show you how to replace the disk drive for the Pioneer FH-X730BS.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Disk Drive

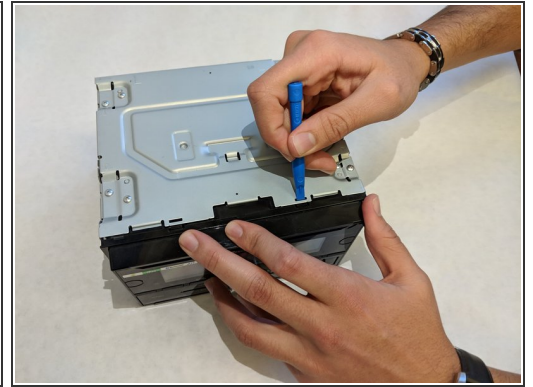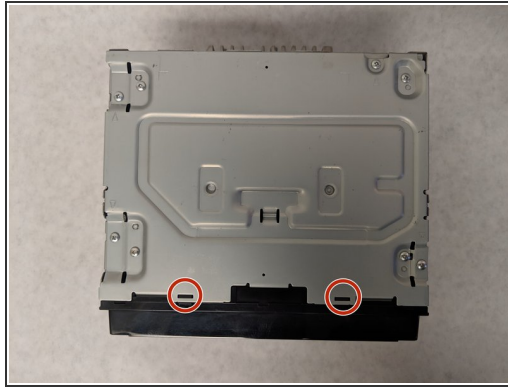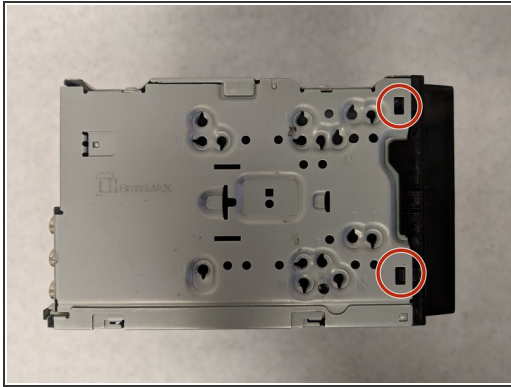


- Apply pressure to the tabs on each side using the plastic opening tool.
- You will need to pull the face away from the frame while unhooking the tabs.

## Step 2

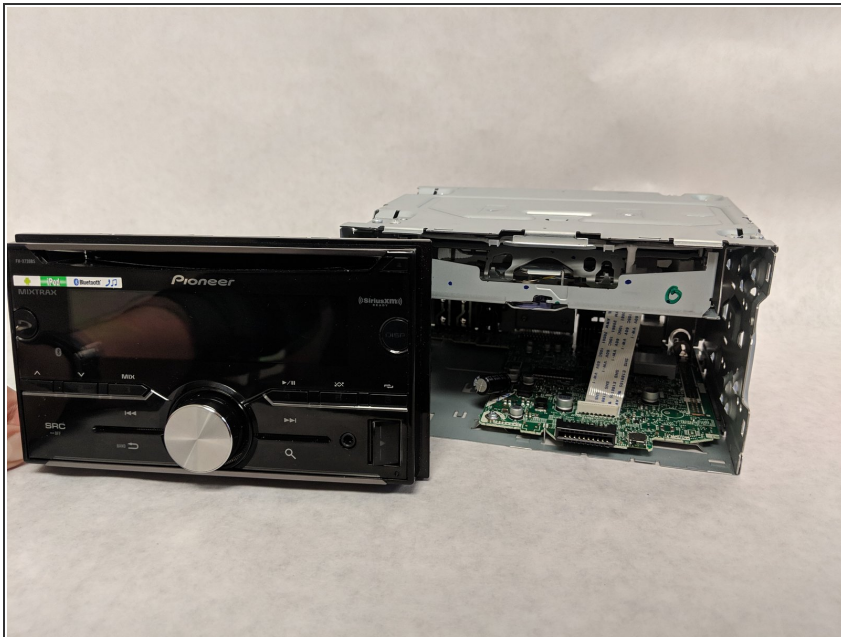




- After removing the stereo face from the frame, it should look similar to this.

### Step 3

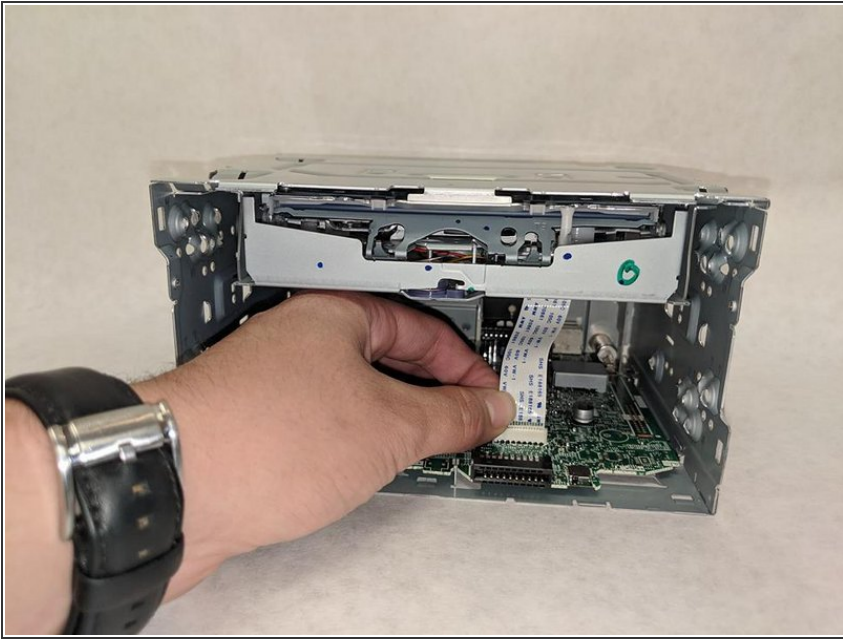

- Remove the ribbon wire from where it is being held in place. This can be done by applying force upwards.




### Step 4

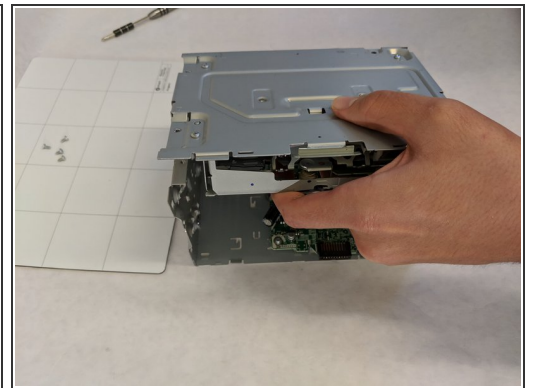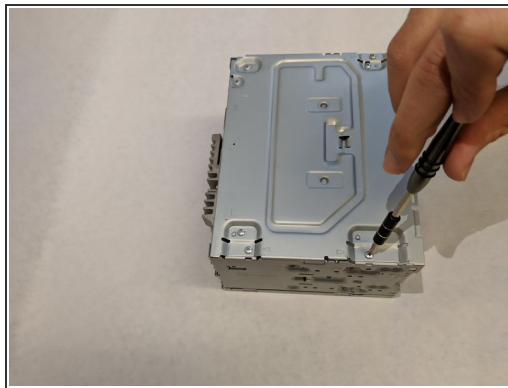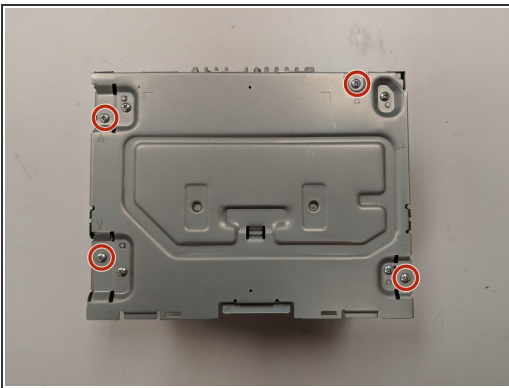

- Unscrew the four 7.3 mm outer screws on the top to remove the top face from the rest of the frame.



## Step 5

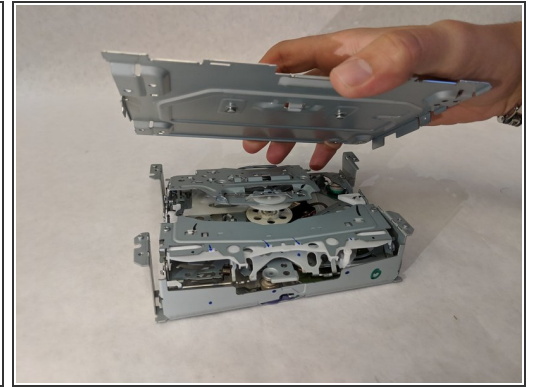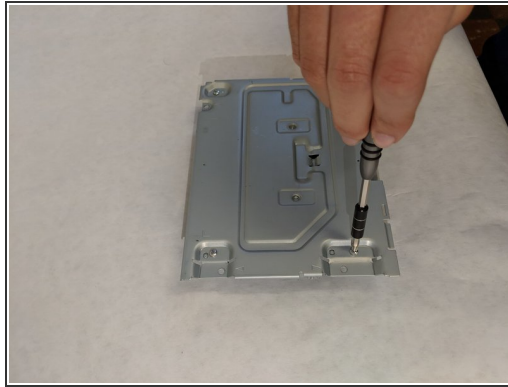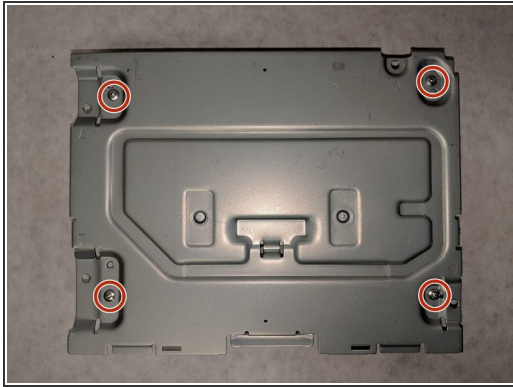

- Unscrew the four inner screws that are 7.3 mm long using a Phillips #1 head screw driver to remove the disk drive from the top face plate.
- Replace the old disk drive with a new one.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-12-11 10:15:26 PM.