



# HP Mini 210-2070NR Battery and Service Access Cover Replacement

This is a step by step guide showing how to remove the battery and Service Access Cover.

Written By: Sean Kuster



## INTRODUCTION

Use this guide to remove the battery and the back cover of your laptop in order to repair or install new parts.

## Step 1 — Battery and Service Access Cover



- ⓘ Before beginning, make sure that your computer is turned off and all external power cords are disconnected.
- Close the laptop and turn it over, so that the underside is up and the silver battery bay is facing towards you.

## Step 2



- Locate the battery locking latch on the bottom right corner and slide it inward to unlock the battery.
- Locate the battery release latch on the bottom left and slide it inward.
- Pull the battery towards you to remove it from the laptop.

### Step 3



- Locate the service access cover release lever and slide it to the right.
- While holding the lever to the right, lift up the laptop's bottom cover gently and remove the cover from the laptop.

### Step 4



- If you are performing any installations after the battery, orient the computer so that the underside is up, and the battery port is facing away from you.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-19 03:41:53 PM.