



Dell Latitude D430 RAM Replacement

This guide will cover the replacement of the RAM in the Dell Latitude D430.

Written By: Parker Wiley



INTRODUCTION

The RAM is essential for a computer to function, and must be replaced if is found to be faulty.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — RAM



- Flip the laptop so that the battery is facing up, and the Dell logo is facing down on the surface the laptop is placed on.

Step 2

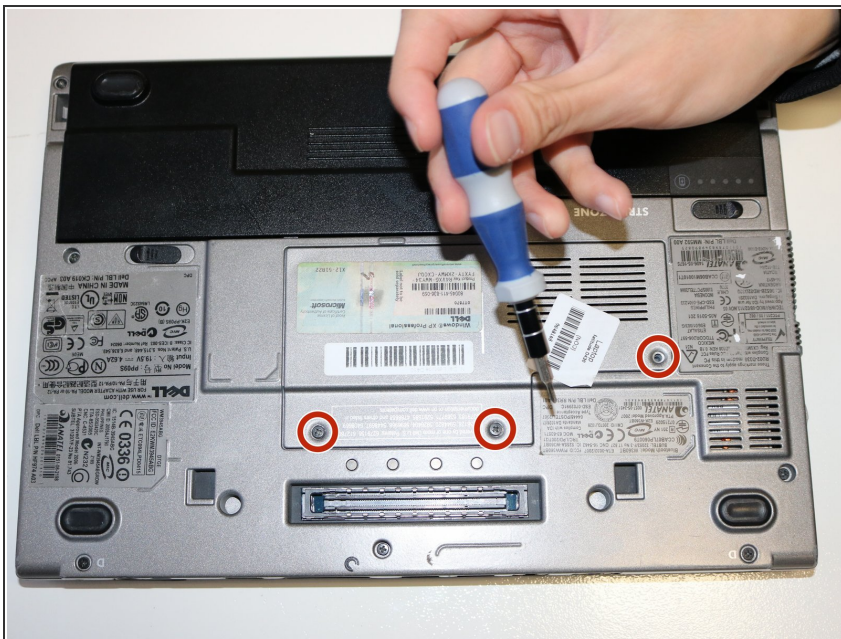



- Use a Phillips #00 screwdriver to remove the 3 screws that hold the L-shaped back panel down.

Step 3



- Lift the L-shaped panel by the corners, and set it to the side.

Step 4

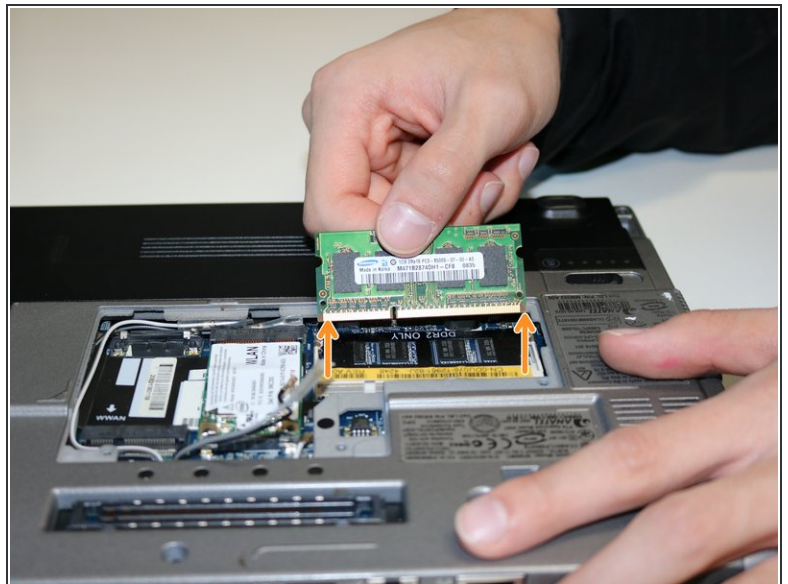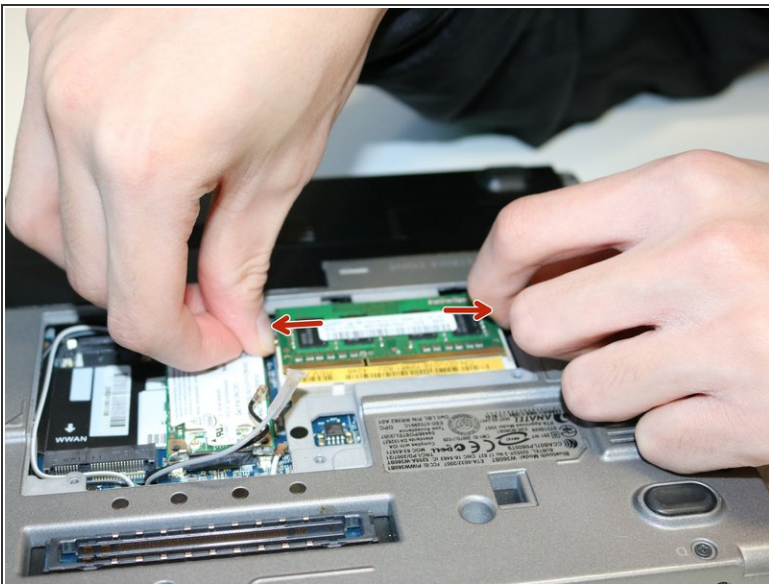

- Pull on the outside tabs keeping the RAM stick in place.
- The RAM should then pop out and can be easily removed by pulling away from the slot.

To reassemble your device, follow these instructions in reverse order.