



Acer Aspire E1-470P-6659 Battery Replacement

How to replace the battery in an Acer Aspire E1-470P-6659

Written By: Faith Lobaton



INTRODUCTION

If you have battery problems or need to remove your battery before replacing other parts of the laptop, use this guide to remove and replace your battery.

TOOLS:

- [Spudger](#) (1)
-

Step 1 — Battery




- Turn off the laptop and disconnect all device cords.

Step 2




- Flip the laptop over so the bottom is facing you.

Step 3

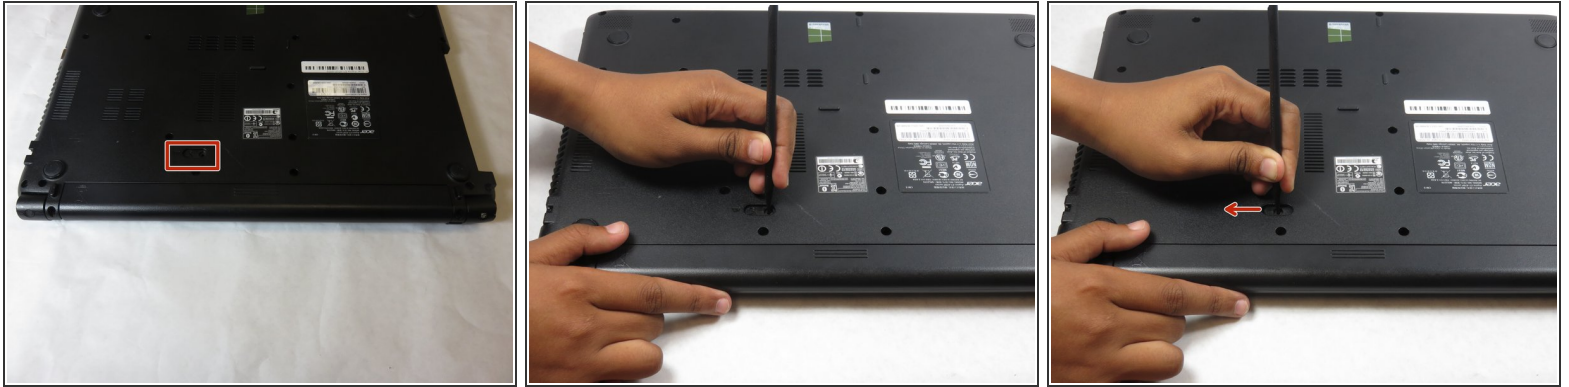

- Use your finger or a spudger to pull the battery release switch.

Step 4

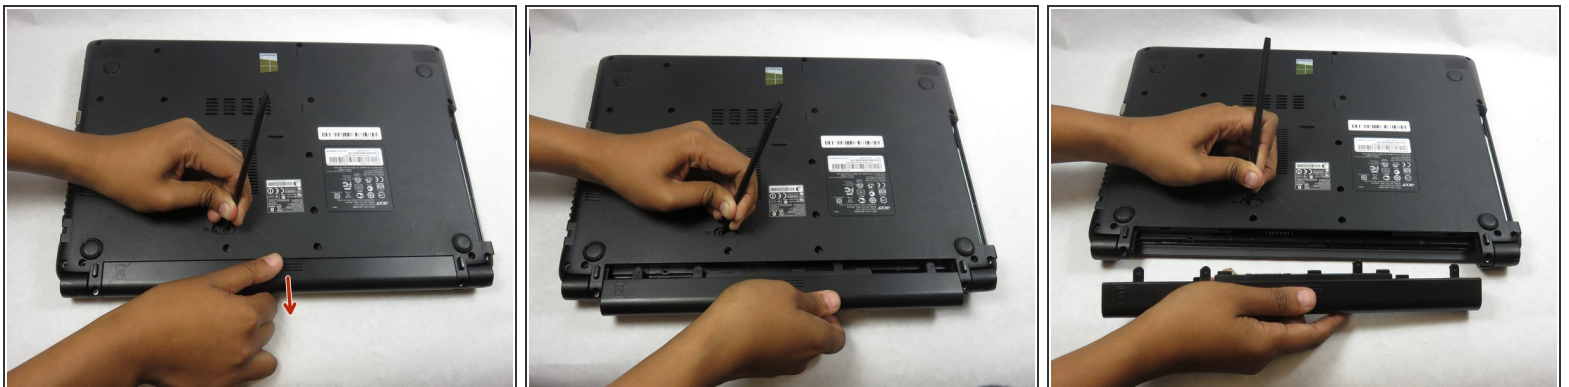

- Remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.

For optimal performance, after completing this guide, [calibrate](#) your newly installed battery.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.