



Lenovo IdeaPad U410 Screen Replacement

Guide on how to replace a broken LCD screen on your Lenovo IdeaPad U410 laptop.

Written By: Edric An



INTRODUCTION

This screen replacement guide will show you how to replace your defective LCD screen on your Lenovo U410. You will need a Phillips #1 screwdriver and a metal spudger. Be careful when removing the plastic trim and connectors because you can easily break them.



TOOLS:

 
- [Phillips #1 Screwdriver](#) (1)
- [Metal Spudger](#) (1)





PARTS:

- [Lenovo IdeaPad U410 LCD display](#) (1)
-

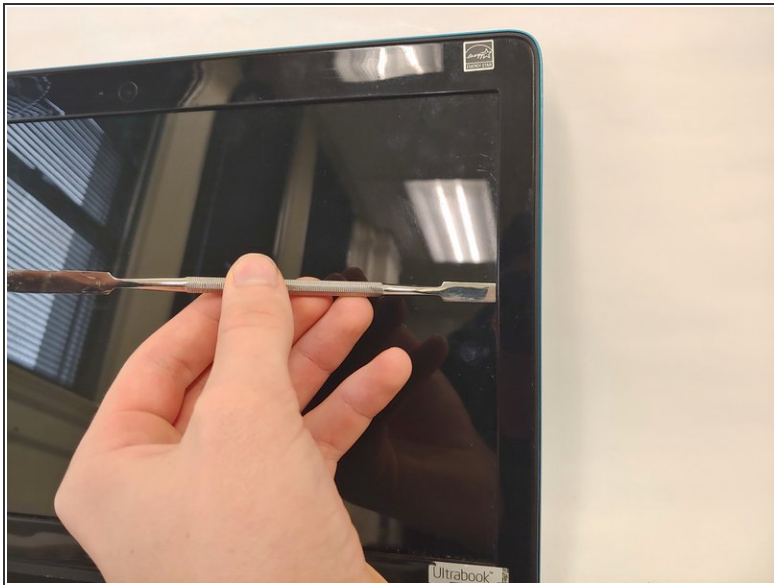 
Step 1 — Screen



 Make sure your laptop is turned off before disassembling.

- Power off the laptop.
 - Using the metal spudger, gently pry off the black trim around the screen.
-  Metal spudger can be used, but using your hand will prevent the screen and the plastic border from any damage.

Step 2

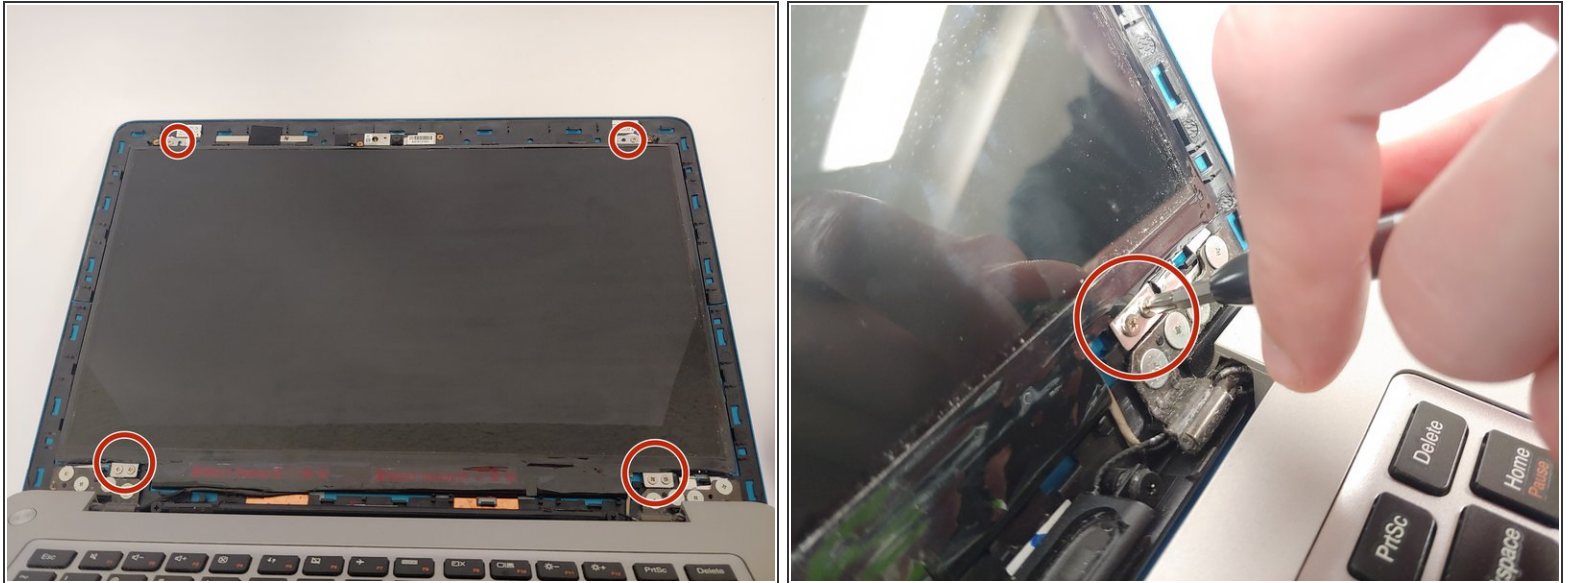

- Remove the six 3 mm Phillips #1 screws holding the screen to the laptop.
- ⓘ Ignore the "Do not touch" label on the bottom portion of the screen. It will not damage the laptop.

Step 3



- Lower LCD screen onto the keyboard.
- ⓘ Find the gold connector on the bottom of the LCD panel.
- Gently grab the connector on both sides and pull the connector straight out.
- ⚠ Connector cable is very fragile. Use the least amount of force possible.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-15 07:23:57 AM.