




Blu Grand M Speaker Replacement

How to replace a Blu Grand M speaker.

Written By: Cameron Retzlaff

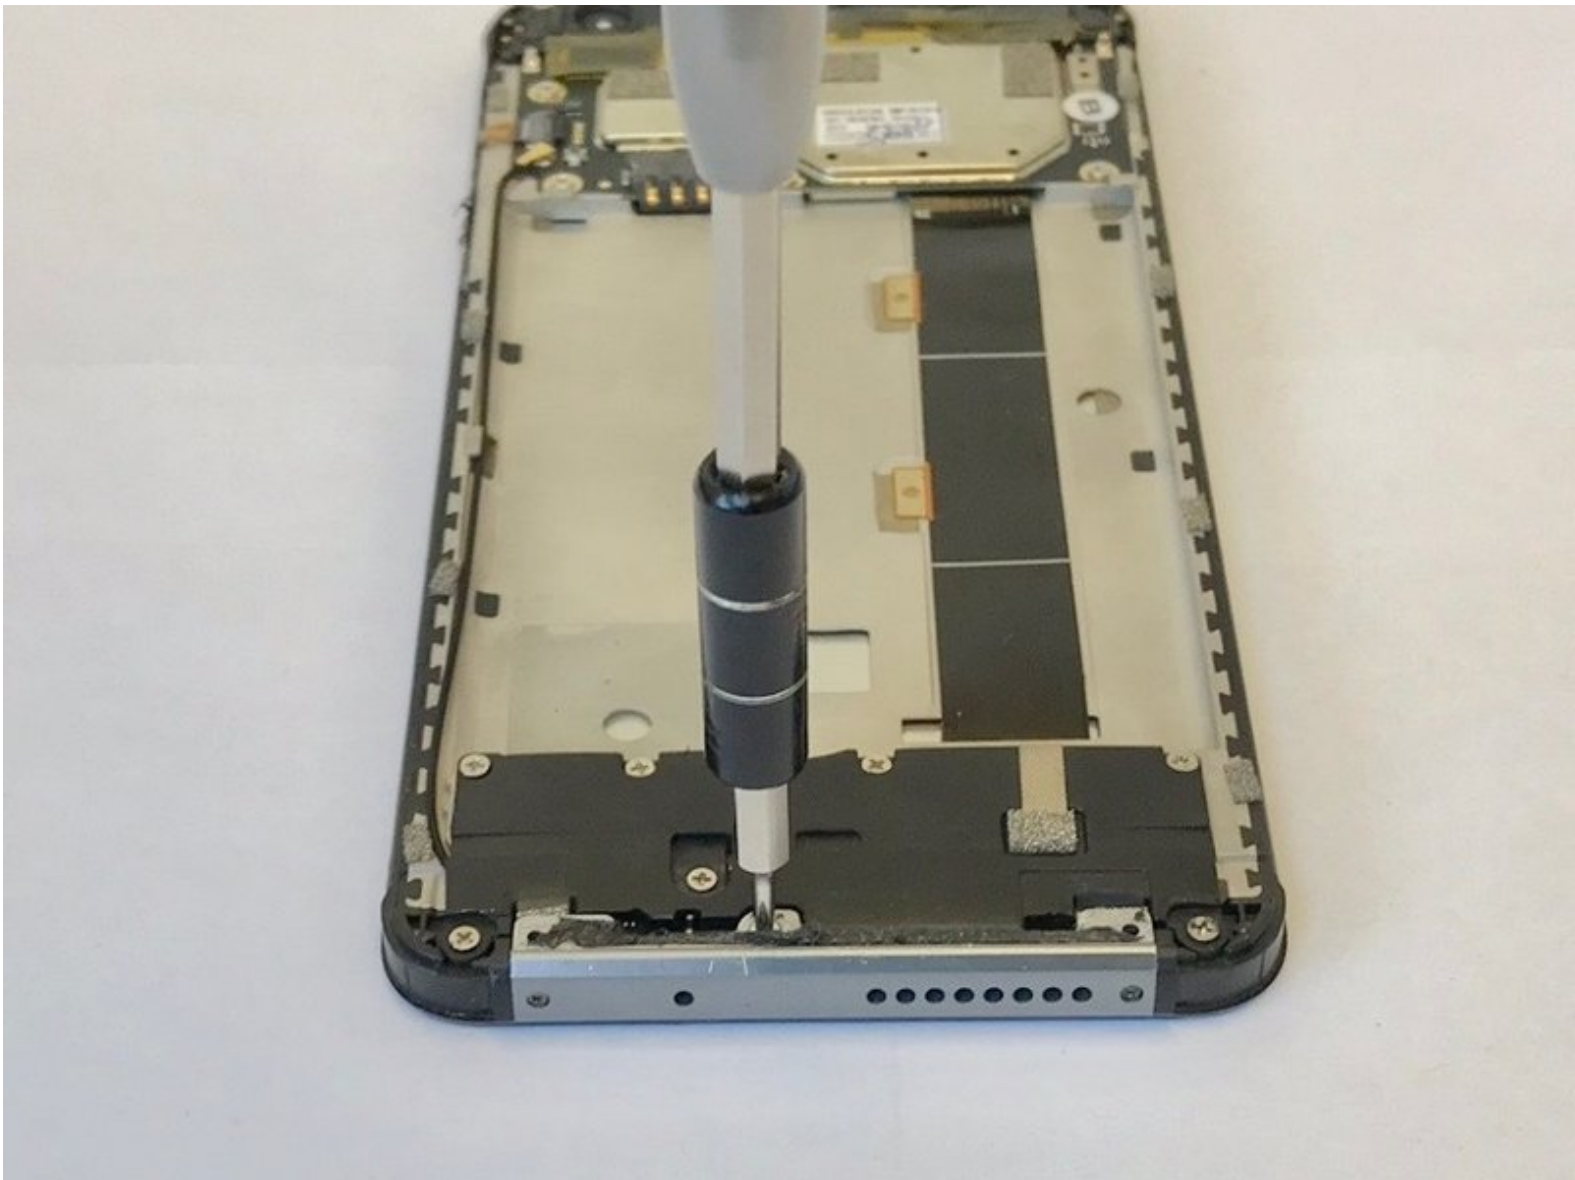

INTRODUCTION

If your phone is not making any noise or the sounds are distorted while on speaker phone or playing videos, the speaker may need to be replaced. You will need to follow the battery replacement guide before you can start this repair guide.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [T2 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Remove the two plastic plates with a plastic opening tool.

Step 2




- Using a Phillips #000 screwdriver, remove the 3mm screws. Be sure to do this for the top and bottom of the phone.

Step 3





- Remove SIM card tray with paperclip or SIM card tray removal tool.
- Push down on the phone beside the camera and up on the backplate with your thumbs to remove the back plate. Remove adhesive if necessary.

Step 4

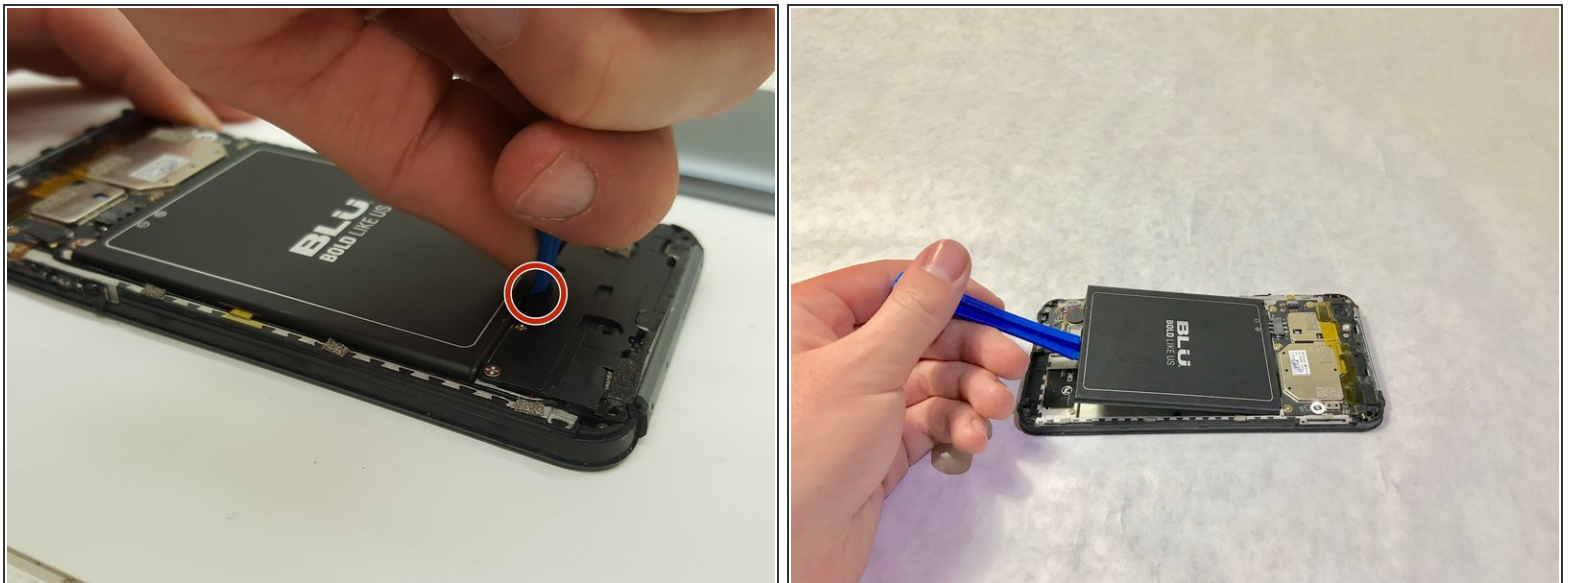



- ⓘ There is a patch of adhesive underneath the battery, which can make it difficult to remove.
- Place the plastic opening tool in the highlighted indent, and push up on the battery to remove it.

Step 5 — Speaker

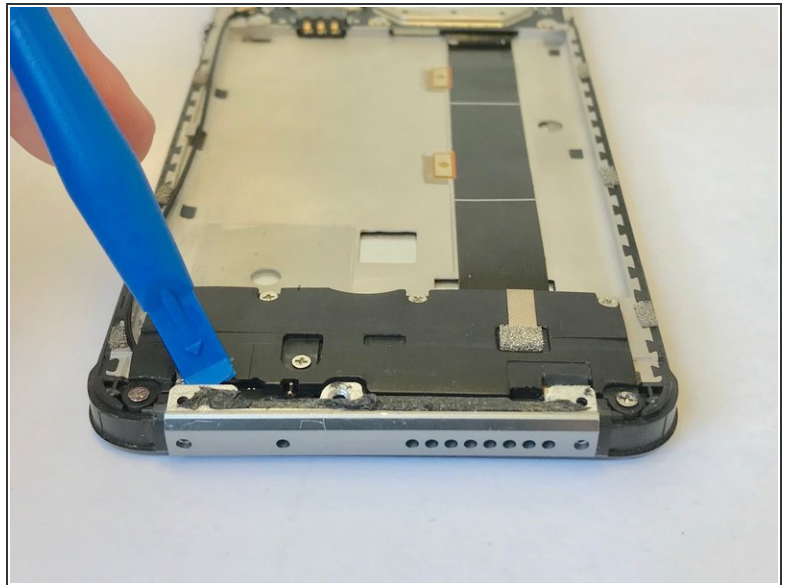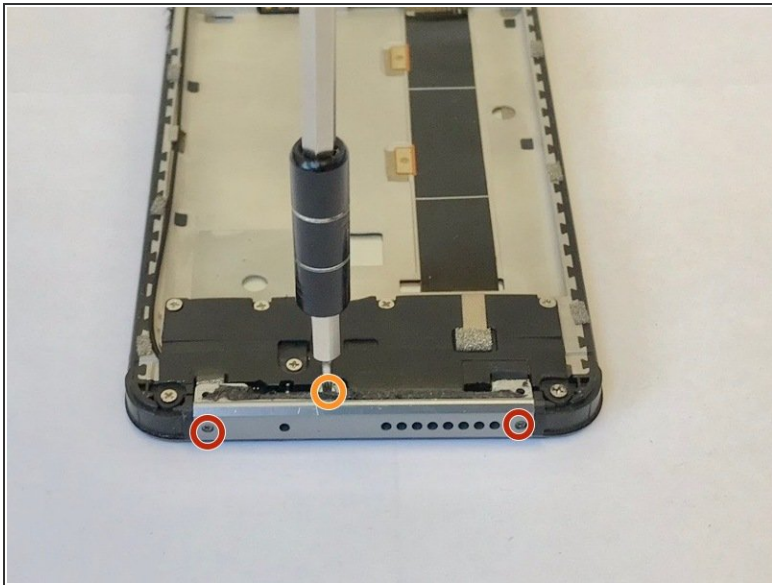

- Remove the exterior cover with a Torx 2 screwdriver, to remove two 3.0mm screws.
- Remove the 4.0mm screw with a Phillips #000 screwdriver.
- Using the blue plastic opening tool, remove the exterior cover.

Step 6

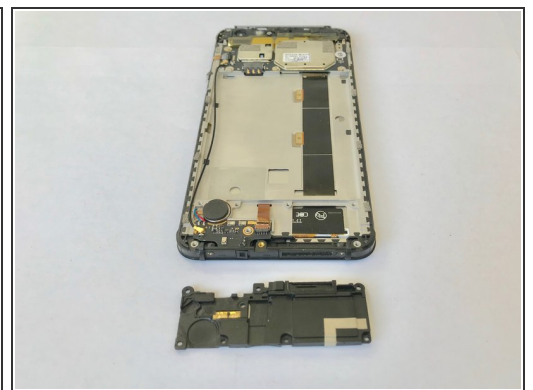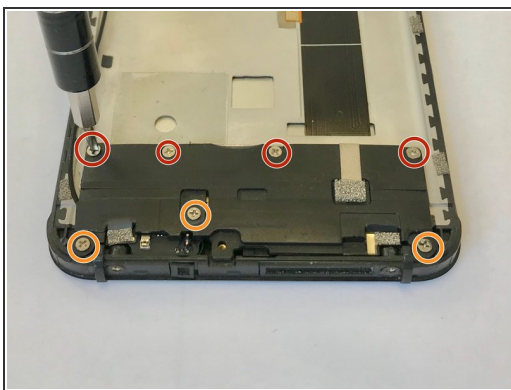

- Use a Phillips #000 screwdriver to remove each of the four 1.5mm screws.
- Use a Phillips #000 screwdriver to remove each of the three 3.0mm screws.
- Use the plastic opening tool to remove the speaker.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-15 04:07:16 AM.