


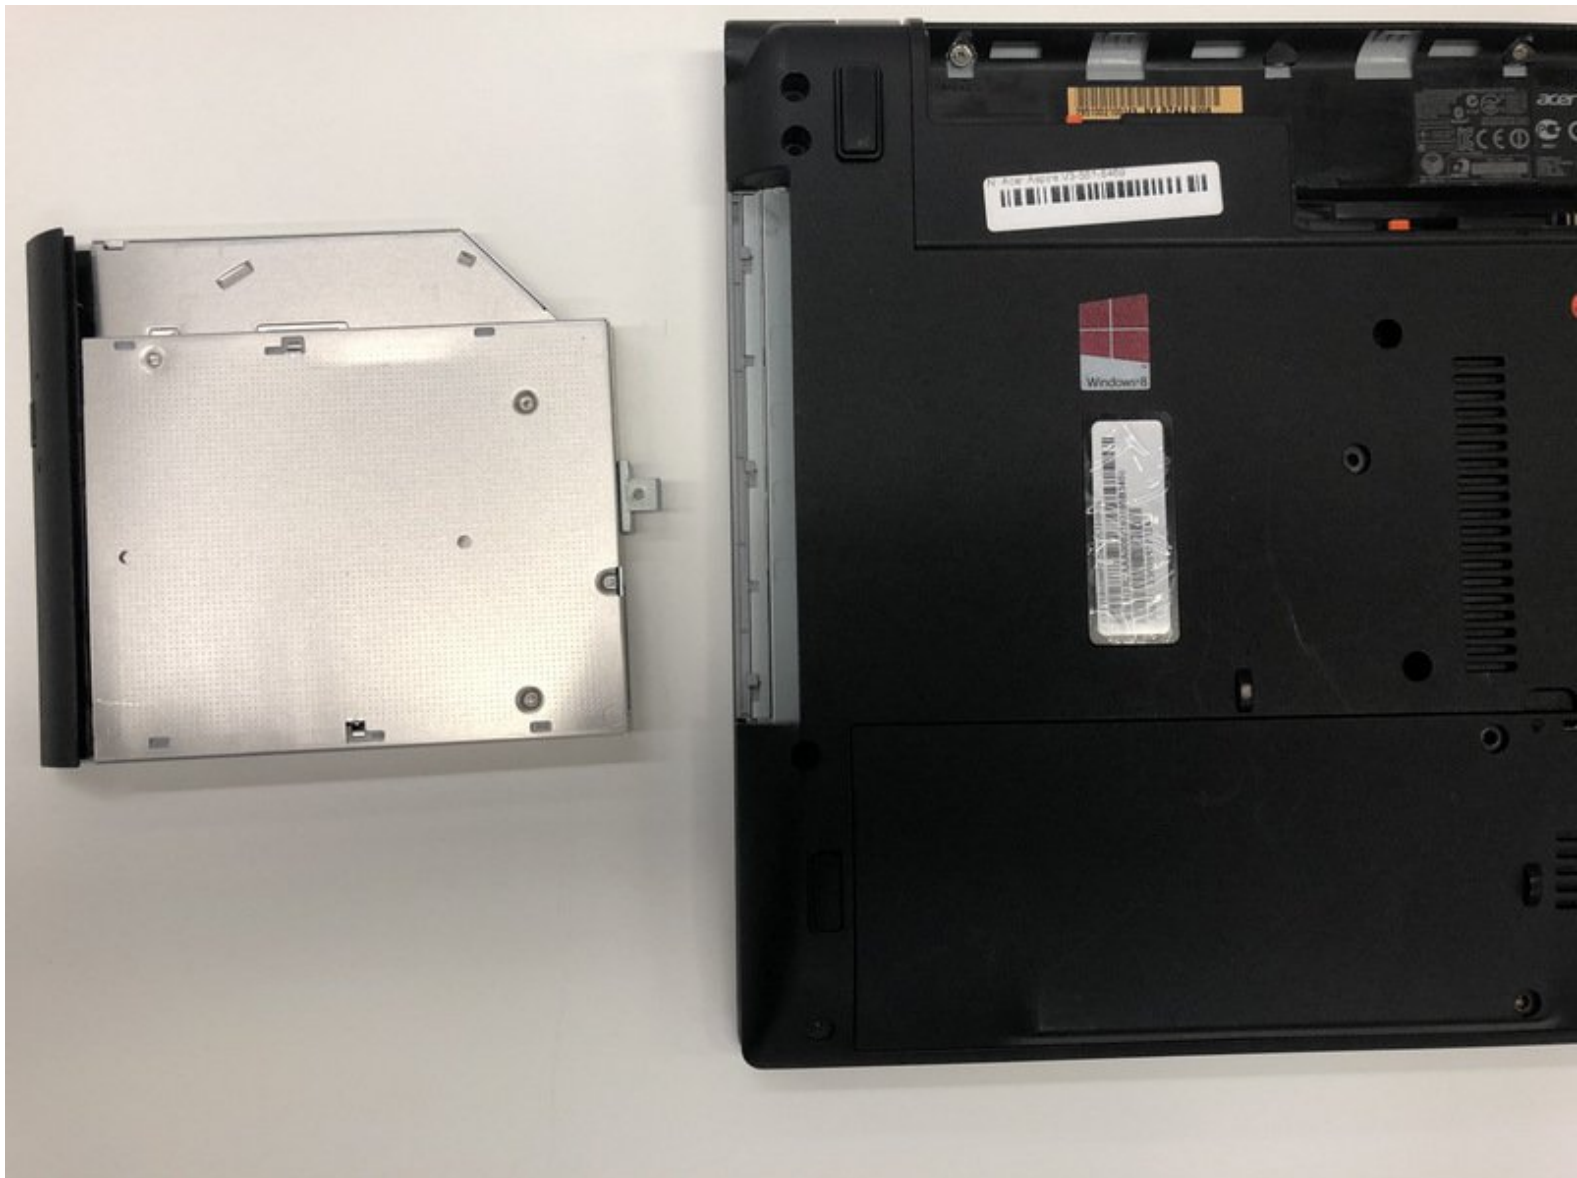

Acer Aspire V3-551-8469 Optical Drive Replacement

Use this guide to replace an Acer Aspire V3-551-8469 optical drive.

Written By: Maritsa Garcia



INTRODUCTION

The optical drive or commonly known as the DVD drive. It will need to be replaced if it is failing to eject or read a CD/DVD. Use this guide to replace broken optical drives on your Acer Aspire V3-551-8469 laptop. No complicated manipulation is required.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Optical Drive



- To release the battery, slide the orange tab to the right with a spudger.
- The battery is now released and can be picked up and set to the side.

Step 2

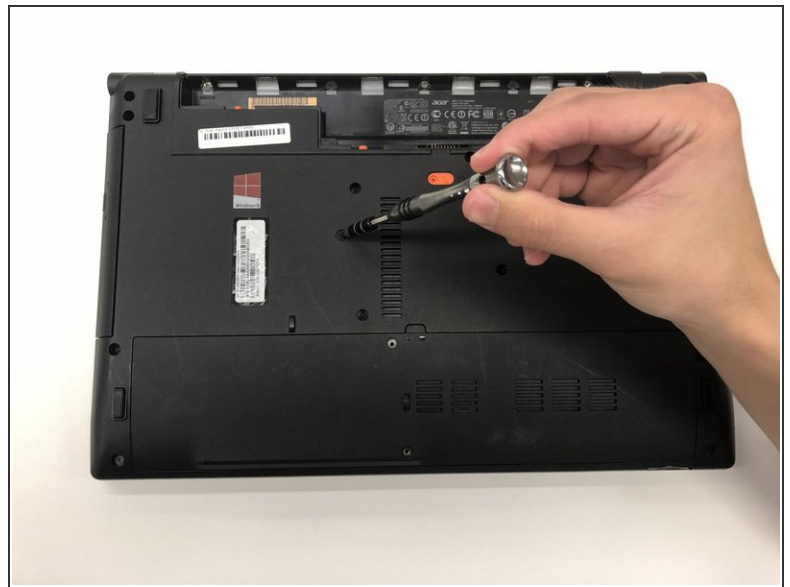

- Using a Phillips #0 screwdriver, remove the 5.3 mm screw from the back panel.

Step 3



- Pull out the optical drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-15 10:12:01 AM.