



Lenovo IdeaPad Y410p Hard Drive Replacement

How to replace the hard drive in a Lenovo IdeaPad Y410P.

Written By: Nick Torres



INTRODUCTION

The Lenovo IdeaPad Y410P uses a standard laptop hard drive, so it is simple to replace. Hard drives are often easily accessed, and this one is no different. This hard drive can be replaced in just 2 simple steps.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Battery




- ⚠ Turn off your laptop before starting.
- Flip the laptop over so the model stickers are facing up.

Step 2

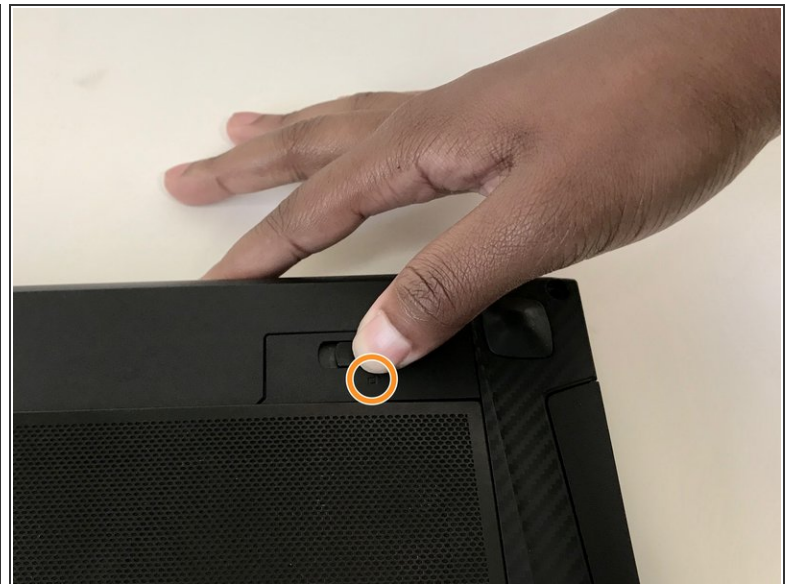

- Slide the left battery lock to the unlock position and release.
- Slide the right battery lock to the unlock position and hold it in place.

Step 3

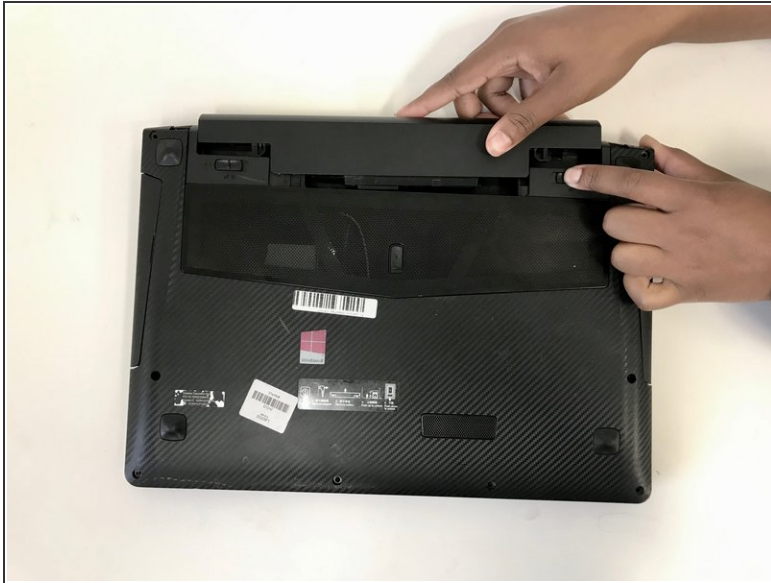


- While holding the right battery lock in the unlock position, slide the battery carefully out of the laptop and set it aside.

Step 4 — Hard Drive



- Using the Phillips #0 screwdriver, remove the eight 8mm screws that fasten the bottom cover.
- Lift bottom cover off using a metal spudger and set it aside.

Step 5

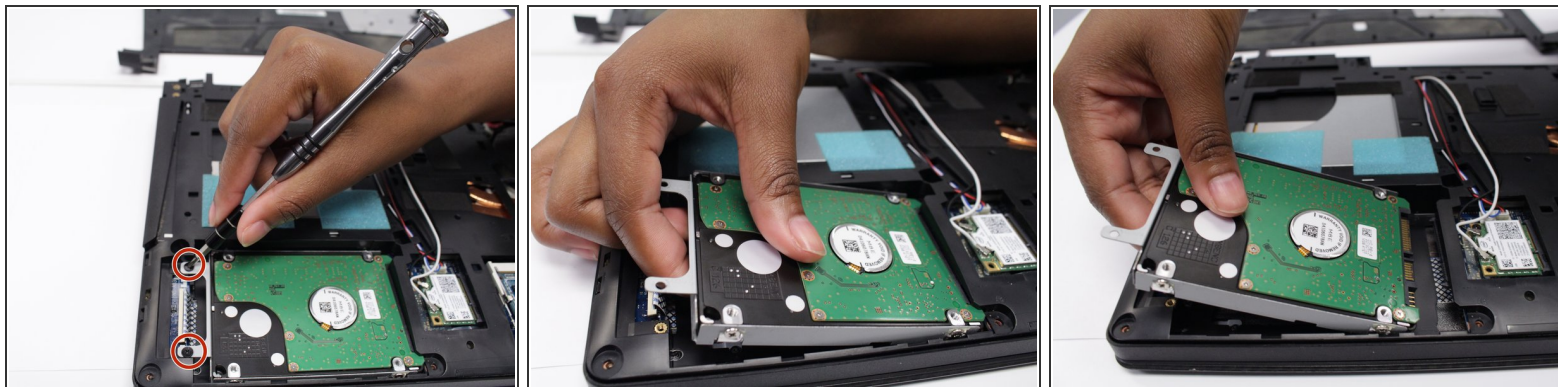

⚠ If you intend to reuse this hard drive, be careful removing it as hard impacts may damage the device.

- Using the Phillips #0 screwdriver, remove the two 3mm screws at the end of the hard drive bracket.
- Slide the hard drive out of its seat.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-21 04:24:49 PM.