


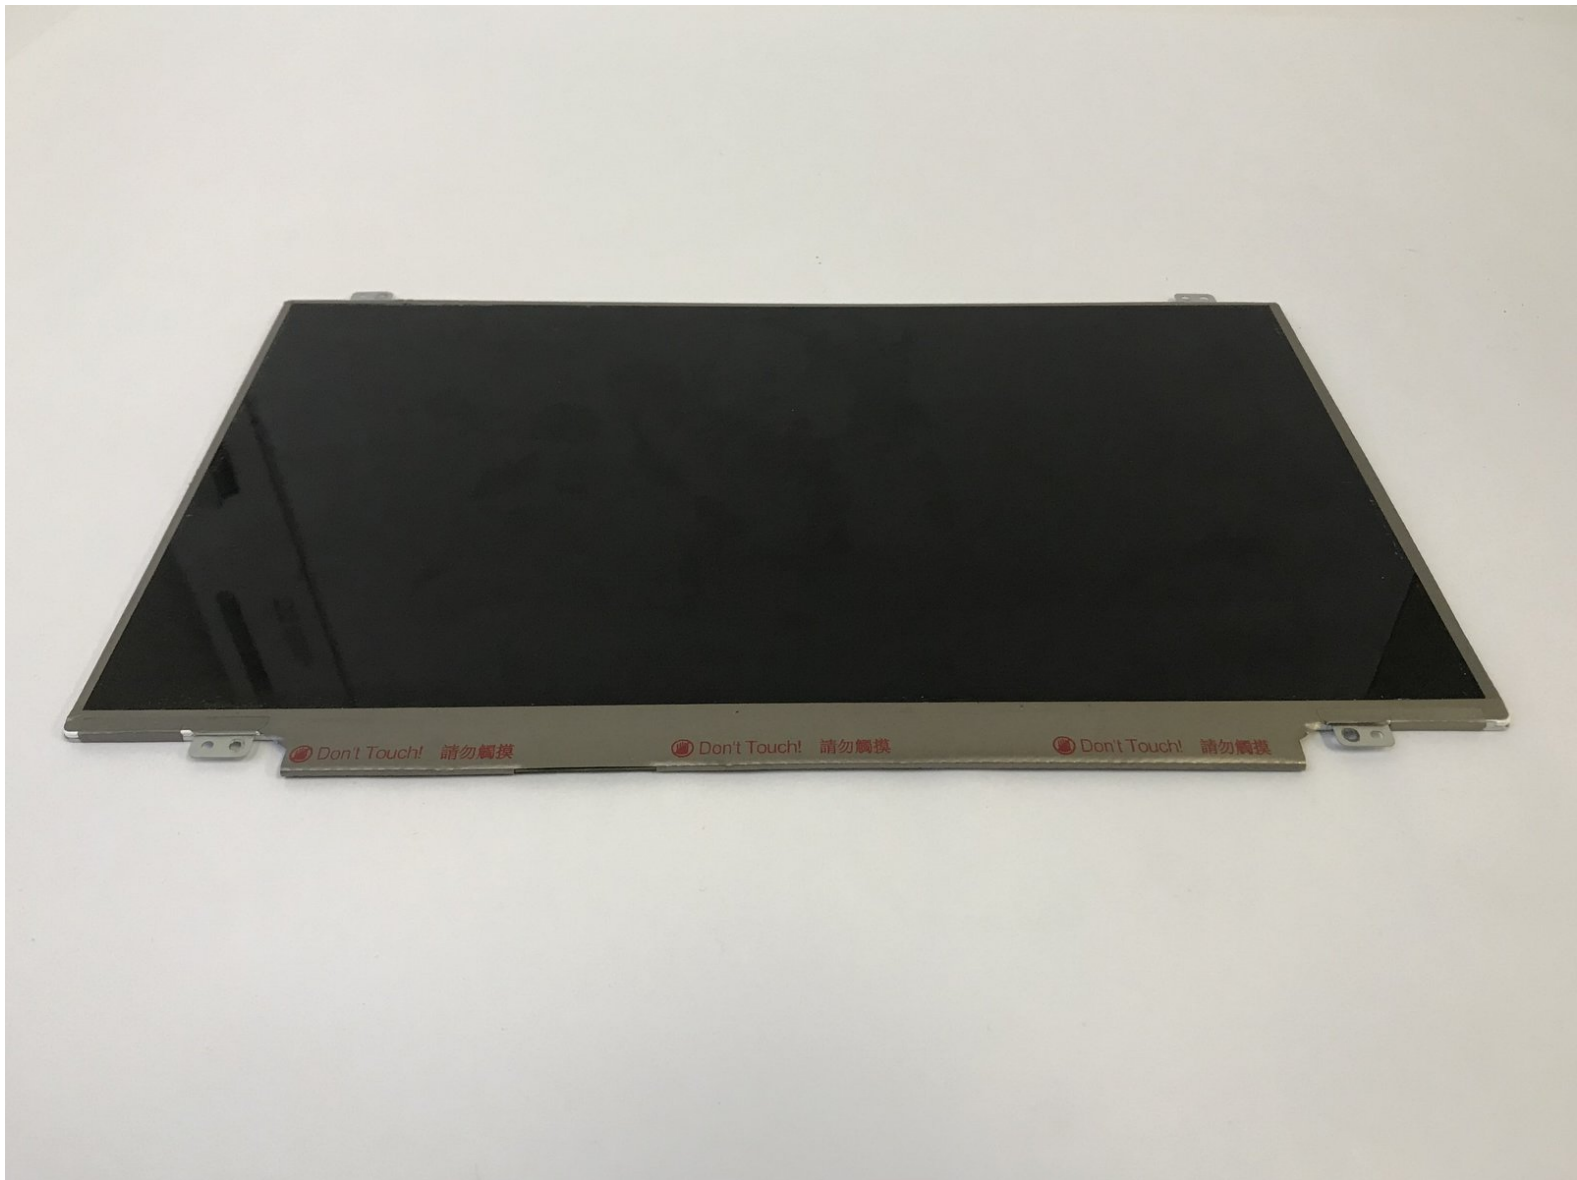

Lenovo IdeaPad Y410p Screen Replacement

This guide explains how to replace the screen of a Lenovo IdeaPad Y410p.

Written By: Nick Torres



INTRODUCTION

When your laptop screen cracks the repairs and replacements can be costly. This guide will show you how to replace the Lenovo IdeaPad Y410p screen while saving hundreds of dollars.

TOOLS:

- [Metal Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Battery



 Turn off your laptop before starting.


- Flip the laptop over so the model stickers are facing up.

Step 2

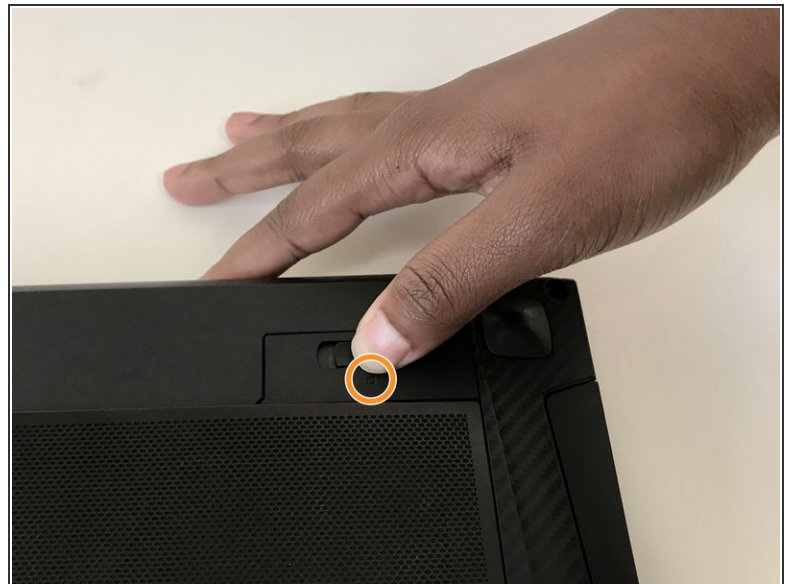


- Slide the left battery lock to the unlock position and release.
- Slide the right battery lock to the unlock position and hold it in place.

Step 3

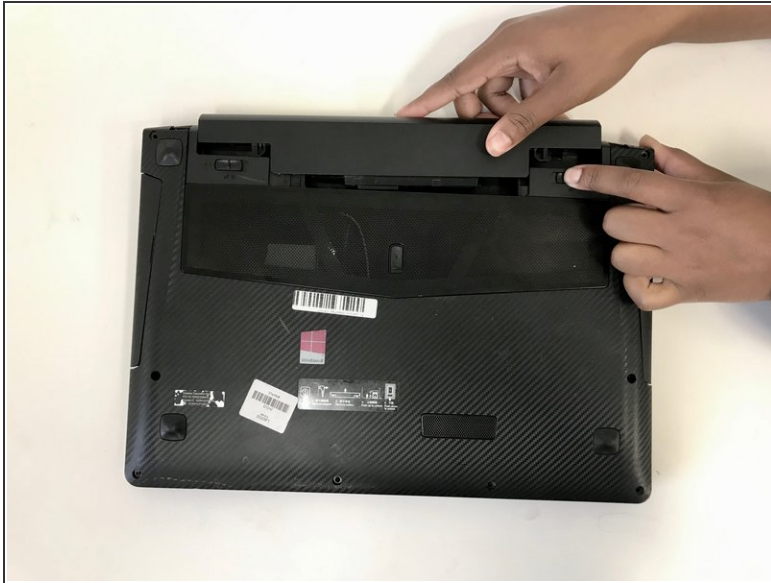


- While holding the right battery lock in the unlock position, slide the battery carefully out of the laptop and set it aside.

Step 4 — Screen

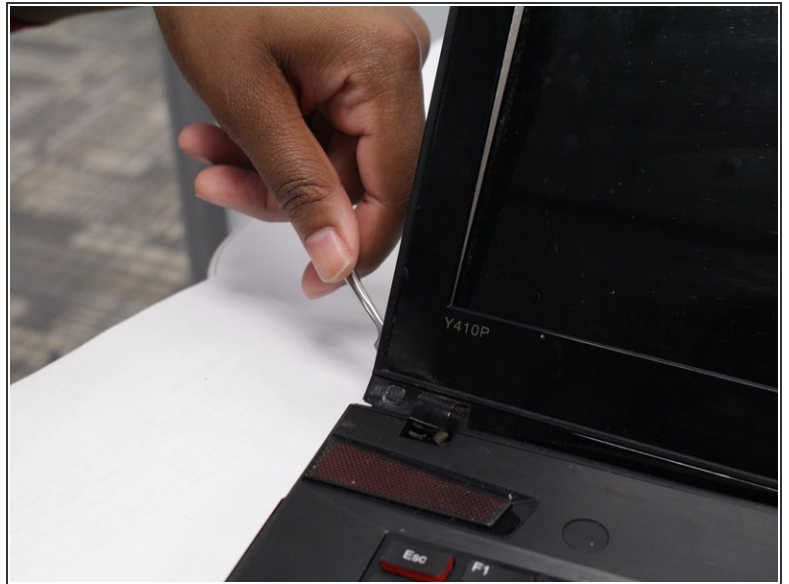


- Using the metal spudger, pry the screen cover off from all sides.
- Carefully lift the screen cover up and outwards.
- Place the screen cover aside.

Step 5

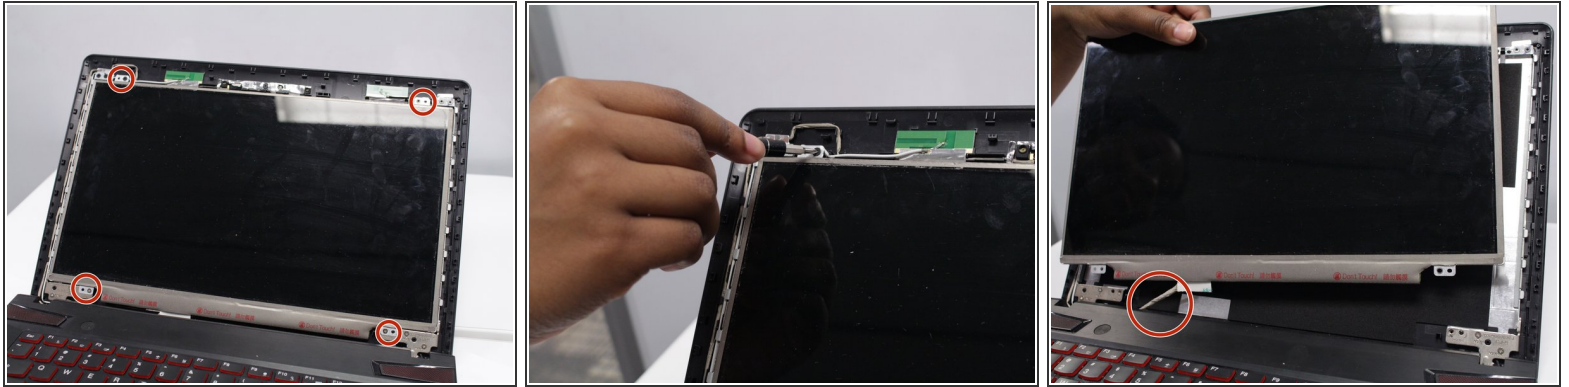

- Using the Phillips #0 screwdriver, remove the four 8mm screws from each corner of the screen.
 - Carefully lift the screen up and place it face down on the keyboard.
- ⚠ A thick cord connects the bottom of the screen to the computer. Do not tug or remove this cord from the computer.

Step 6

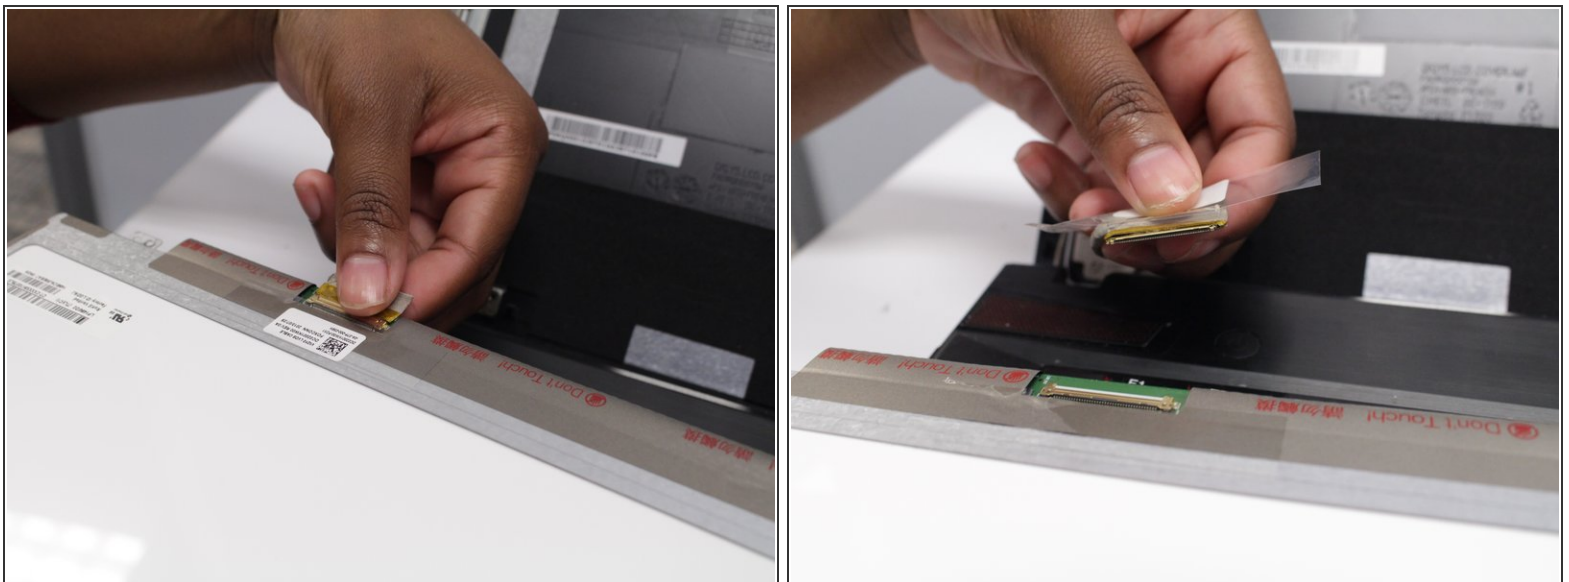

- Remove the adhesive tape from the small rectangular connector at the bottom of the screen.
- Carefully pull the wire connector from the screen connector.
- Remove the screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-18 06:48:58 PM.