


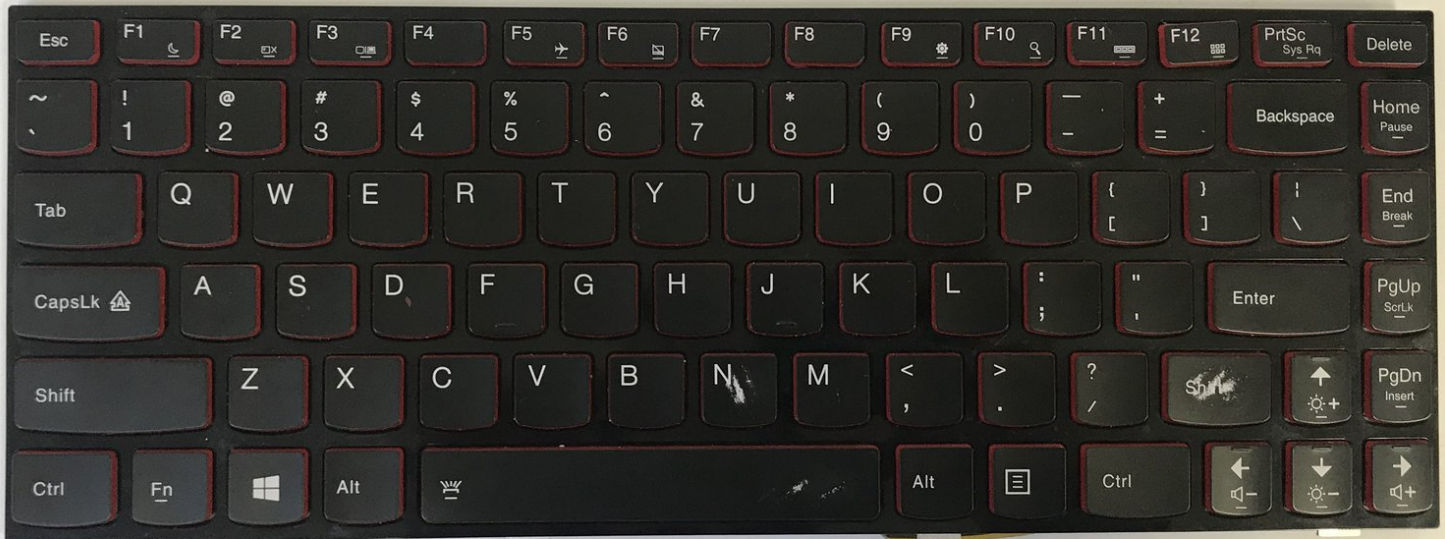

Lenovo IdeaPad Y410p Keyboard Replacement

How to replace the keyboard in a Lenovo IdeaPad Y410p.

Written By: Nick Torres



INTRODUCTION

If the keys are not working, you can use this guide to replace the keyboard.

TOOLS:


- [Metal Spudger](#) (1)
-

Step 1 — Battery




- ⚠ Turn off your laptop before starting.
- Flip the laptop over so the model stickers are facing up.

Step 2

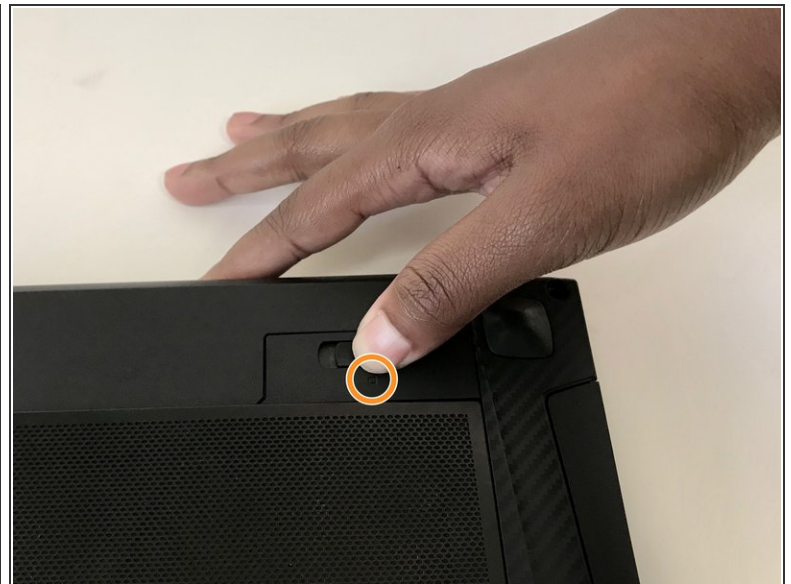



- Slide the left battery lock to the unlock position and release.
- Slide the right battery lock to the unlock position and hold it in place.


Step 3

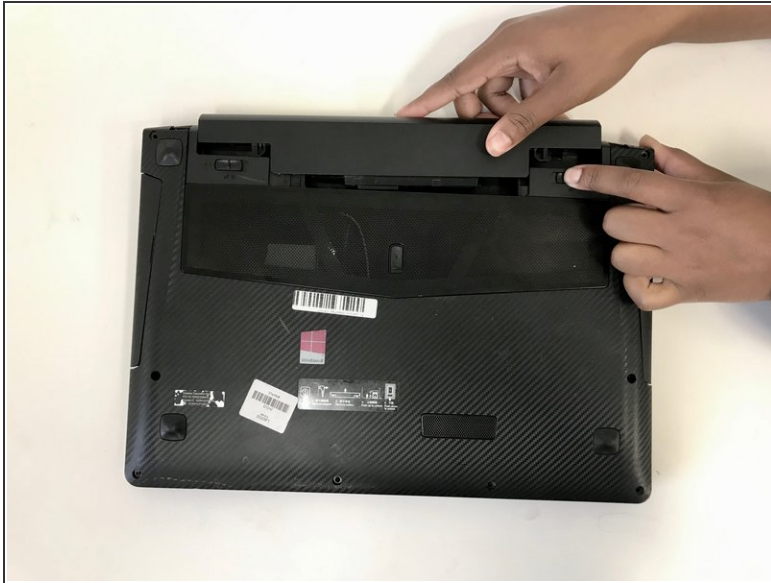

- While holding the right battery lock in the unlock position, slide the battery carefully out of the laptop and set it aside.



Step 4 — Keyboard

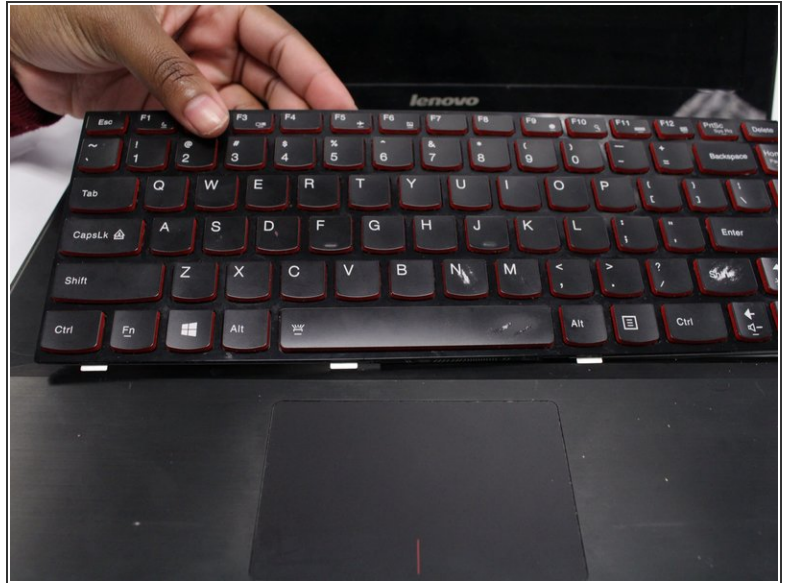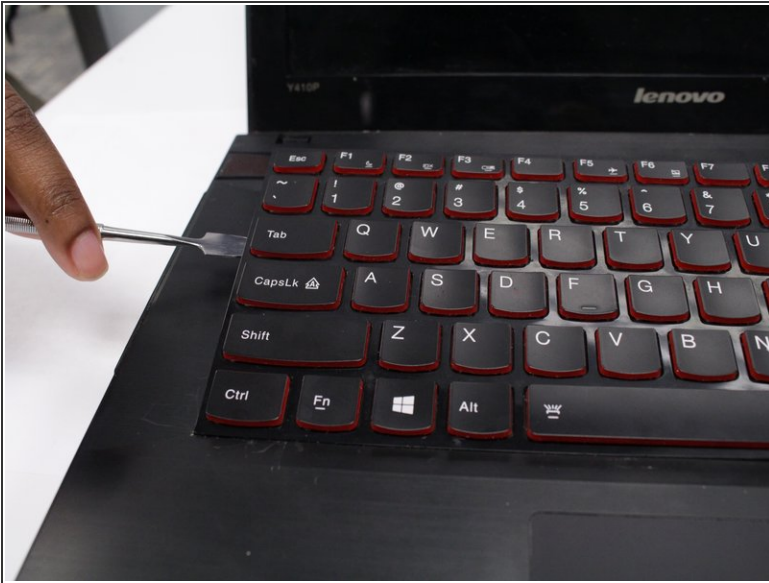


 Power off your laptop.

- Use a metal spudger to loosen the frame of the keyboard by running it under the edges of the keyboard as shown.
- After loosening the keyboard frame, you should be able to gently lift up the keyboard.

Step 5

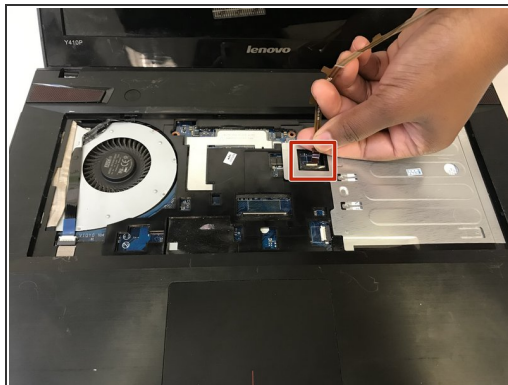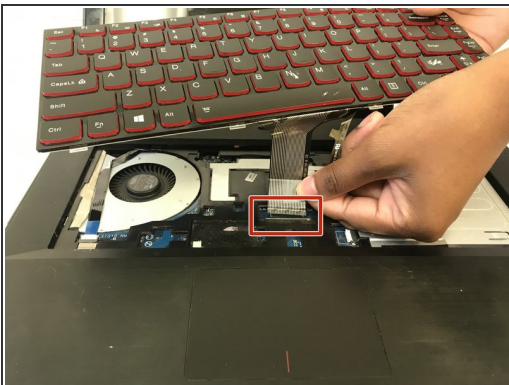

 Be careful when lifting the keyboard so that you do not damage the ribbon cable connector.

- Detach the ribbon cables from the latches shown.

To reassemble your device, follow these instructions in reverse order.