 




LeapFrog LeapPad Ultimate Back Panel Replacement

Steps on how to open up the back of a LeapFrog LeapPad Ultimate.

Written By: Nabil Mustafa

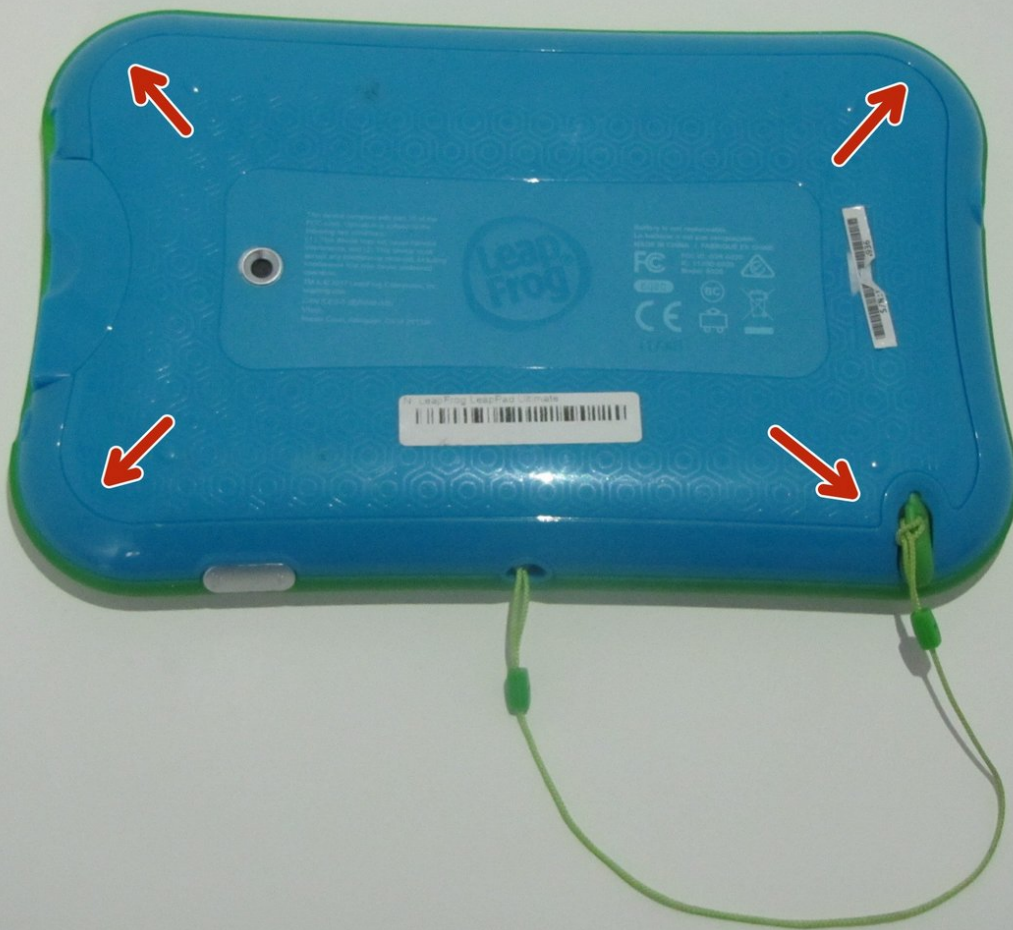

INTRODUCTION

Steps on how to open up the back of a LeapFrog LeapPad Ultimate.

TOOLS:

 
- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel



- Flip over the Pad to its back side to begin the removal of the back panel.
- Begin by removing the blue rim along the edge of the device. It runs along the green silicone lining.
- ⚠ This is very difficult to remove, so do be patient. To help remove the seal, both a metal spudger and plastic opening tool may be used.
- ⓘ Remove the pen from its place before starting to avoid tangling.

Step 2

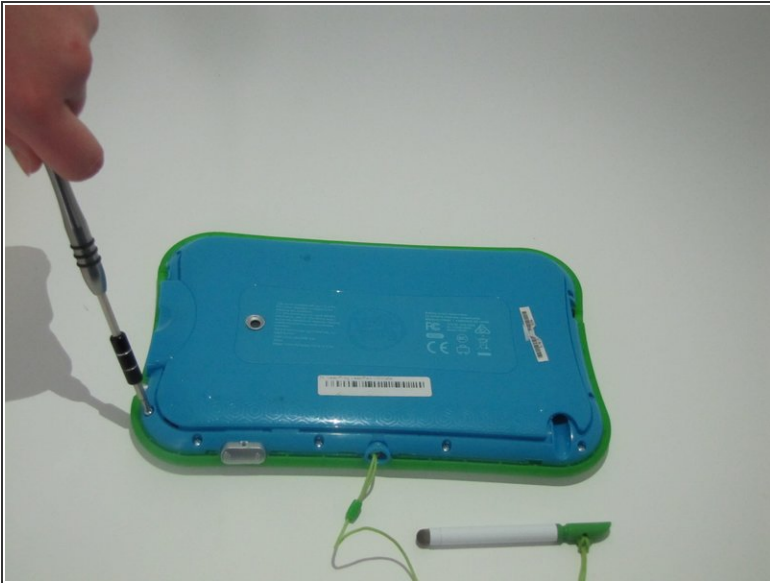

- Once the blue rim is removed, the 12 screws will be visible.
- Use the Phillips #1 screwdriver to unscrew all 12 screws.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-19 01:02:27 AM.