



Dell Inspiron 17 5765 Hard-Drive Replacement

Written By: darrius

INTRODUCTION

How to remove and replace the hard-drive

TOOLS:

- [Essential Electronics Toolkit](#) (1)
-

Step 1 — Disconnecting the cable



- Lift the latch and disconnect the hard-drive cable from the system board.

Step 2 — Removing the screws



- Remove the screws that secure the hard-drive assembly to the palm rest and keyboard assembly.

Step 3 — Lifting the hard-drive assembly



- Lift the hard-drive assembly from the palm rest and keyboard assembly.

Step 4 — Removing screws



- Remove the screws that secure the hard-drive bracket to the hard drive.

Step 5 — Lifting the hard-drive



- Lift the hard drive from the hard-drive bracket.

Step 6 — Disconnecting the interposer



- Disconnect the interposer from the hard drive.

Step 7 — Connecting the interposer



- Connect the interposer to the hard drive.

Step 8 — Aligning the screws



- Align the screw holes on the hard-drive bracket with the screw holes on the hard drive.

Step 9 — Secure the screws



- Replace the screws that secure the hard-drive bracket to the hard drive.

Step 10 — Placing the hard-drive assembly



- Place the hard-drive assembly on the palm rest and keyboard assembly and align the screw holes on the hard-drive assembly with the screw holes on the palm rest and keyboard assembly

Step 11 — Secure the screws



- Replace the screws that secure the hard-drive assembly to the palm rest and keyboard assembly.

Step 12 — Sliding the cable to connector



- Slide the hard-drive cable into the connector on the system board and close the latch to secure the cable.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-06-08 12:30:54 AM.