



# Dell Inspiron 17 5765 Hard-Drive Replacement

Written By: darrius

## INTRODUCTION

How to remove and replace the hard-drive

## Step 1 — Disconnecting the cable



- Lift the latch and disconnect the hard-drive cable from the system board.

## Step 2 — Removing the screws



- Remove the screws that secure the hard-drive assembly to the palm rest and keyboard assembly.

### Step 3 — Lifting the hard-drive assembly



- Lift the hard-drive assembly from the palm rest and keyboard assembly.

### Step 4 — Removing screws



- Remove the screws that secure the hard-drive bracket to the hard drive.

## Step 5 — Lifting the hard-drive



- Lift the hard drive from the hard-drive bracket.

## Step 6 — Disconnecting the interposer



- Disconnect the interposer from the hard drive.

## Step 7 — Connecting the interposer



- Connect the interposer to the hard drive.

## Step 8 — Aligning the screws



- Align the screw holes on the hard-drive bracket with the screw holes on the hard drive.

## Step 9 — Secure the screws



- Replace the screws that secure the hard-drive bracket to the hard drive.

## Step 10 — Placing the hard-drive assembly



- Place the hard-drive assembly on the palm rest and keyboard assembly and align the screw holes on the hard-drive assembly with the screw holes on the palm rest and keyboard assembly

## Step 11 — Secure the screws



- Replace the screws that secure the hard-drive assembly to the palm rest and keyboard assembly.

## Step 12 — Sliding the cable to connector



- Slide the hard-drive cable into the connector on the system board and close the latch to secure the cable.

---

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-14 03:29:15 PM.