



HP Notebook 15-ba018ds Battery Replacement

How to remove and replace a battery in an HP Notebook 15-ba018ds.

Written By: Gabryella Reynoso



INTRODUCTION

This guide will give a step by step instruction on how to remove and replace a battery in an HP Notebook 15-ba018ds. Use this guide if you're having problems with a faulty battery.



PARTS:

- [HP Notebook 15-ba018ds Battery](#) (1)
-

Step 1 — Battery



⚠ Before beginning, make sure the laptop is completely turned off by pressing the off button and waiting for the screen to turn black.

- Flip the laptop over so the battery is exposed which will be next to the hinges on the top left and right.

Step 2



- Place your thumbs on the slide locks that are next to the hinges and simultaneously push them toward each other to unlock the battery.
- While still holding onto the slide locks, push the battery away from the laptop with your index fingers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-15 02:23:50 AM.