




# Lenovo IdeaPad U410 Battery Replacement

Using this guide you will be able to successfully remove and your Lenovo IdeaPad U410 battery.

Written By: Alysia McAfee

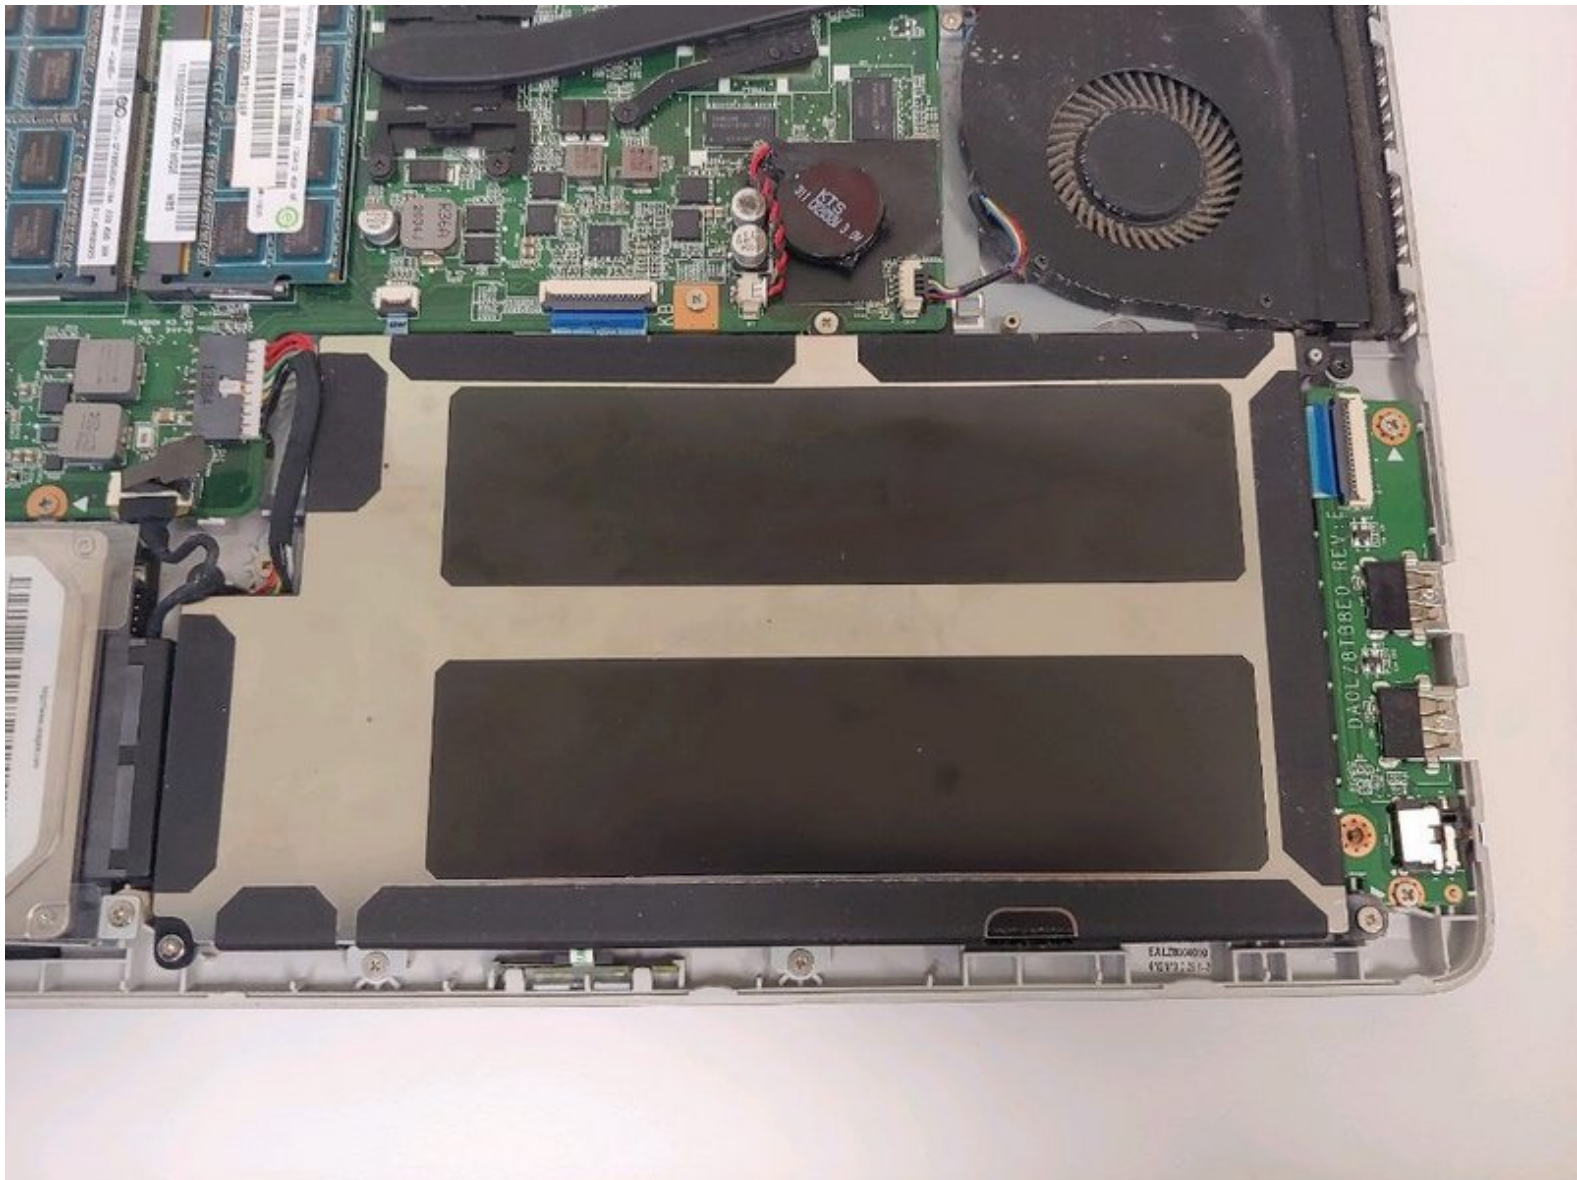

 **TOOLS:**

- [Metal Spudger](#) (1)
- [Phillips #1 Screwdriver](#) (1)

 **PARTS:**


- [Lenovo IdeaPad U410 battery](#) (1)
-

## Step 1 — Bottom Cover




- Using the metal spudger, remove all the rubber squares on the bottom of the laptop.

## Step 2

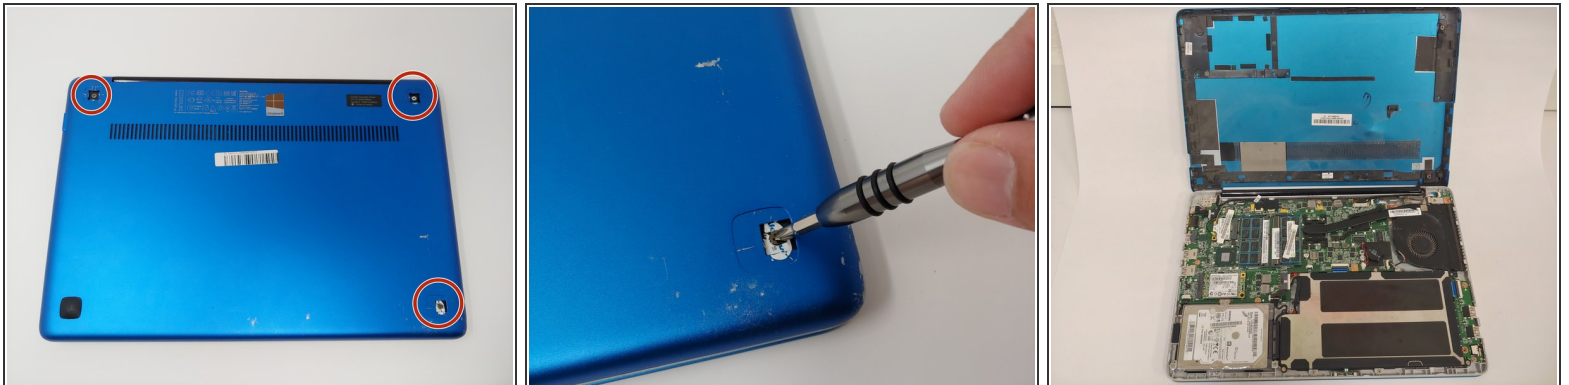


- Remove the three 6 mm Phillips #1 screws holding the panel on the laptop.
- Pry the panel from the laptop using your hands or the metal spudger if necessary.

## Step 3 — Battery

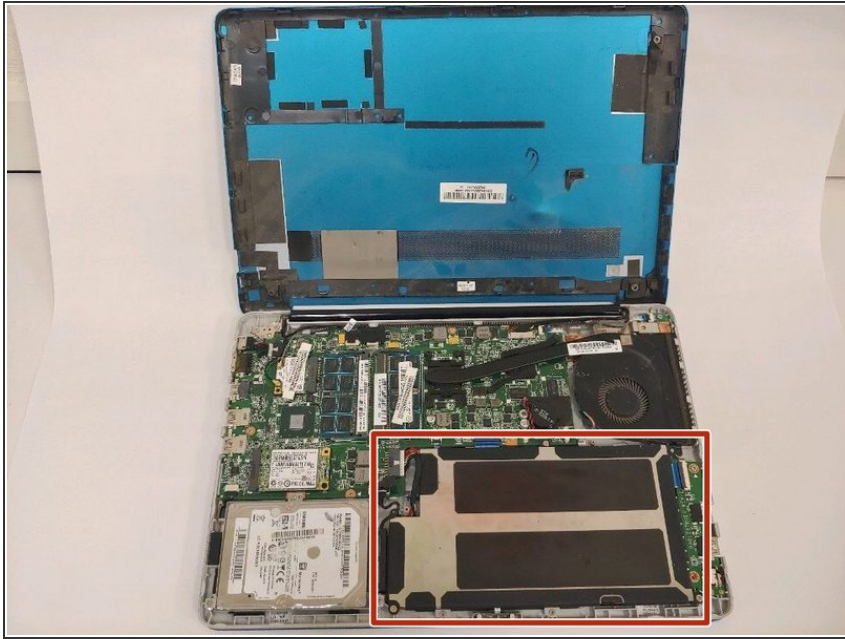


- ⚠ Make sure your computer is turned off.
- Lift the back panel away from you.
- Locate the battery in the bottom right corner.

## Step 4

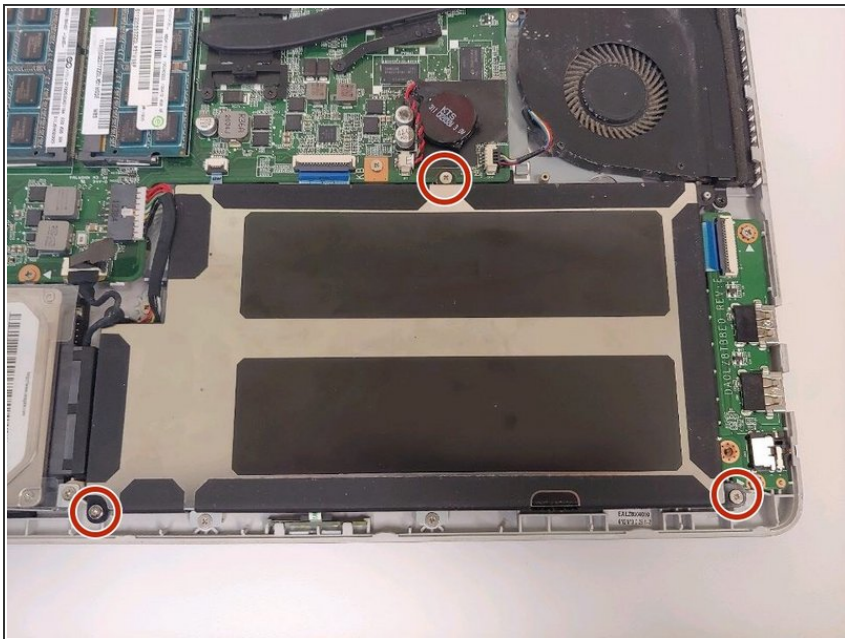

- Remove the three 3mm screws located on the perimeter of the battery using the Phillips #1 screwdriver.

## Step 5

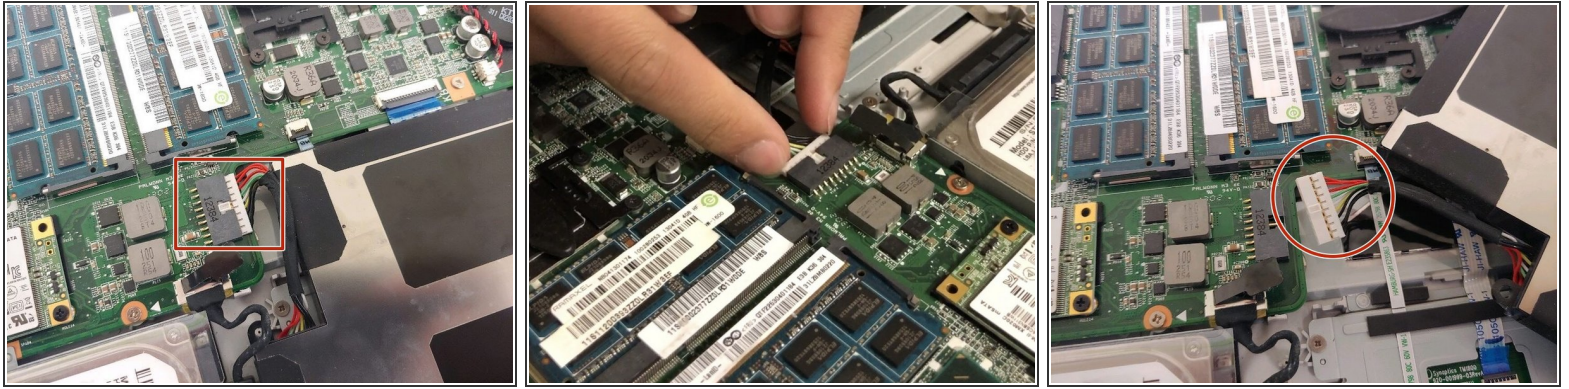

- Locate the small rectangle shaped connector to the left of your battery.
- Use your fingers to gently detach the white connector.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-15 07:23:50 AM.