




# Harman Kardon Invoke Microphone on/off Button Replacement

If Cortana does not respond when spoken, your microphone button may not be functional and in need of replacement.

Written By: Angel A. Grageda

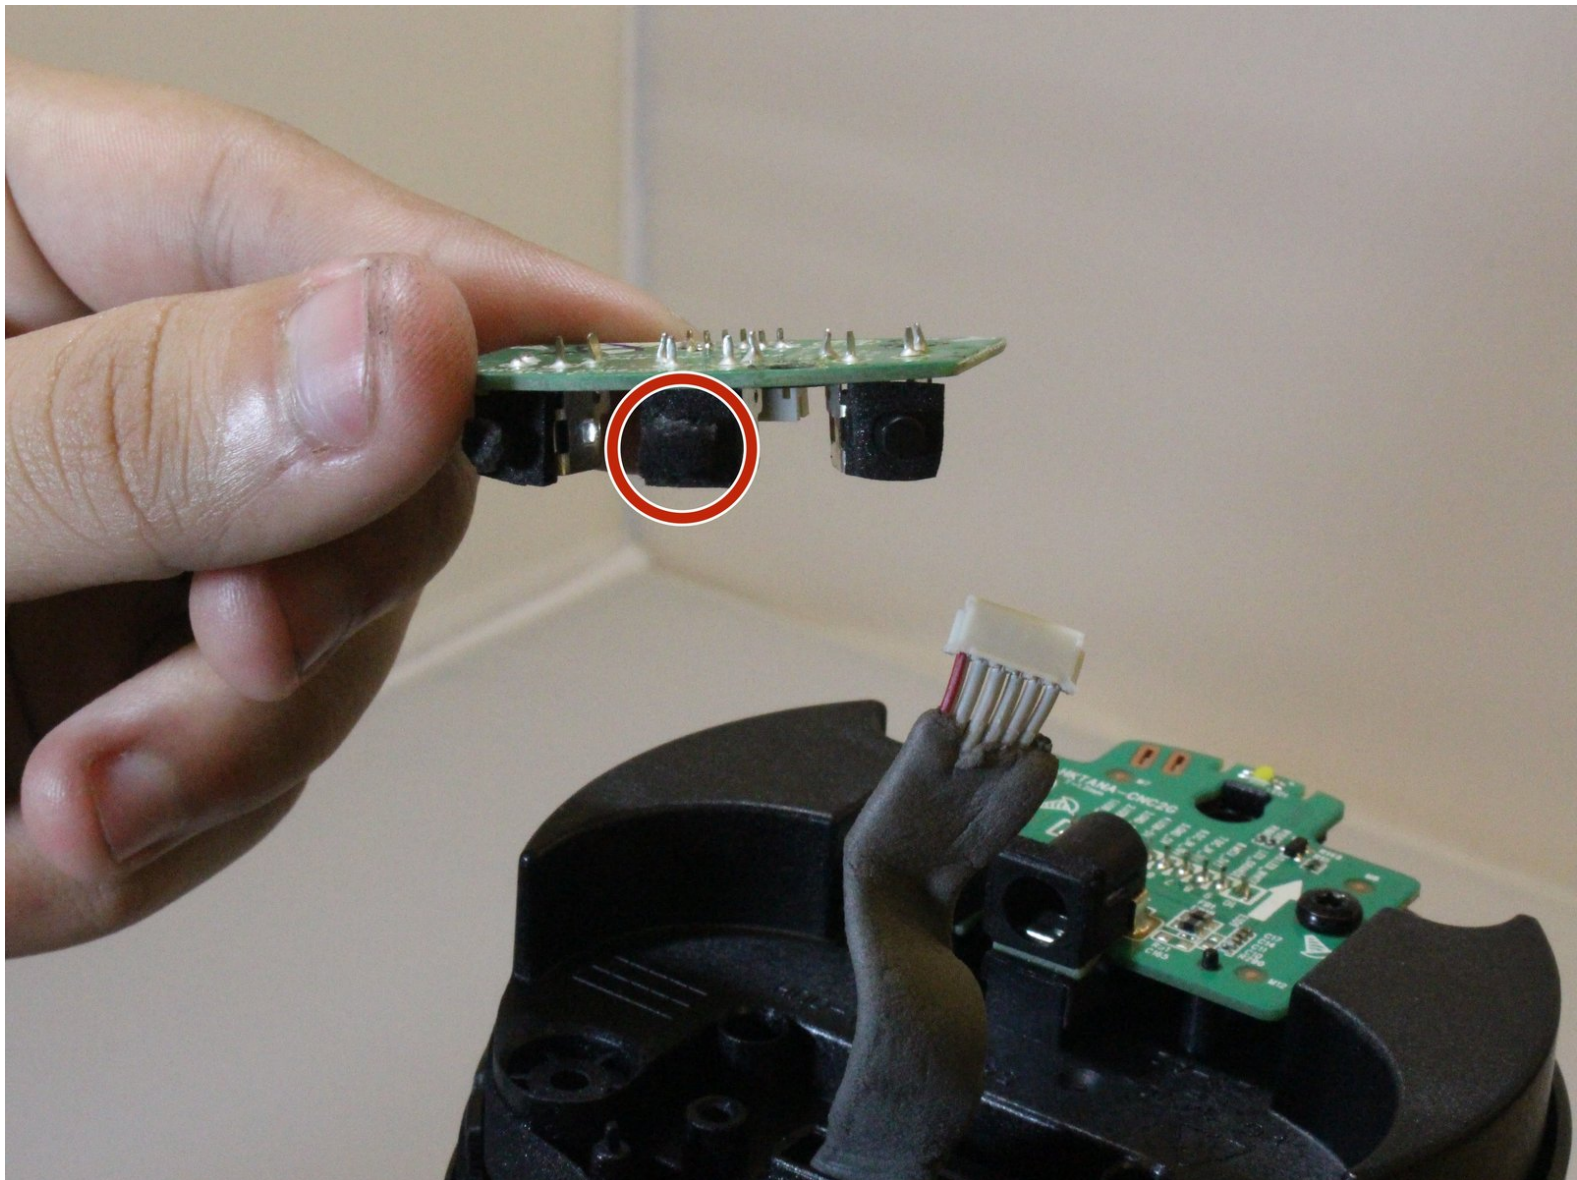

---

## INTRODUCTION

If Cortana does not respond when spoken to, your microphone button may not be functional and in need of replacement. All you need for this replacement is a Torx #10 screw driver and a metal spudger tool.

---

### TOOLS:

- [T10 Torx Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — Remove the base



- Use a metal spudger to remove the rubber bottom.

## Step 2 — Remove the base screws



- Use a #10 Torx screwdriver to remove the four 14 mm screws.





### Step 3 — Remove the base





- Firmly grip the bottom and wiggle upwards to remove the base.

### Step 4 — Unscrew the board

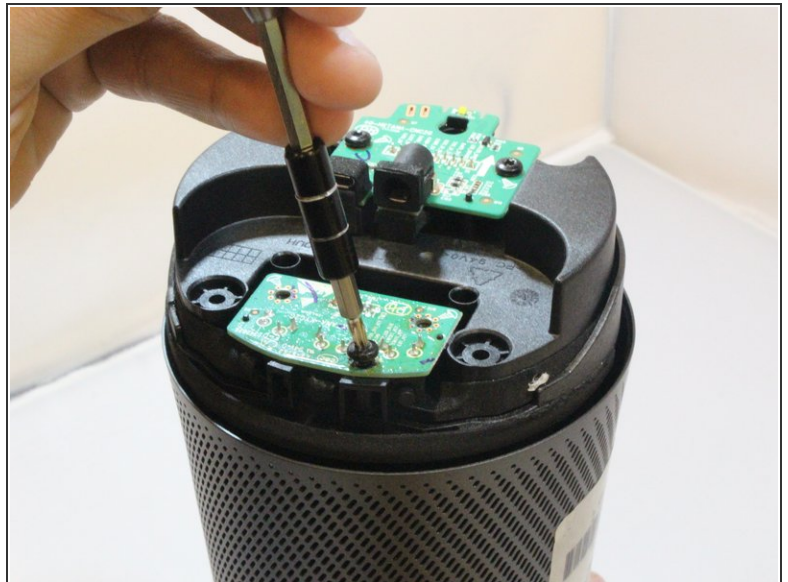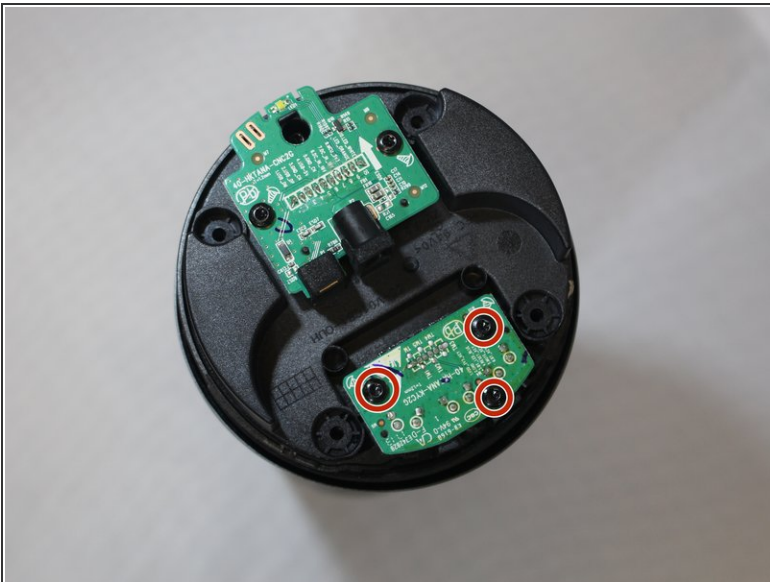

- Use a #10 Torx screwdriver to remove three 10 mm screws from board attached to microphone button.

## Step 5 — Remove the board

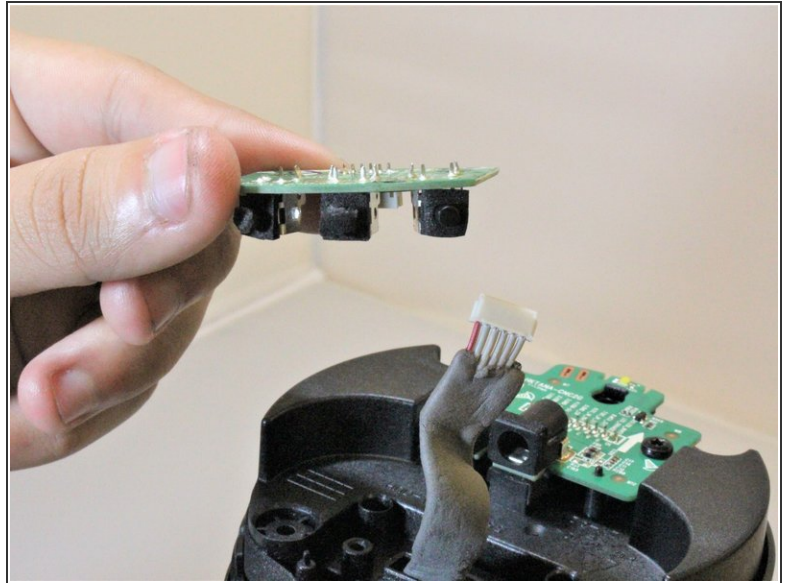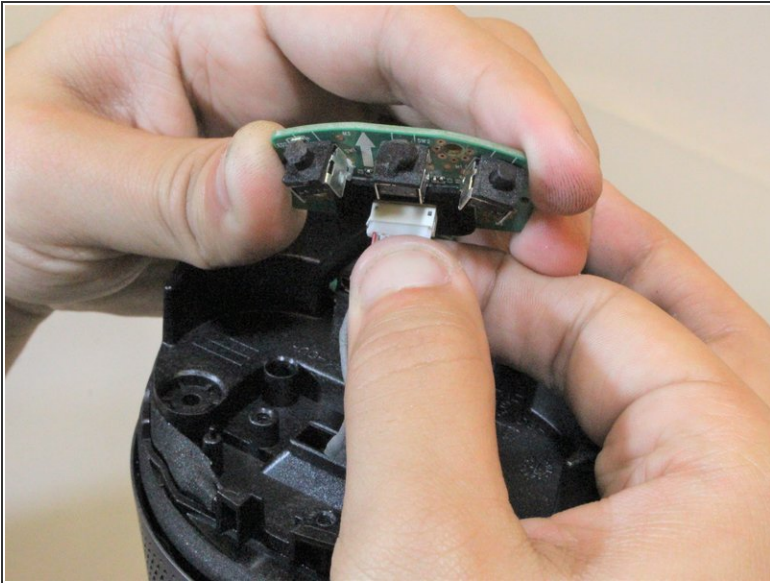

- Pull the cable lightly to disconnect button board from device.
- ⓘ For replacement of microphone button, you will have to replace whole board that the buttons are attached to.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-22 10:09:58 AM.