



HP 15-f162dx RAM Replacement

Follow these guidelines to replace your RAM easily as illustrated.

Written By: Abdulrahman Bogshan



TOOLS:

- [Essential Electronics Toolkit \(1\)](#)
-

Step 1 — RAM




- Use phillips screwdriver flathead 2.5 mm to open the cover.

Step 2






- Use the Metal spudger set to gently open the front cover

Step 3

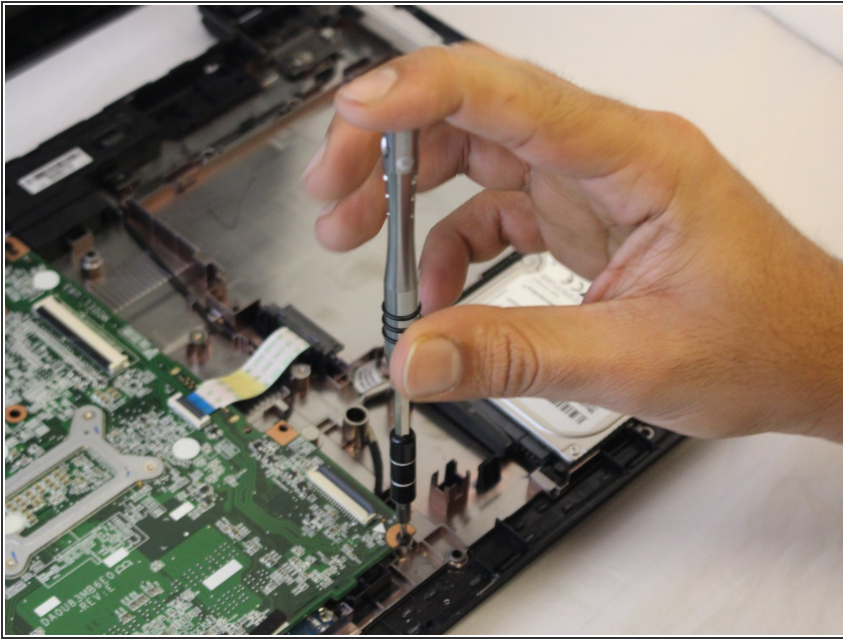


- Use phillips screwdriver JIS J00 to open the screws holding the motherboard.

Step 4

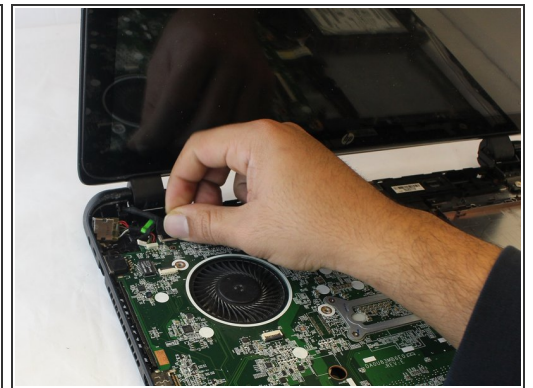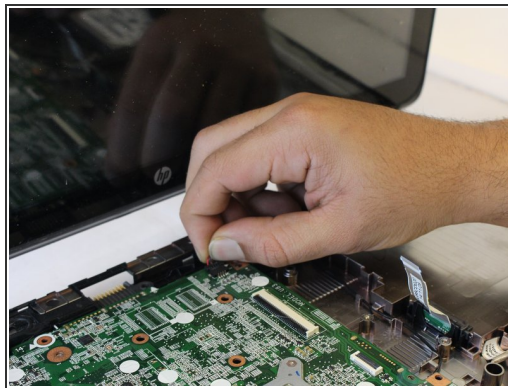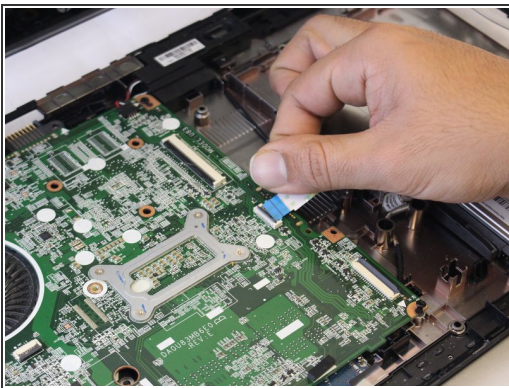

- Pull out the wires connected to the motherboard, so that it is removable. Then, take off the motherboard.

Step 5

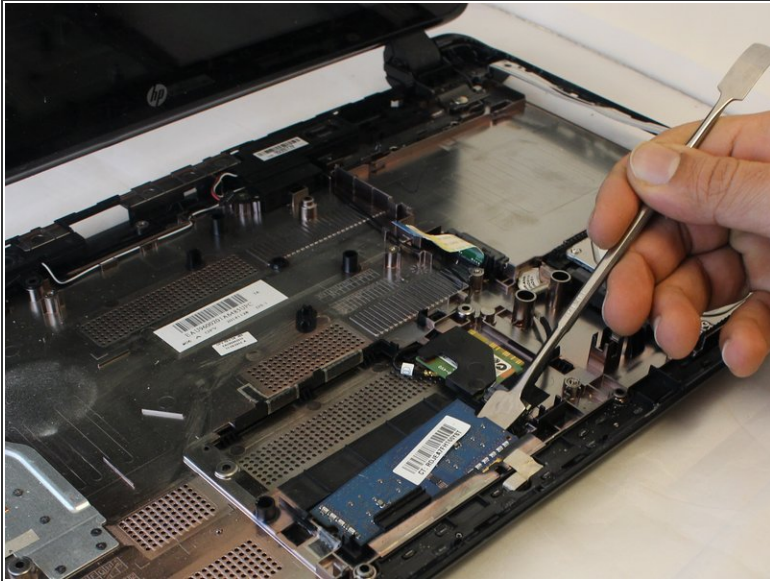

- Use the spudger set to gently take out the RAM and then replace it.
- Make sure to replace the RAM from the other side, underneath the laptop.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-20 10:42:55 AM.