



Kenmore 78423 Dustbin fiber collector Replacement

This guide will help you find and replace the dustbin fiber collector.

Written By: Christopher Bradley



INTRODUCTION

Learn how to find and remove the dustbin fiber collector from your Kenmore 78423.

Step 1 — Dust Bin



- Grab the dustbin handle, press and hold the button at the top of the handle.
- Pull the dustbin up and away from the main body.

Step 2



- Press the button located beneath the circular opening on the dust bin; this will open the bottom of the dustbin.
- Properly dispose any contents of the dust bin into a wastebasket.

Step 3 — Dustbin fiber collector



- Grab the fiber collector using the finger holes on both sides of the base.
- ⓘ The fiber collector is the black basket with the rounded base
- Turn the base a quarter-turn clockwise and pull it away from the dustbin
- Remove the fiber and hair that may be stuck inside the fiber collector

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-12-20 06:54:53 PM.