



Kenmore 78423 Dust Bin Replacement

This guide will show you how to remove and replace your dustbin in your Kenmore 78423.

Written By: Christopher Bradley



INTRODUCTION

Is your vacuum not collecting dust and dirt? Consider using this guide to replace the dust bin of your device.

Step 1 — Dust Bin



- Grab the dustbin handle, press and hold the button at the top of the handle.
- Pull the dustbin up and away from the main body.

Step 2



- Press the button located beneath the circular opening on the dust bin; this will open the bottom of the dustbin.
- Properly dispose any contents of the dust bin into a wastebasket.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 09:41:03 PM.