



Dell Latitude D430 Keyboard Replacement

Replace the keyboard of the Dell Latitude D430,

Written By: Jacob Pham



INTRODUCTION

The keyboard is an essential part to a laptop. Without it, all of the functions of the laptop will not be accessible. If the keyboard stops working, this guide will help you replace it.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Keyboard




- Lay the laptop flat with the screen facing upward. This will allow you to have the most room while performing the keyboard replacement.


Step 2



- Identify the plastic cover located directly below the screen.
- Carefully remove the plastic cover by lifting both ends of the cover.


 This piece is very fragile, so be sure not to break this piece. It requires minimal force to remove this piece.

Step 3

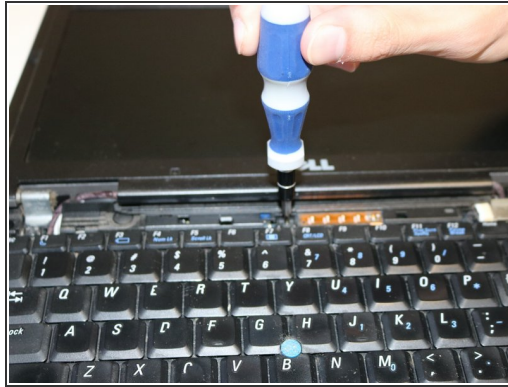

- There are 3 screws that should be exposed now.
- Use a Phillips 00 screwdriver to remove all 3 of the screws shown in the pictures.

Step 4

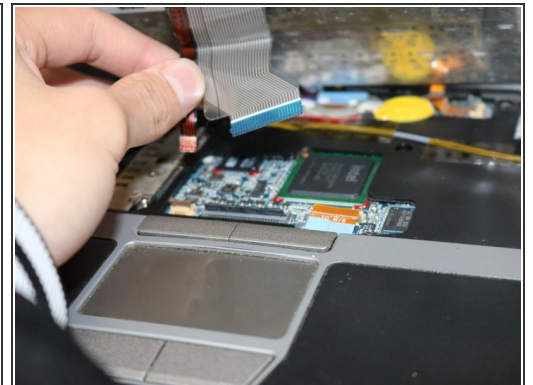

- Gently lift the keyboard from the top.
- At the bottom of the keyboard, there will be ribbons connecting it to the motherboard. Be sure not to tear the ribbons.
- Lift the clamps that are holding the ribbons in place in order to remove them. You should be able to remove the keyboard at this point.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-15 10:22:41 AM.