



Canon EOS Rebel XS 35mm Top Cover Replacement

iFixit replacement guide for the top cover of the Canon EOS Rebel XS 35mm camera.

Written By: [christiansvezia](#)



INTRODUCTION

This is a necessary procedure for replacing the top cover of the Canon EOS Rebel XS 35mm camera. This guide details both how to remove the top cover and to put it back on. These steps are required for many other procedures regarding this camera, since its top interior component houses so many parts of interest.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Top Cover




- Using a PH000 screwdriver bit, remove the three black screws shown in the two pictures that are all 4 mm in length and 1 mm in diameter.

Step 2



- Using a Phillips #000 screwdriver, remove the two black screws shown in the picture that are both 6 mm in length and 1.25 mm in diameter.

Step 3

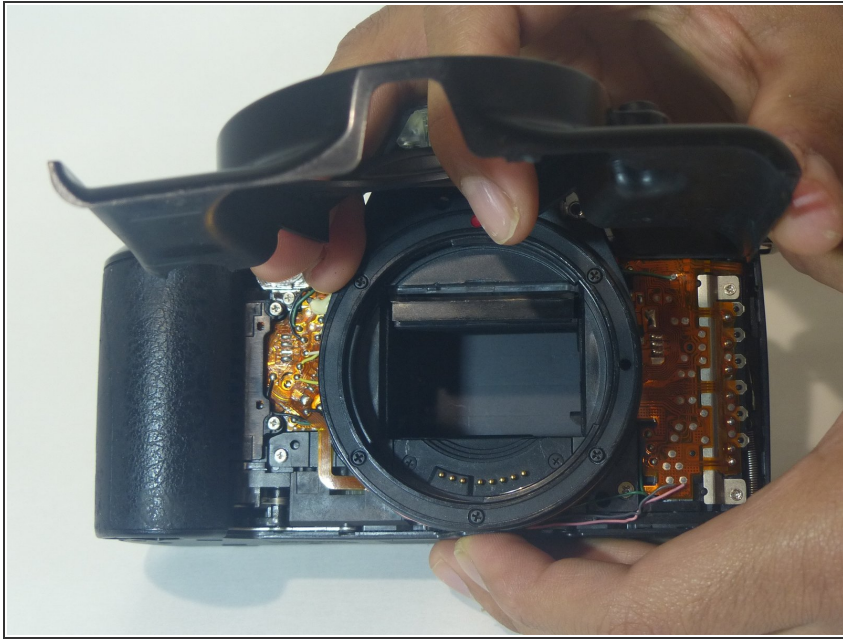

- Pull off the front cover.

Step 4



- Using an opening tool (you can also use your nails, but try not to use something potentially damaging to the camera such as metal), separate the top cover from the rest of the camera!

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-07 02:10:51 AM.