



ASUS N56JR-MH71 Battery Replacement

This guide will show how to remove the battery from the ASUS N56JR-MH71 laptop.


Written By: Ruben Lopez



INTRODUCTION

If the laptop's battery life is draining faster than usual, this guide will show you how to replace the battery. Be sure the battery rating is compatible with the laptop. For this guide you will not need any tools.

Step 1 — Battery

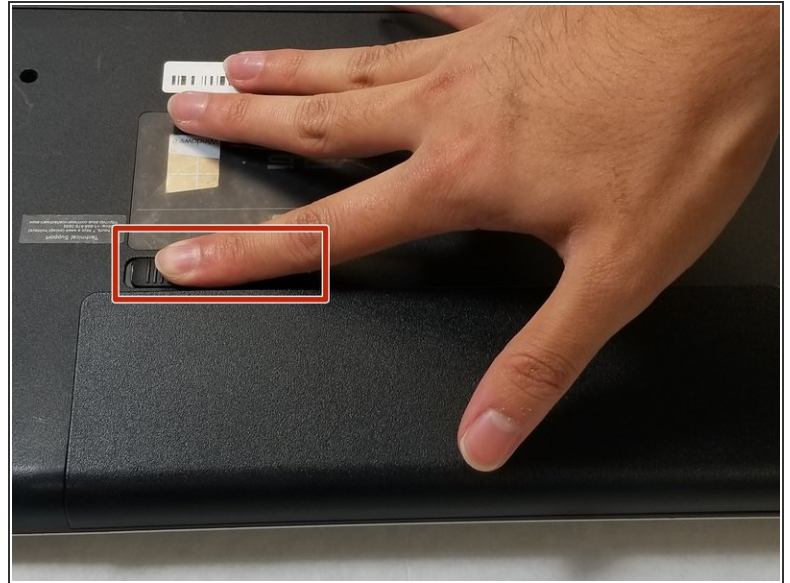

- Push the battery latch.

Step 2



- Keep the battery latch held while you remove the battery.

To reassemble your device, follow these instructions in reverse order.