



Kyocera Echo Battery Replacement

How to replace the battery on the Kyocera Echo.

Written By: Alex Kinstedt



INTRODUCTION

This guide details the short steps required to replace the battery in the Kyocera Echo. This is a necessary guide in case the battery dies or is damaged.

Step 1 — Battery



- Orient the phone so that the screen is face down.
- Place one or both thumbs near the small arrow at the bottom of the phone and firmly push the cover up.

Step 2



- Pull up on the back cover and lift the top to separate it from the phone.

Step 3



- Pull the battery out of the device with a thin object such as your nail or credit card.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 09:38:51 PM.