



# Lenovo IdeaPad Y510P Key Replacement

If the keys on the computer get stuck this guide will give the solution to the possible problem

Written By: Jose



 **TOOLS:**

- [Flathead Screwdriver](#) (1)
-

## Step 1 — Key



- Tuck screwdriver under key.


## Step 2



- Gently force the key out of its socket.



### Step 3

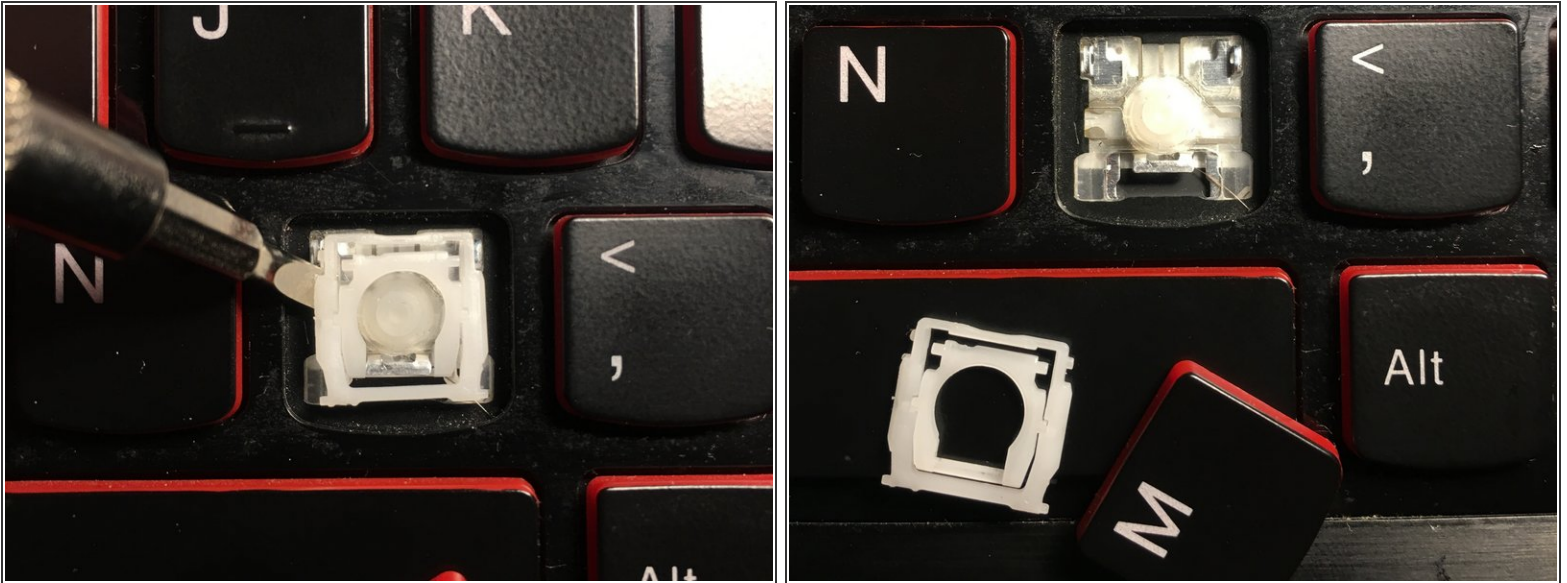

- Either rearrange the hinge or replace it with a new one.

### Step 4



- Put key back into its place by gently pressing it against the hinge.

To reassemble your device, follow these instructions in reverse order.

