



# Canon EOS Rebel XS 35mm Bottom Cover Replacement

iFixit replacement guide for the bottom cover of the Canon EOS Rebel XS 35mm camera.

Written By: [christiansvezia](#)



## INTRODUCTION

This is a necessary procedure for replacing the bottom cover of the Canon EOS Rebel XS 35mm camera. This guide details how to remove the bottom cover and put a bottom cover back on, whether it's the same one now fixed, or a new one.

---

### TOOLS:

- [ESD Safe Tweezers Blunt Nose](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Bottom Cover




- Remove 6 screws using a PH000 Screwdriver.
  - Remove 1 (7mm) screw
  - Remove 5 (4mm) screws

## Step 2



- With your fingers, push on the bottom cover with a horizontal force until it clicks and separates.

### Step 3

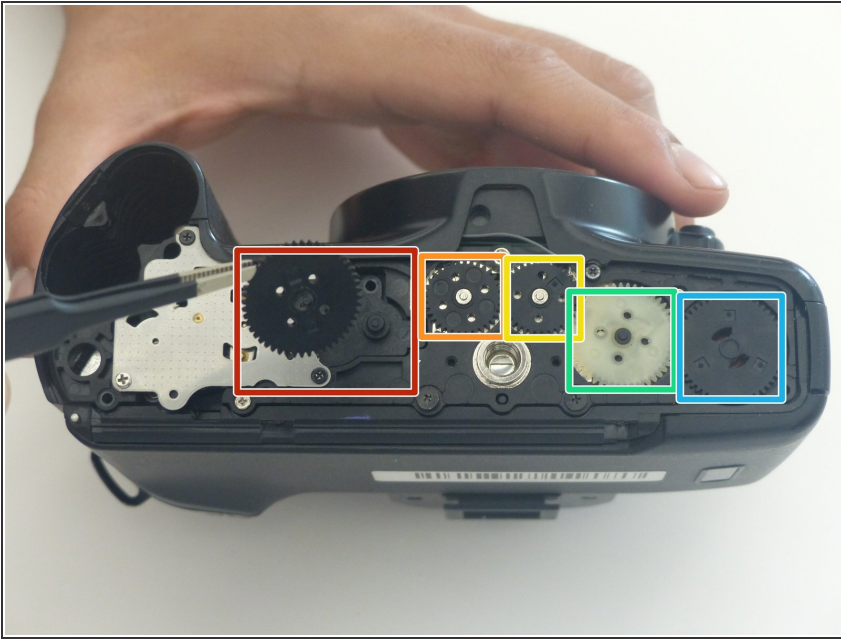

- With tweezers - although you can also use your fingers - you may remove these 5 gears (shown with colored squares around them) and place them somewhere else for the time being. They fall out easily while you're working, so this will help you stay organized.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-04 10:03:27 PM.