



Asus Zenfone 4 Max SIM Card Replacement

How to replace a Asus Zenfone 4 Max SIM card.

Written By: Maegan West



INTRODUCTION

Tools you will need to remove and replace your SIM card include, a SIM card eject tool or a thin pointed object such as a pin or paper clip.

TOOLS:

- [SIM Card Eject Tool](#) (1)
-

Step 1 — SIM Card



- Locate the SIM tray on the left edge of the phone.
- There is a small hole on the outside of the SIM tray that will be used for opening the tray.

Step 2



- Insert a SIM card eject tool into the hole.
- Press until the SIM tray pops out slightly from the phone.

⚠ Be careful not to force any object to fit into the tray's opening hole. The object should be thin enough to fit directly into the hole.

Step 3



- Once the SIM tray has been opened, gently pull the tray completely out of the phone.
- Lift the old SIM card out of the tray with your fingers or flip the tray upside down to make the card fall out.

Step 4



- Finally, replace the old card with the new SIM card and close the SIM tray.

To reassemble your device, place the SIM tray back into the tray slot