



IBM ThinkPad T30 RAM Replacement

A guide showing how to remove and replace the RAM from the IBM ThinkPad T30.

Written By: Allie Knauer



INTRODUCTION

Use this guide to replace the RAM in your IBM ThinkPad T30



TOOLS:


- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [PC2700 256 MB RAM Chip](#) (1)

Step 1 — Battery

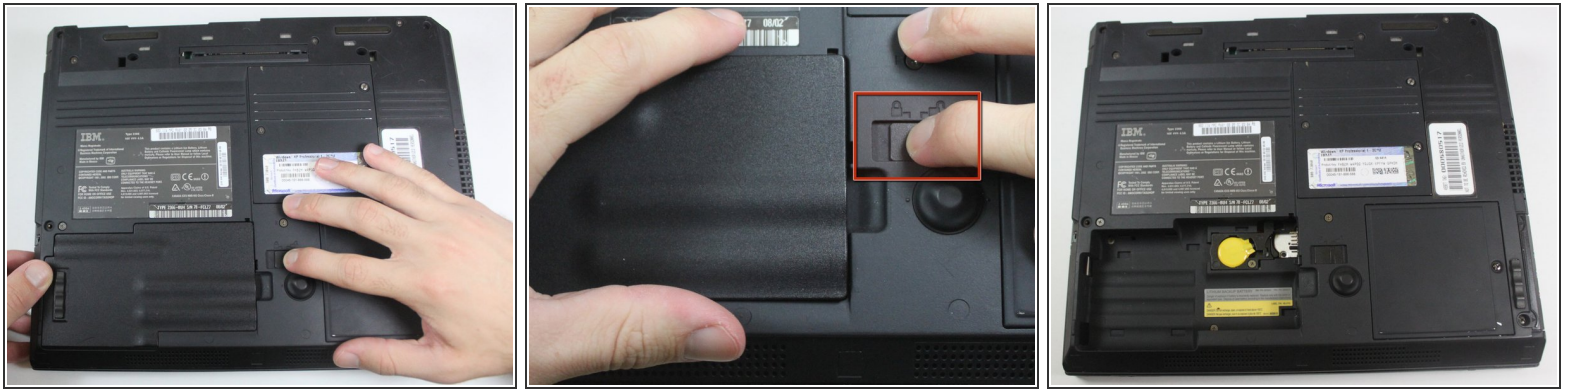

- ❗ Make sure the ThinkPad is off and the power supply is unplugged.
- Flip the ThinkPad upside down with the bottom facing you.
- Slide the latch on the underside of the ThinkPad to the right into the unlock position.
- While holding the latch in the unlock position, lift the battery out with your other hand.

Step 2 — RAM



- Remove the 4 mm Phillips #0 screw located on the panel on the bottom right of the ThinkPad.
- Lift up the cover and set it aside.

Step 3



- Locate the four white tabs. There are two sets of white tabs, the top two holding the first RAM stick and the bottom holding the second RAM stick.
- Removing one set at a time, press down on the white tabs at the same time. The RAM stick will pop out of place.

Step 4



- Lift out the two RAM sticks.

This document was generated on 2021-07-24 06:34:35 AM (MST).

To reassemble your device, follow these instructions in reverse order.