



# IBM ThinkPad T30 RAM Replacement

A guide showing how to remove and replace the RAM from the IBM ThinkPad T30.

Written By: Allie Knauer



## INTRODUCTION

Use this guide to replace the RAM in your IBM ThinkPad T30



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)



### PARTS:

- [PC2700 256 MB RAM Chip](#) (1)

## Step 1 — Battery

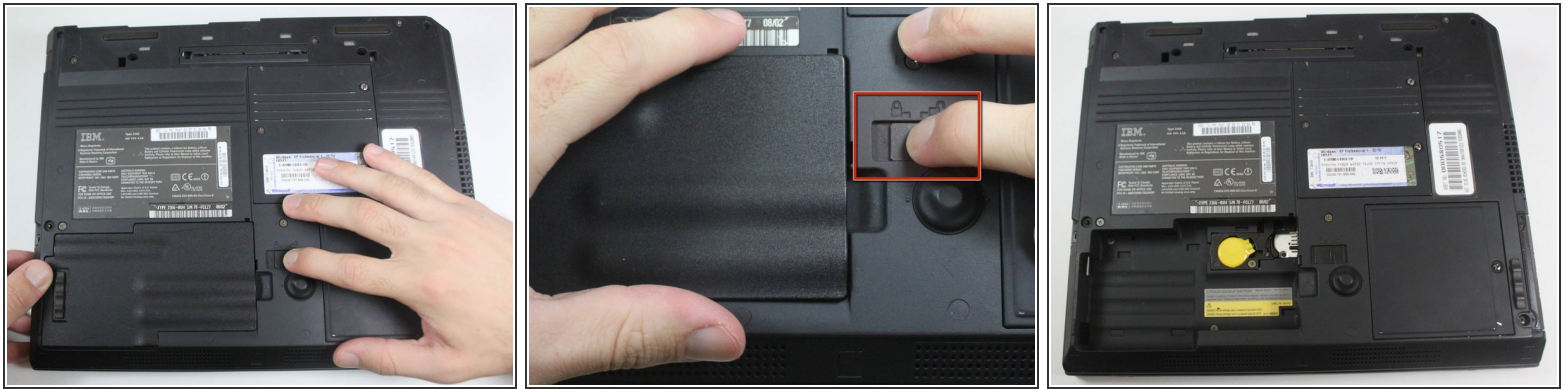

- ❗ Make sure the ThinkPad is off and the power supply is unplugged.
- Flip the ThinkPad upside down with the bottom facing you.
- Slide the latch on the underside of the ThinkPad to the right into the unlock position.
- While holding the latch in the unlock position, lift the battery out with your other hand.

## Step 2 — RAM



- Remove the 4 mm Phillips #0 screw located on the panel on the bottom right of the ThinkPad.
- Lift up the cover and set it aside.



### Step 3



- Locate the four white tabs. There are two sets of white tabs, the top two holding the first RAM stick and the bottom holding the second RAM stick.
- Removing one set at a time, press down on the white tabs at the same time. The RAM stick will pop out of place.

### Step 4



- Lift out the two RAM sticks.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 01:29:30 PM.