



Amazon Fire TV Cube Remote Button Replacement

Remove and replace unresponsive buttons to correct button function.

Written By: Kailey Jackson



INTRODUCTION

This guide will instruct you on how to remove and replace the buttons on your Fire TV Cube Remote. For this guide you will need a metal spudger and a substantial amount of force.

TOOLS:

- [Metal Spudger](#) (1)
-


Step 1 — Remote Button



- Use a metal spudger to pry up the large outer ring of the button.

i This will require a substantial amount of force.

Step 2

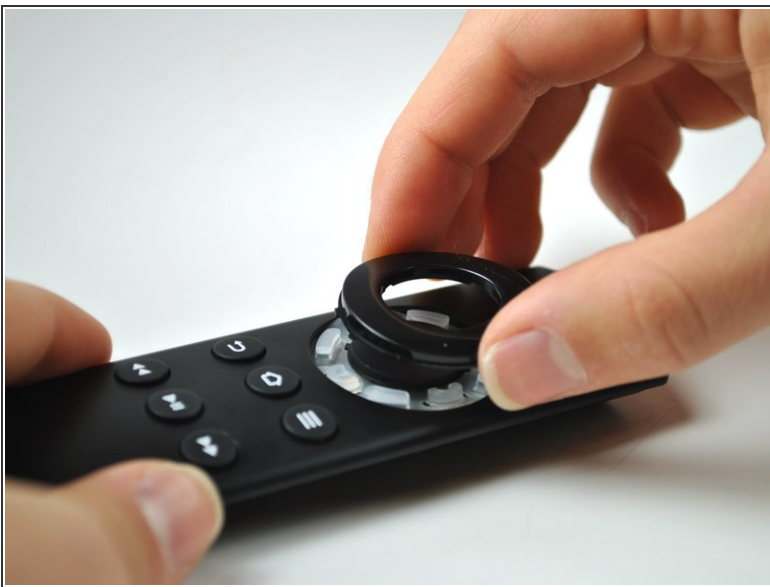

- Remove the circular buttons that remain.

To reassemble your device, follow these instructions in reverse order.

