



# Sharp Aquos Serie mini SHV31 Volume Rocker Replacement

How to replace a Sharp Aquos Serie mini SHV31 volume rocker.

Written By: Allison Leal



---

## INTRODUCTION

If the volume is not adjusting when you try to change it you may need to replace the volume rocker. This may be because it has become separated or the clips have broken off.

---

### TOOLS:

- [Tweezers](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Volume Rocker



- Begin by using the nylon spudger to pry off the back case.

## Step 2



- Use the tweezers to pull the volume rocker from the clips.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-23 06:19:07 AM.