



# DJI Phantom 4 Advanced Remote Controller Back Panel Replacement

removing the back panel allows you to access everything inside the remote.

Written By: cade knott



## INTRODUCTION

Use this guide to replace the back con board of a DJI Phantom 4 Advanced Remote Controller.

With step by step detailed instructions, you will be able to safely resolve issues that may arise with the back con board.

---

### TOOLS:

- [Spudger](#) (1)
- [Tweezers](#) (1)
- [T8 Torx Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)

### PARTS:


- [DJI Phantom 4 Advanced Remote Controller Lower Shell](#) (1)

## Step 1 — Back Panel




- Remove the four screws with a Torx T8 screwdriver to access the back con board.

## Step 2

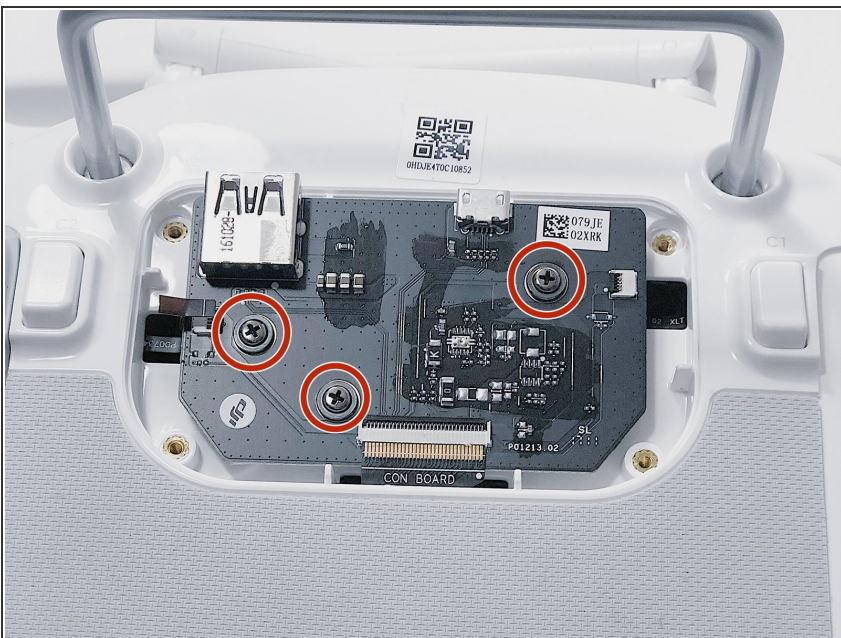

- Remove the three Phillips screws using a Phillips #00 screwdriver.

### Step 3

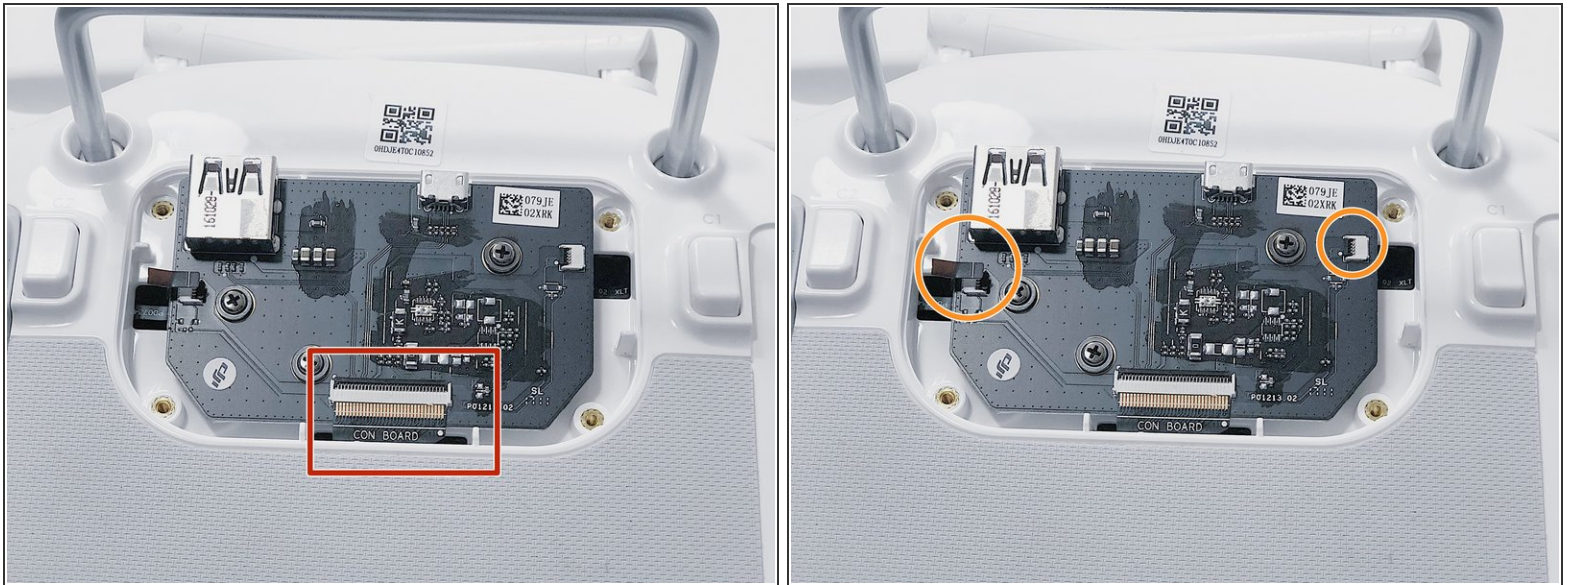

- With tweezers, gently remove the large con board tab.
- Use your hands to remove the two small clips. Pull out from the socket, in a horizontal direction.




## Step 4



- Peel off the rubber grips to access the screw holes.
- ⚠ Make sure to save your grips and do not to get them stuck to anything, you are going to want to save the adhesive.
- Remove the back board and set it aside.

## Step 5

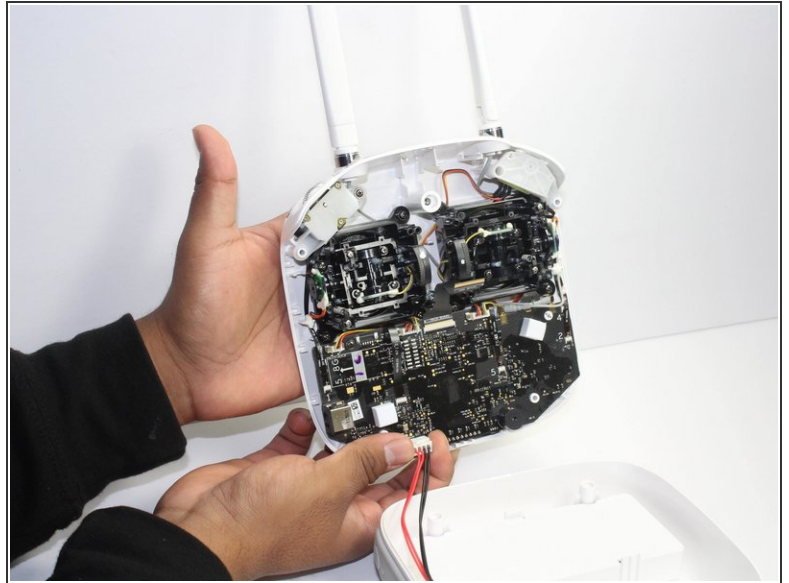

- Pull apart the back plastic panel.
- ⓘ Recommended tool for this would be the metal spudger, but not required.
- Once the back panel is off, you will have access to the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-15 09:18:30 PM.