



JVC KW-V820BT Top Panel Removal Replacement

Written By: Marshall Andersen



INTRODUCTION

The removal of the top panel will allow access to additional serviceable components within the device, including the disc drive.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Top Panel Removal



- Remove seven 1/64 x 3/16" screws from the top panel using the Phillips #0 screwdriver.
- Remove the top panel.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-14 11:46:52 PM.