



NOSTALGIA KPM508 Kettle Pot Replacement

Remove and replace the kettle pot from inside the popcorn machine if it breaks or needs cleaning.

 
Written By: anhua@ucdavis.edu



INTRODUCTION

This guide will help you remove the kettle pot from the inside of the popcorn maker. In order to begin the procedure, make sure the machine is unplugged and has been turned off for at least one hour to ensure the kettle pot is not hot. Lay the popcorn maker on its side before beginning.

Step 1 — Kettle Pot

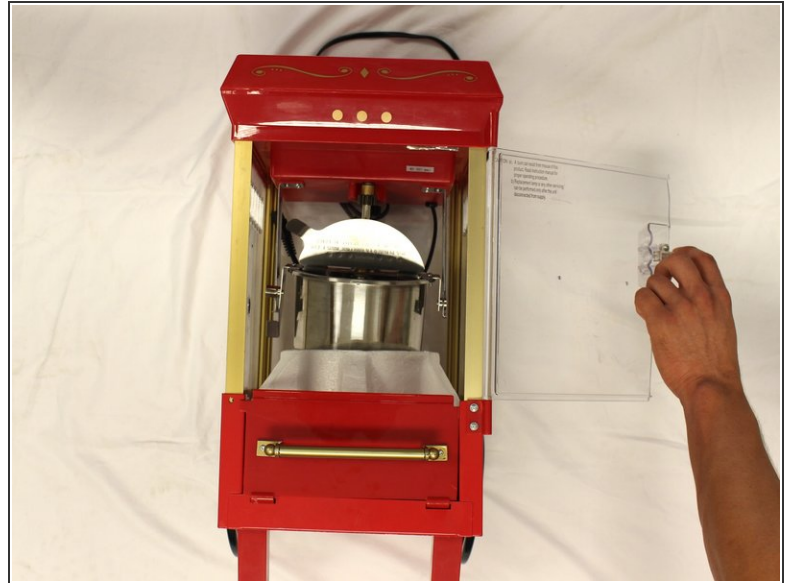


- Unplug the machine and tilt the machine on its side with the door facing up.
- Open the door.

Step 2



- Reach in and lift the kettle pot up and towards you to pull it out of the popcorn machine.

 Step 3

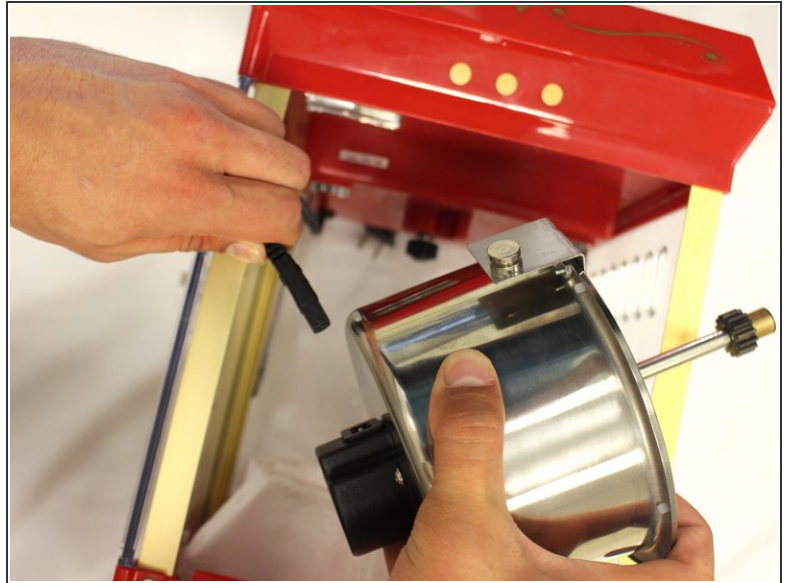

- Unplug the plug from the kettle pot to remove it from the machine.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-15 03:02:53 PM.