



Dell Chromebook 13-7310 Back Cover Replacement

How to replace a Dell Chromebook 13-7310 back cover.

Written By: Brett Raymond



 
INTRODUCTION

Having problems with your Chromebook 13-7310? The first step to almost any repair on your laptop is the removal of the back cover. Follow this quick and easy guide to get started with your repairs and replacements!

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Back Cover

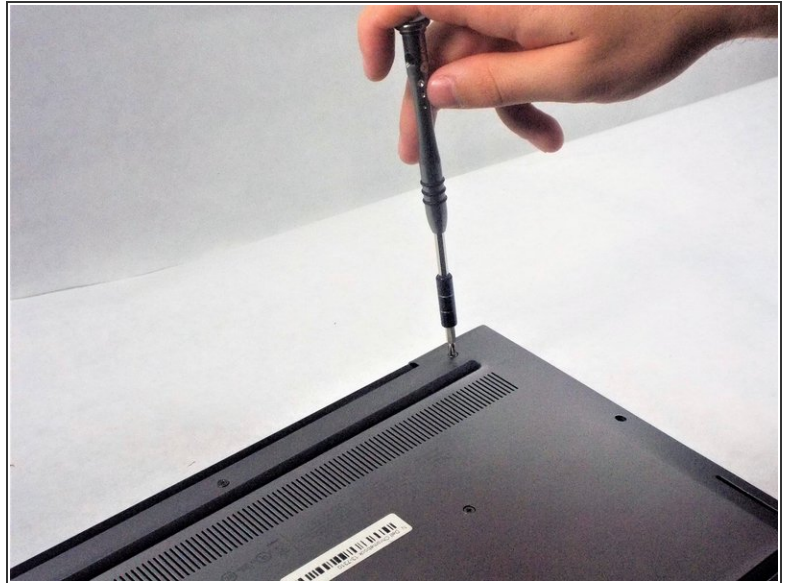

- Remove the eleven 3mm Phillips #1 screws.

 Step 2

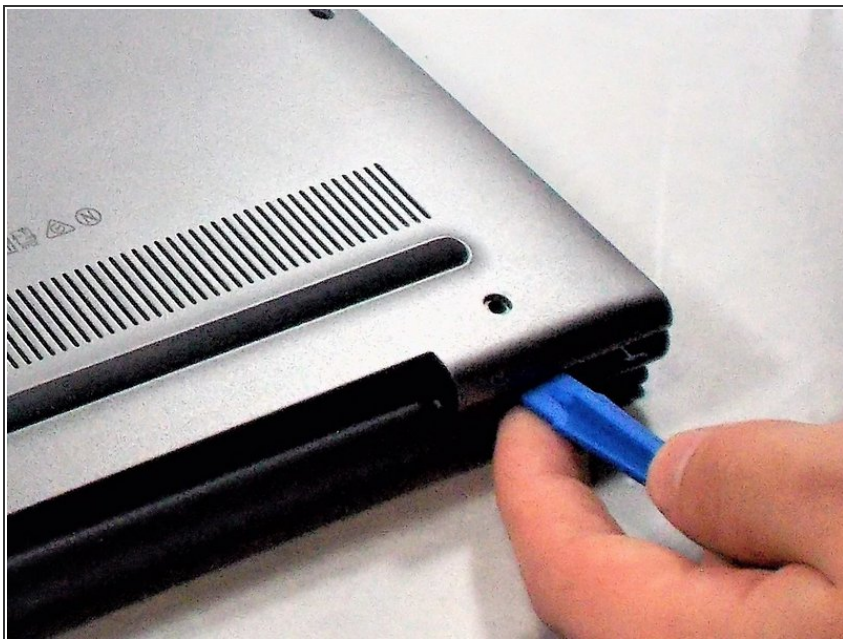

- Use a plastic opening tool to gently remove the back panel.
- ⓘ It can be easier to pry open near a corner.

To reassemble your device, follow these instructions in reverse order.