

INTRODUCTION

This replacement guide does not require tools. The bottom filter usually requires rinsing every 9 months or as needed depending on usage. Replacement is generally not necessary, unless filter is very clogged, becomes damaged, or is extremely dirty and normal cleaning maintenance fails to sufficiently clean the filters.

Step 1 — Bottom Filter



- Press the blue lever located at the bottom of the handle and pull the plastic cover away from the main vacuum.

Step 2



- Remove filter.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-10-05 07:35:41 PM (MST).

