



# Nokia 3310 3G Outer Frame Replacement

This guide will provide instructions on replacing the outer shell of your Nokia 3310 3G.

Written By: Aaron LeBlanc



---

## INTRODUCTION

If the frame of your Nokia 3310 3G is cracked or damaged, this guide will help you replace it.

---

### TOOLS:


- [Metal Spudger](#) (1)
  - [Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [T5 Torx Screwdriver](#) (1)
-

## Step 1 — Battery



- Using the thumbtab molded on the bottom of the phone, pry the back cover off using either a fingernail or a plastic opening tool.

## Step 2

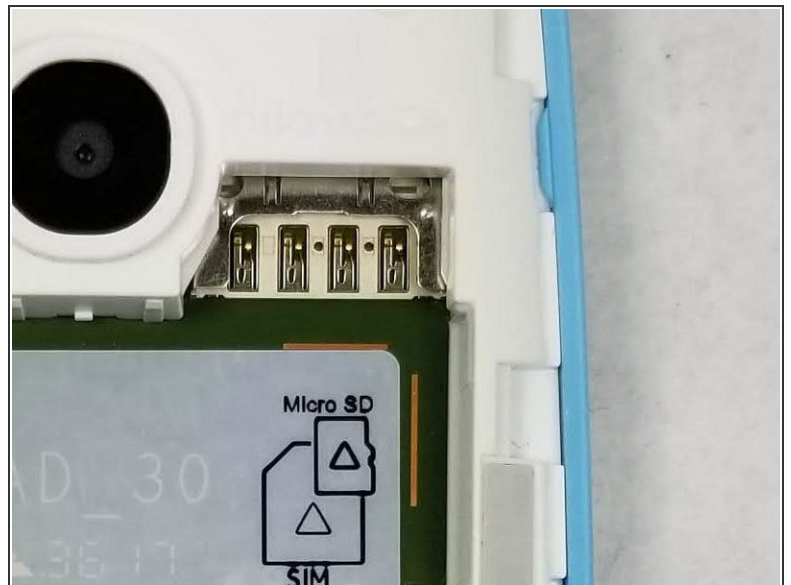

- There is a molded notch in the white frame of the phone near the top right of the battery. Using either a finger or a plastic opening tool, utilize the notch to lift up on the battery, and remove it from the device.

**i** This specific device did not come with a battery.

### Step 3 — Frame




- Using a T5 screwdriver bit, remove the (6) 5.0 mm screws along the outside edge of the frame.
- Using a metal spudger, wedge the 6 plastic tabs molded into the outer shell away from the frame to lift up and remove it.

### Step 4 — Motherboard




- Use a spudger to simultaneously leverage the shell away and the motherboard up from the body of the shell.

## Step 5 — Speaker

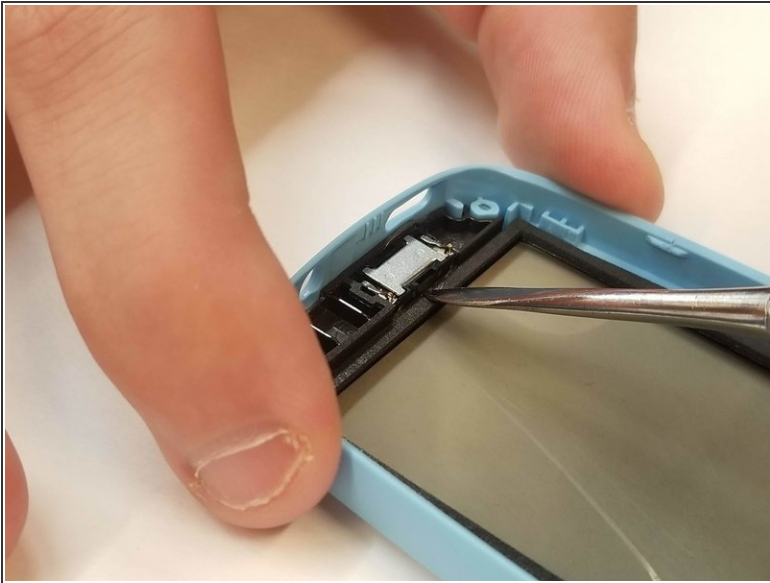

- Using a metal spudger, lodge the tip underneath the speaker and between the soft foam surrounding the screen.
- Use the metal spudger to leverage out the speaker.
- ⓘ The speaker is attached to the shell with an adhesive. Do not be too aggressive in your removal, else the speaker will come apart.

## Step 6 — Outer Frame

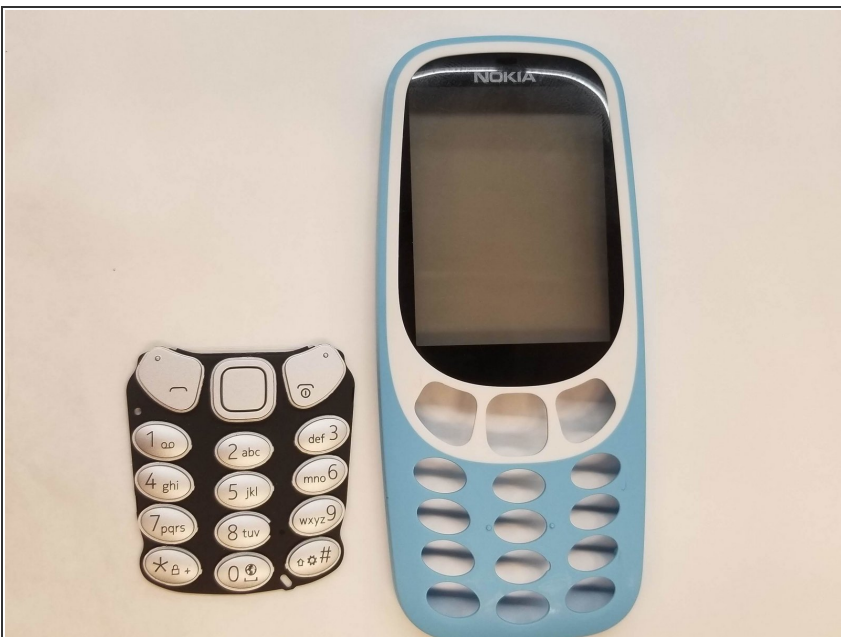

- Using your finger, push the keyboard insert out of the front outer frame.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-27 04:30:35 AM.