



# Dell Latitude E6520 Hard Drive Replacement

This guide demonstrates a simple procedure to properly remove and replace the Dell Latitude E6520 hard drive.

Written By: Alec Weiss



---

## INTRODUCTION

The hard drive is held to the laptop by 4 JIS #0 screws with a head size of 4.90 mm and a length of 5.57 mm.

---

### TOOLS:

- [JIS #0 Screwdriver](#) (1)
-

## Step 1 — Hard Drive



- Remove the four 5.57 mm JIS #0 screws that hold the LCD screen to the cover.

## Step 2



- Grab the curved edge near screws and pull away from the laptop to remove the hard drive.

To reassemble your device, follow these instructions in reverse order.

