



# Wahl Cordless Beard Trimmer Teardown

This is a complete teardown of the Wahl Cordless Beard Trimmer.

Written By: arielletc28



 **TOOLS:**

- Phillips 2 Screwdriver and 1 x Phillips 4 Screwdriver (1)
-

## Step 1 — Remove battery cover



- Begin by removing the battery cover from the back of the trimmer.

## Step 2 — Remove battery



- Remove the battery.

### Step 3 — Remove metal blade



- Remove the screws, then gently lift off the blade. A small piece of plastic should come off with the blade. There will be a spring revealed from under the blade, remove this as well.

### Step 4 — Separate plastic cover



- Remove the screws from the sides of the battery compartment. Then, gently separate the two halves of the plastic cover.




## Step 5 — Remove switch



- Lay both halves of the trimmer out, and remove the switch from the inside of the white plastic cover.

## Step 6 — Remove motor

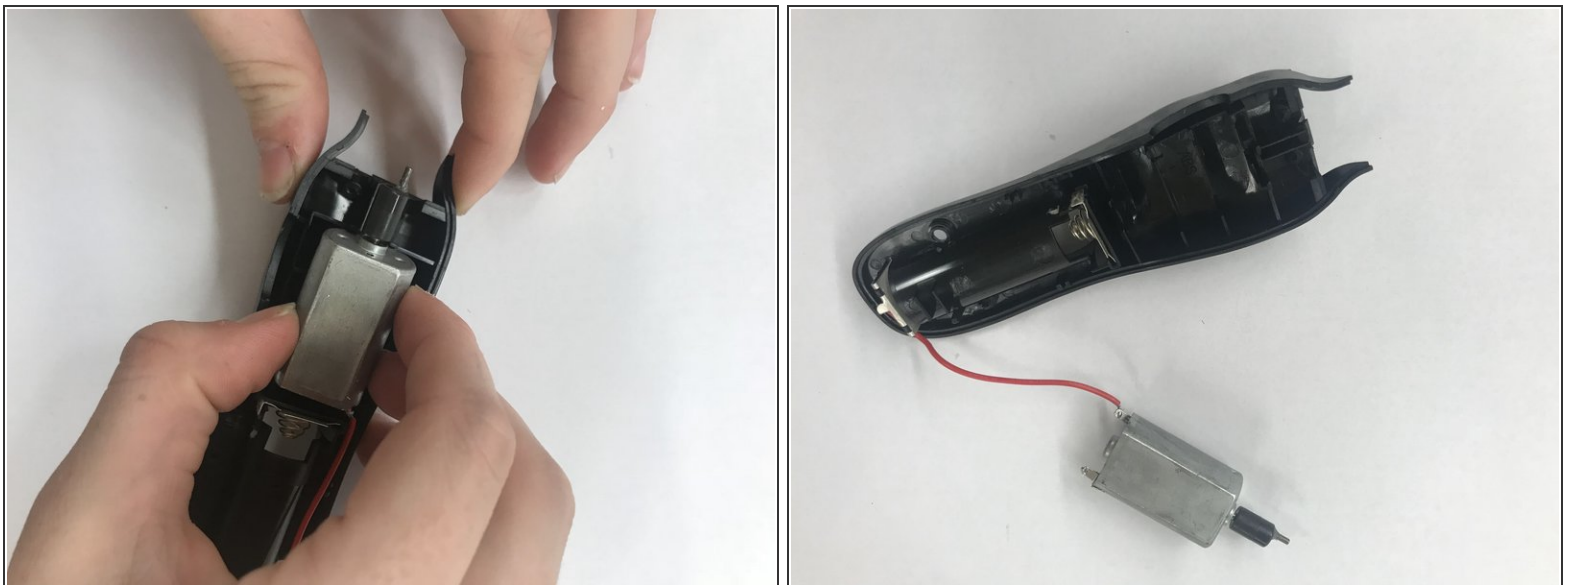

- Finally, remove the motor from the black plastic cover. If desired, this motor can be de-soldered from the red wire and re-purposed.

