



NOSTALGIA KPM508 Light Bulb Replacement

This guide will help the user remove and replace the light bulb of the popcorn machine, located in the top left corner, and requires no extra tools.


Written By: anhua@ucdavis.edu



INTRODUCTION


This guide will help the user remove and replace the light bulb of the popcorn machine, located in the top left corner, and requires no extra tools. Make sure the machine is unplugged and off before proceeding.

Step 1 — Light Bulb

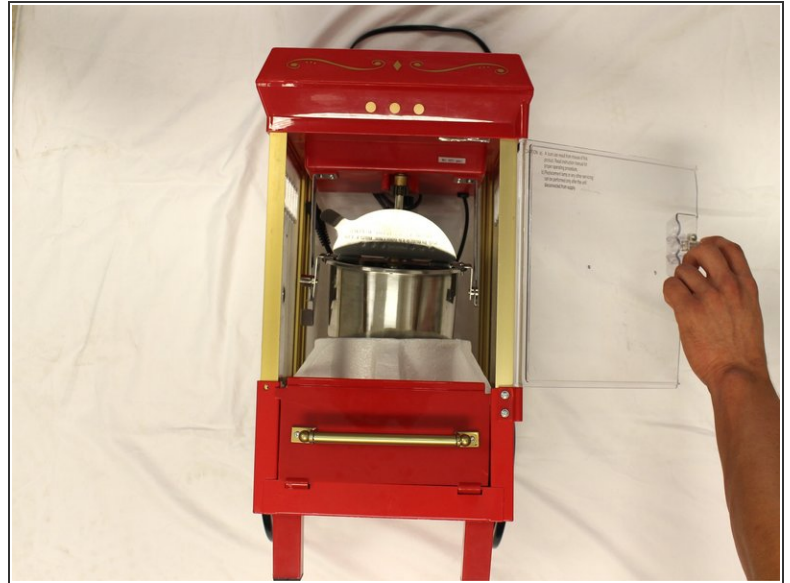

- Unplug the machine and tilt the machine on its side with the door facing up.
- Open the door.

Step 2

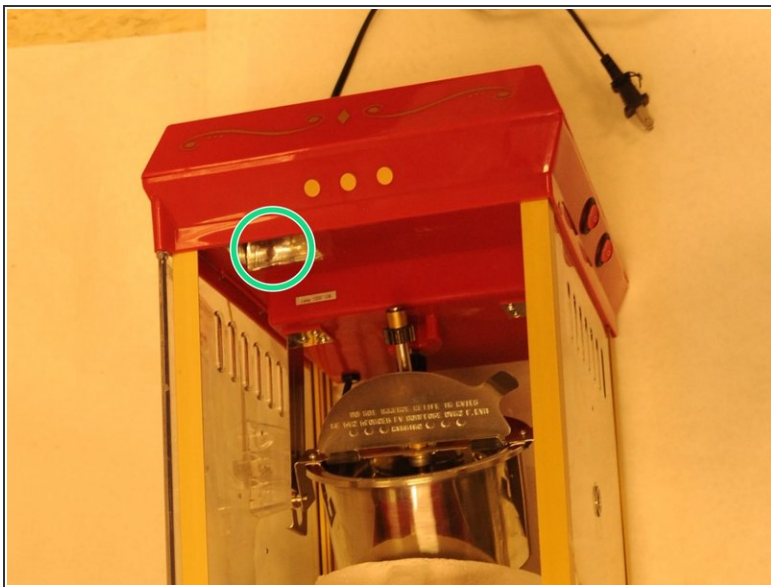

- Unscrew the bulb located in the top left corner of the machine in a counterclockwise direction until the bulb is no longer attached.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 11:39:34 PM.