



iRobot Roomba 860 Bumper & Bumper Sensor Replacement

How to replace a iRobot Roomba 860 bumper and bumper sensor.

Written By: Danny Andrade




INTRODUCTION

This guide will show how to remove the Roomba front bumper and also the sensor attached by the red ribbon wire. You will need a Phillips Head #0 Screw driver for this repair. Make sure you work on a clean flat surface for this repair. Be sure to not misplace the small screws holding the sensor to the bumper.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Bumper & Bumper Sensor

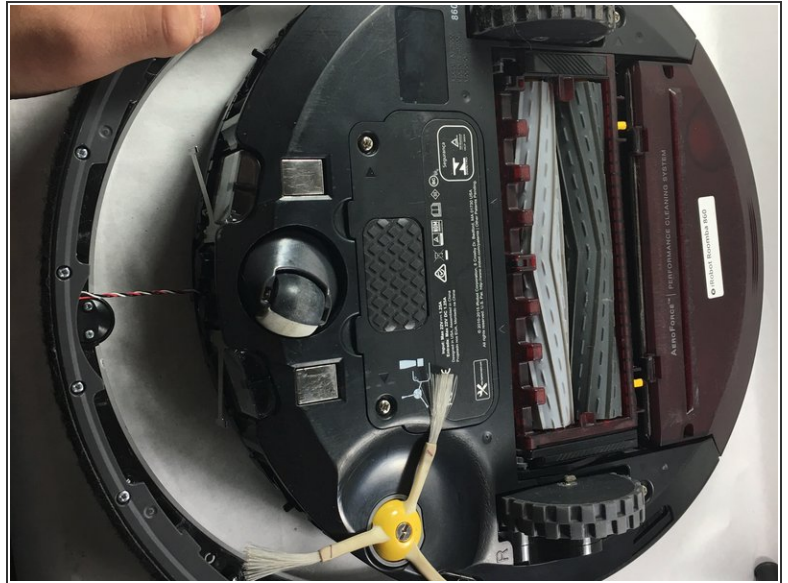


- Place Roomba flat on table with iRobot text upside down and closest to you.
- Detach the clips on the bumper.
- Flip Roomba so that the bottom side is facing up and you can access bottom screws on bumper.

Step 2

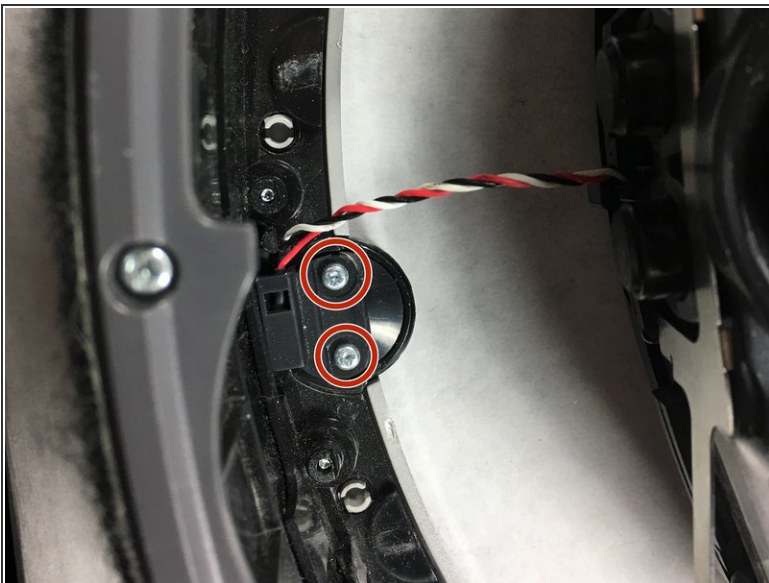

- Using a Phillips #0 screwdriver, remove the two screws.

Step 3

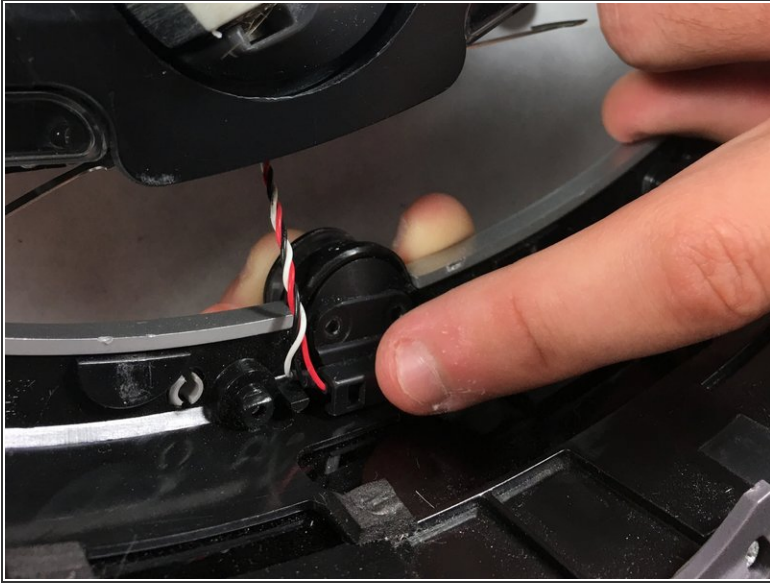

- Once the screws are removed, the wire will detach from the bumper and sensor with very light force.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-12-20 01:03:44 PM.