



# Shark IONFlex 2X Wheel Replacement

This guide will show you how to replace the wheels on your Shark IONFlex 2X.

Written By: Kendal Cler



## INTRODUCTION

This replacement guide does not require tools. This guide will show the user how to remove the wheels from their device.

## Step 1 — Wheel



- Grab the wheel at the edges.

## Step 2



- Pull the wheel away from the floor unit base with a strong pull.
- Repeat steps for the other side.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-15 11:42:46 AM.