




NOSTALGIA KPM508 Door Replacement

Replace the door of your popcorn machine if it comes off or breaks.

Written By: Max O'Rourke

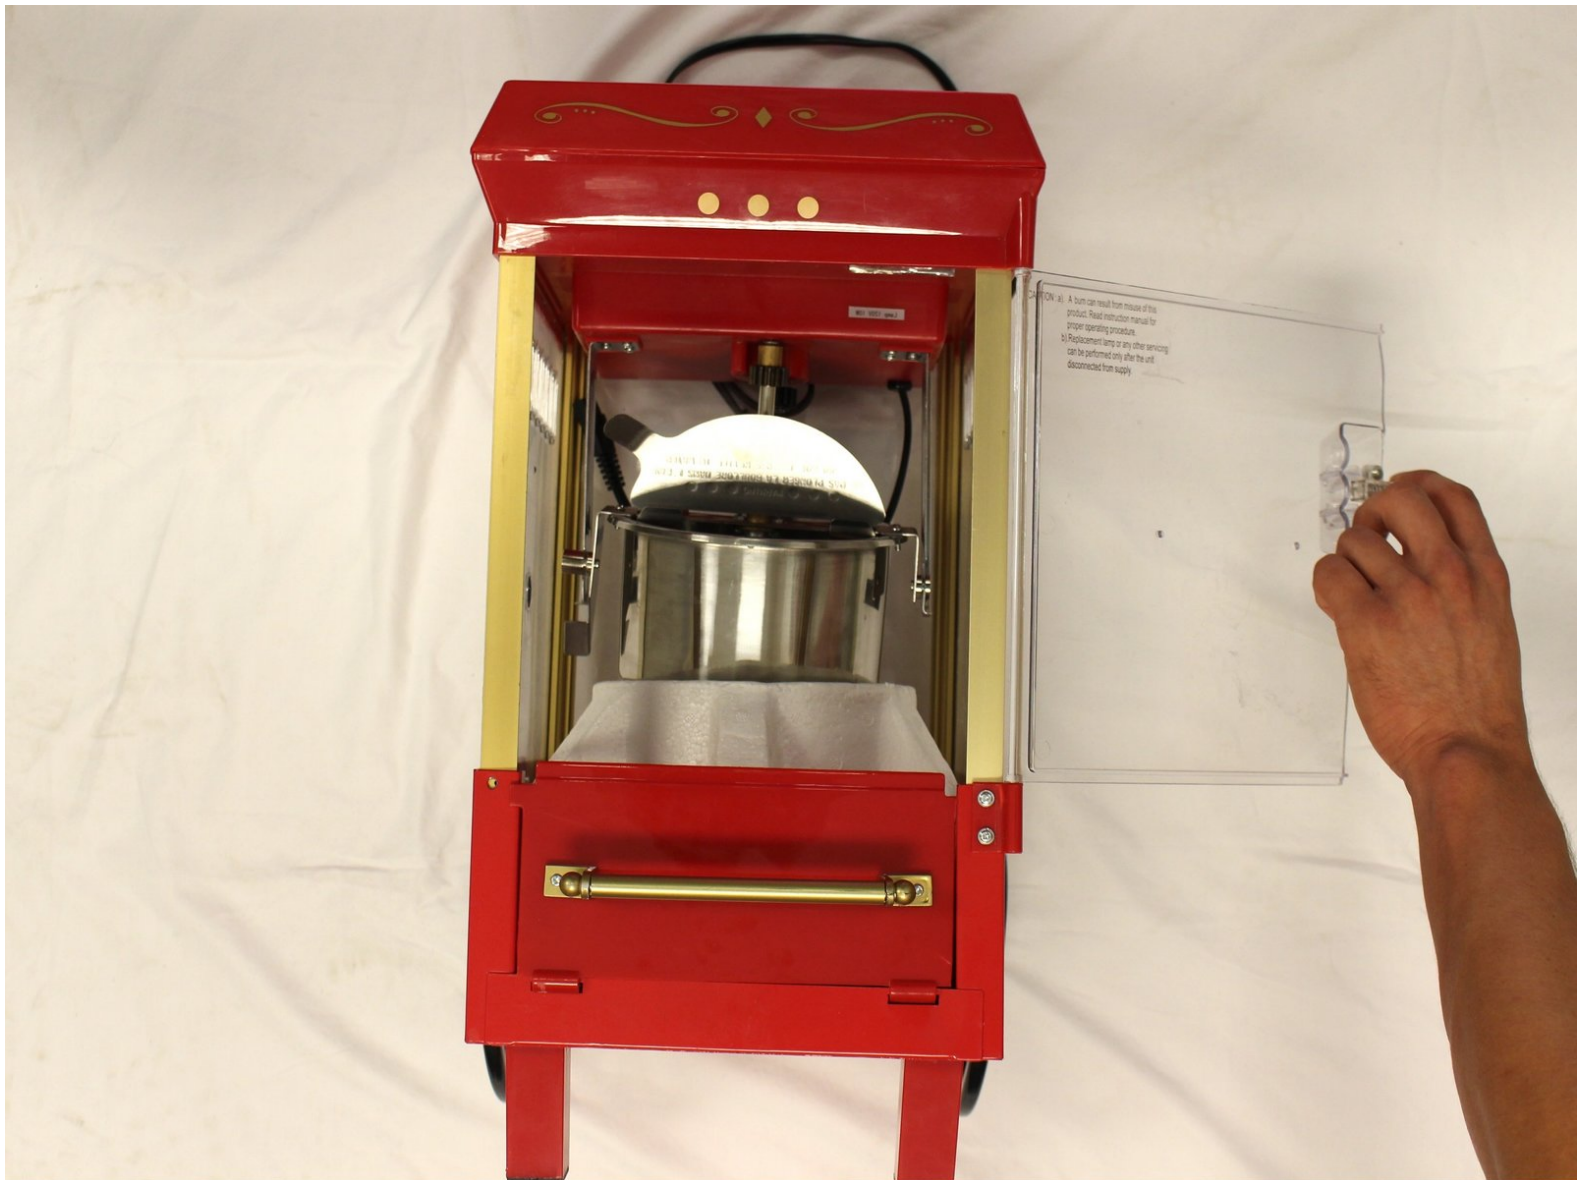

INTRODUCTION

This guide is used to help remove the clear door off the popcorn maker. In order to begin to remove the door, be sure that the machine is unplugged from any outlets and the device is lying on its side.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Door




- Unplug the machine and tilt the machine on its side.

Step 2

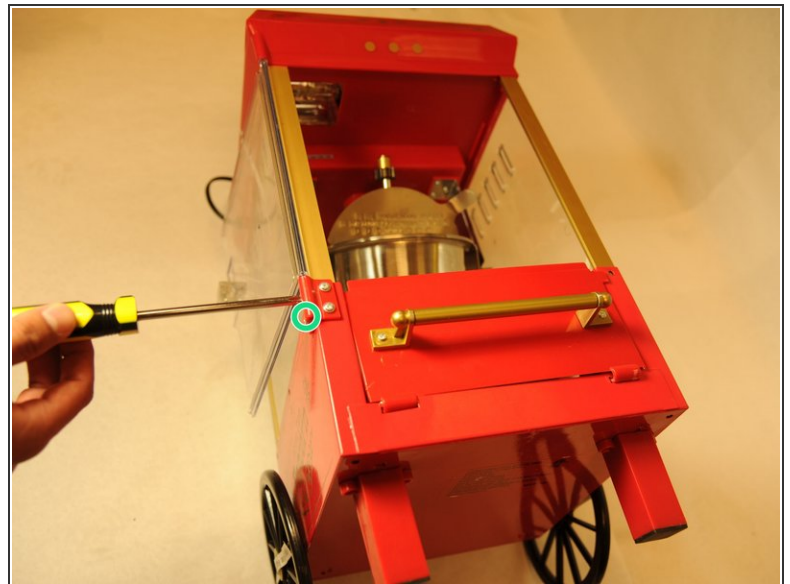

- Using a Phillips #1 screwdriver, remove the four 12 mm screws on the red door hinge as indicated, from both the front and side.

Step 3

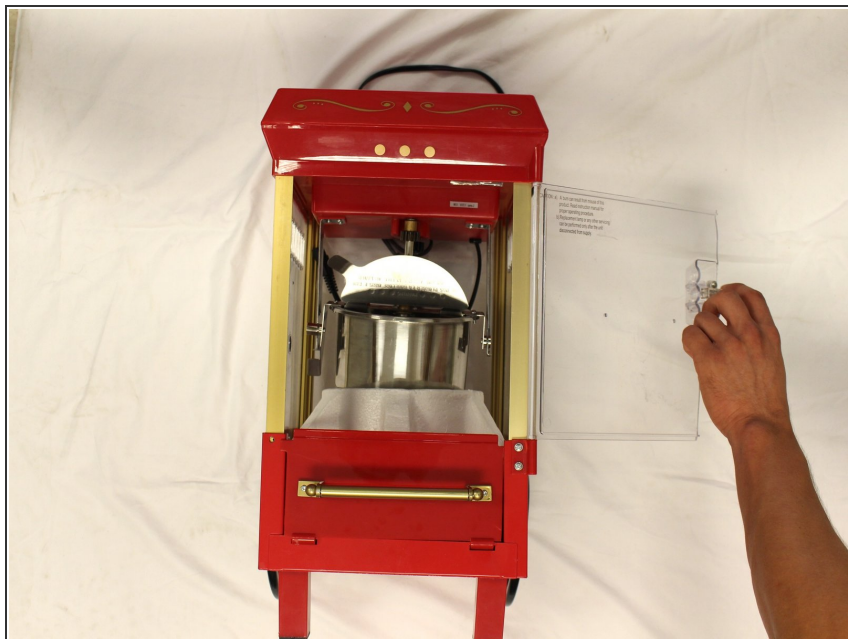

- Remove the red door hinge from the popcorn machine.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-12-30 11:33:20 AM.