



Fujitsu LifeBook U810 Hard Drive Replacement

This guide shows how to replace the hard drive in the Fujitsu Lifebook U810. Replacing the hard drive can improve the memory and speed of the computer.

Written By: Anne Kutt



INTRODUCTION

Replacing the hard drive for the Fujitsu Lifebook U810 can be a simple process if directions are followed carefully. The only tool required is a Phillips head +J0 sized screwdriver to remove the Phillips screws on the back of the LifeBook. This guide improves the memory and speed of the device. You can find a new hard drive online by searching the model number and corresponding part for the U810 model.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Hard Drive




- Remove back cover of the device by unscrewing the four 7mm screws with a Phillips #0 screwdriver.

Step 2



- Remove the two 5mm screws with a Phillips #0 screwdriver.
- Remove the hard drive from the LifeBook.

Step 3

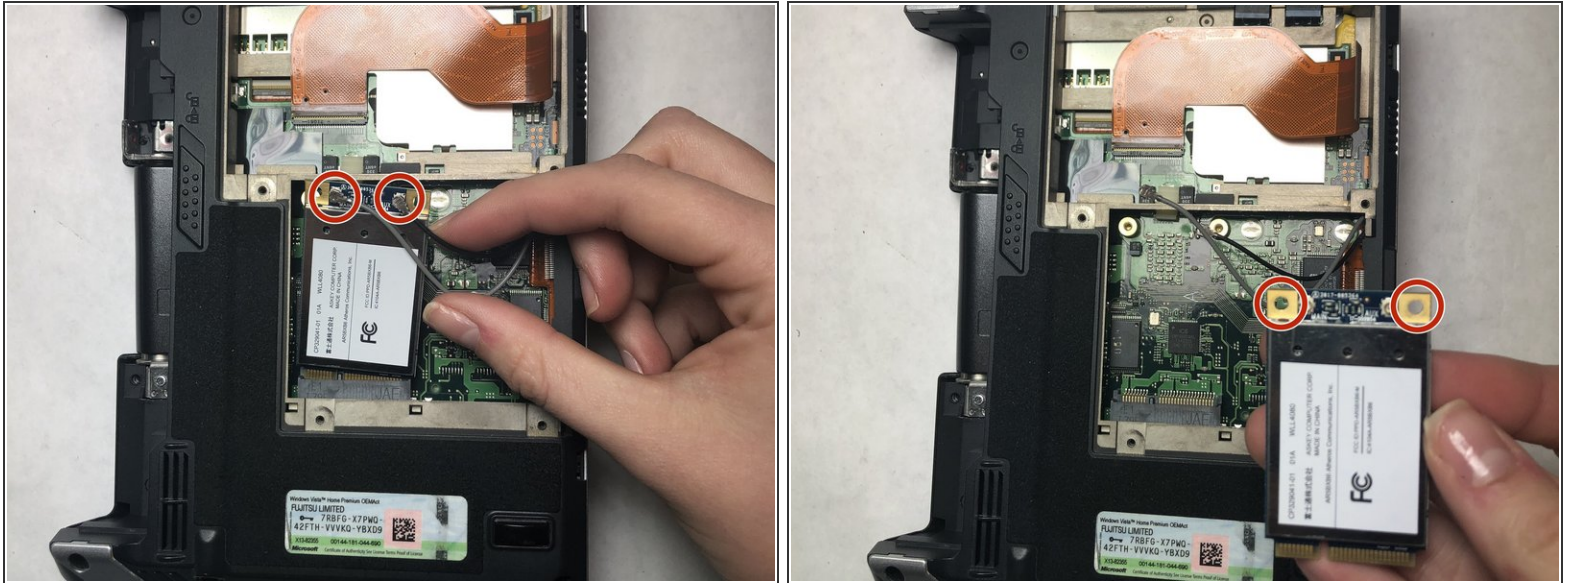

- Detach the two wires connected to the hard drive by gently pulling them out of place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 01:07:43 AM.