



Amazon Echo Show Screen Replacement

How to replace an Amazon Echo Show screen.

Written By: Christina Simone



INTRODUCTION

If your Echo Show's screen does not respond or is cracked, you might need to follow this guide to replace it. Before starting, gather a iFixit opening tool. Remember to *carefully* use your hands to remove the screen, as applying too much pressure might damage the screen further.



TOOLS:


- [iFixit Opening Tools](#) (1)
-

Step 1 — Screen



- Use the plastic opening tool to gently lift the plastic protector from screen.

Step 2

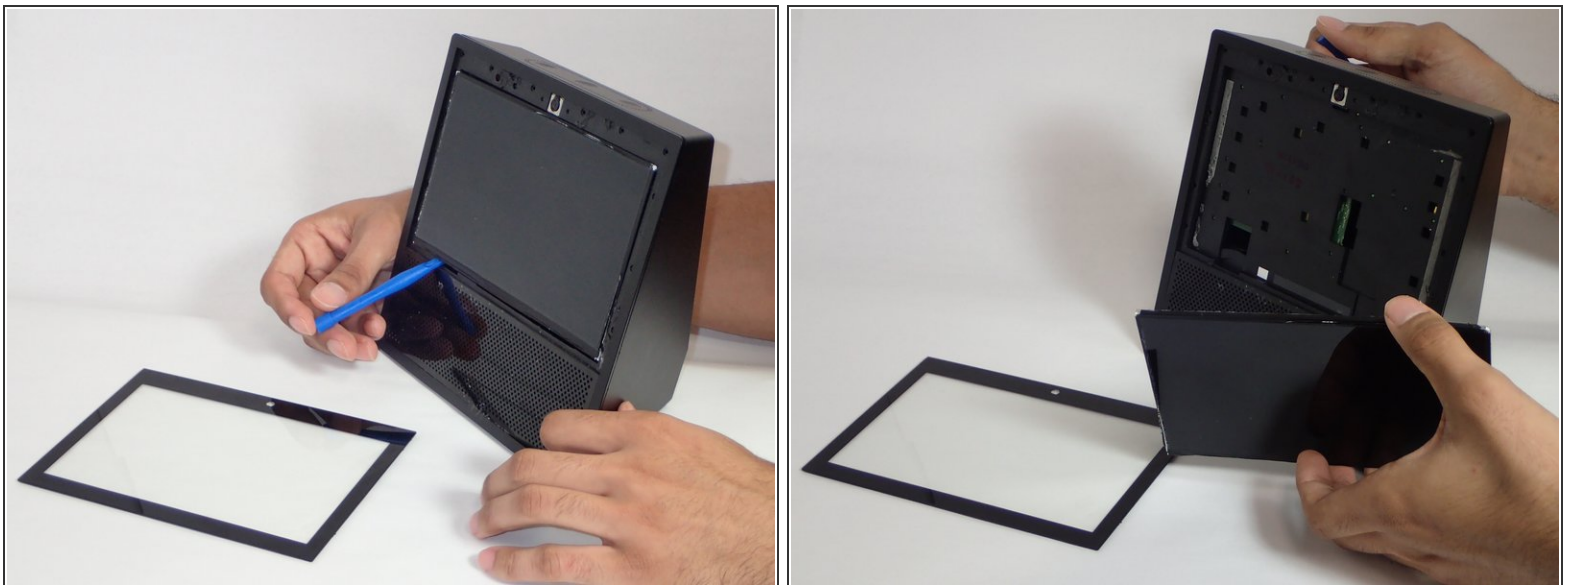

- Once the protector is lifted from screen, use the plastic opening tool to remove the actual screen from device, using an opening near the bottom left corner.
- ☑ Once both parts are removed from the device, you can insert the new screen itself. Make sure that the digitizer cable of the new screen is placed within the recess when replacing the screen.
- ☑ If necessary, use adhesive to more firmly secure the LCD or the protector screen to the rest of the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-14 09:55:32 PM.