



# HP Pavilion dv7-6178us CD Drive Replacement

This guide will show you how to remove and replace the CD Drive for an HP Pavilion dv7-6178us.

Written By: Russell Bromann



## INTRODUCTION

Is your personal computer not reading discs you're putting in your CD drive? There is most likely something wrong with your CD drive. Often dust can accumulate in your CD drive and this will make the discs inserted unreadable.

---



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — CD Drive



- ⚠ Make sure the device is turned off.
- Remove the panel on the bottom of the laptop by sliding the switch to the right.

## Step 2

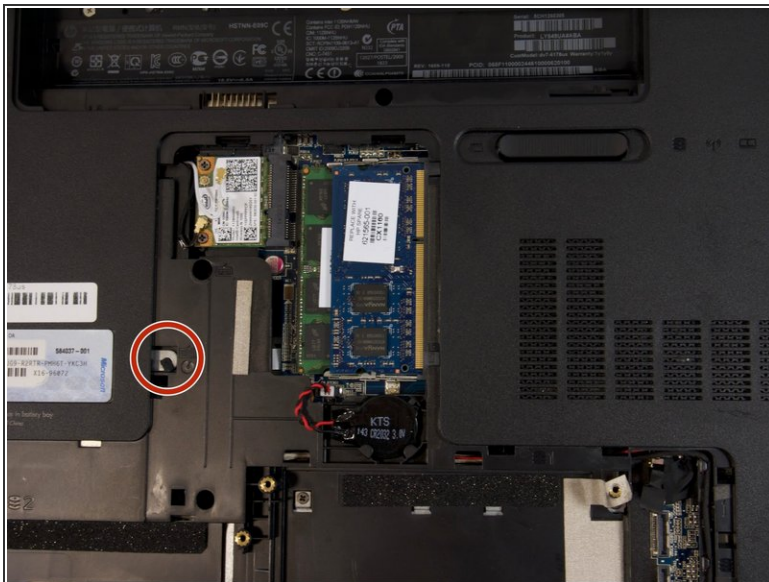

- Locate the screw that keeps the CD drive attached, and remove it with a Phillips head screwdriver.

### Step 3



- After the screw is removed, pry the CD drive out of the laptop until you can grip and remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-04-22 06:58:14 AM.