




HP ProBook 440 G1 Backplate Removal

How to remove the backplate of the HP ProBook 440 G1

Written By: Ethan A Courtney

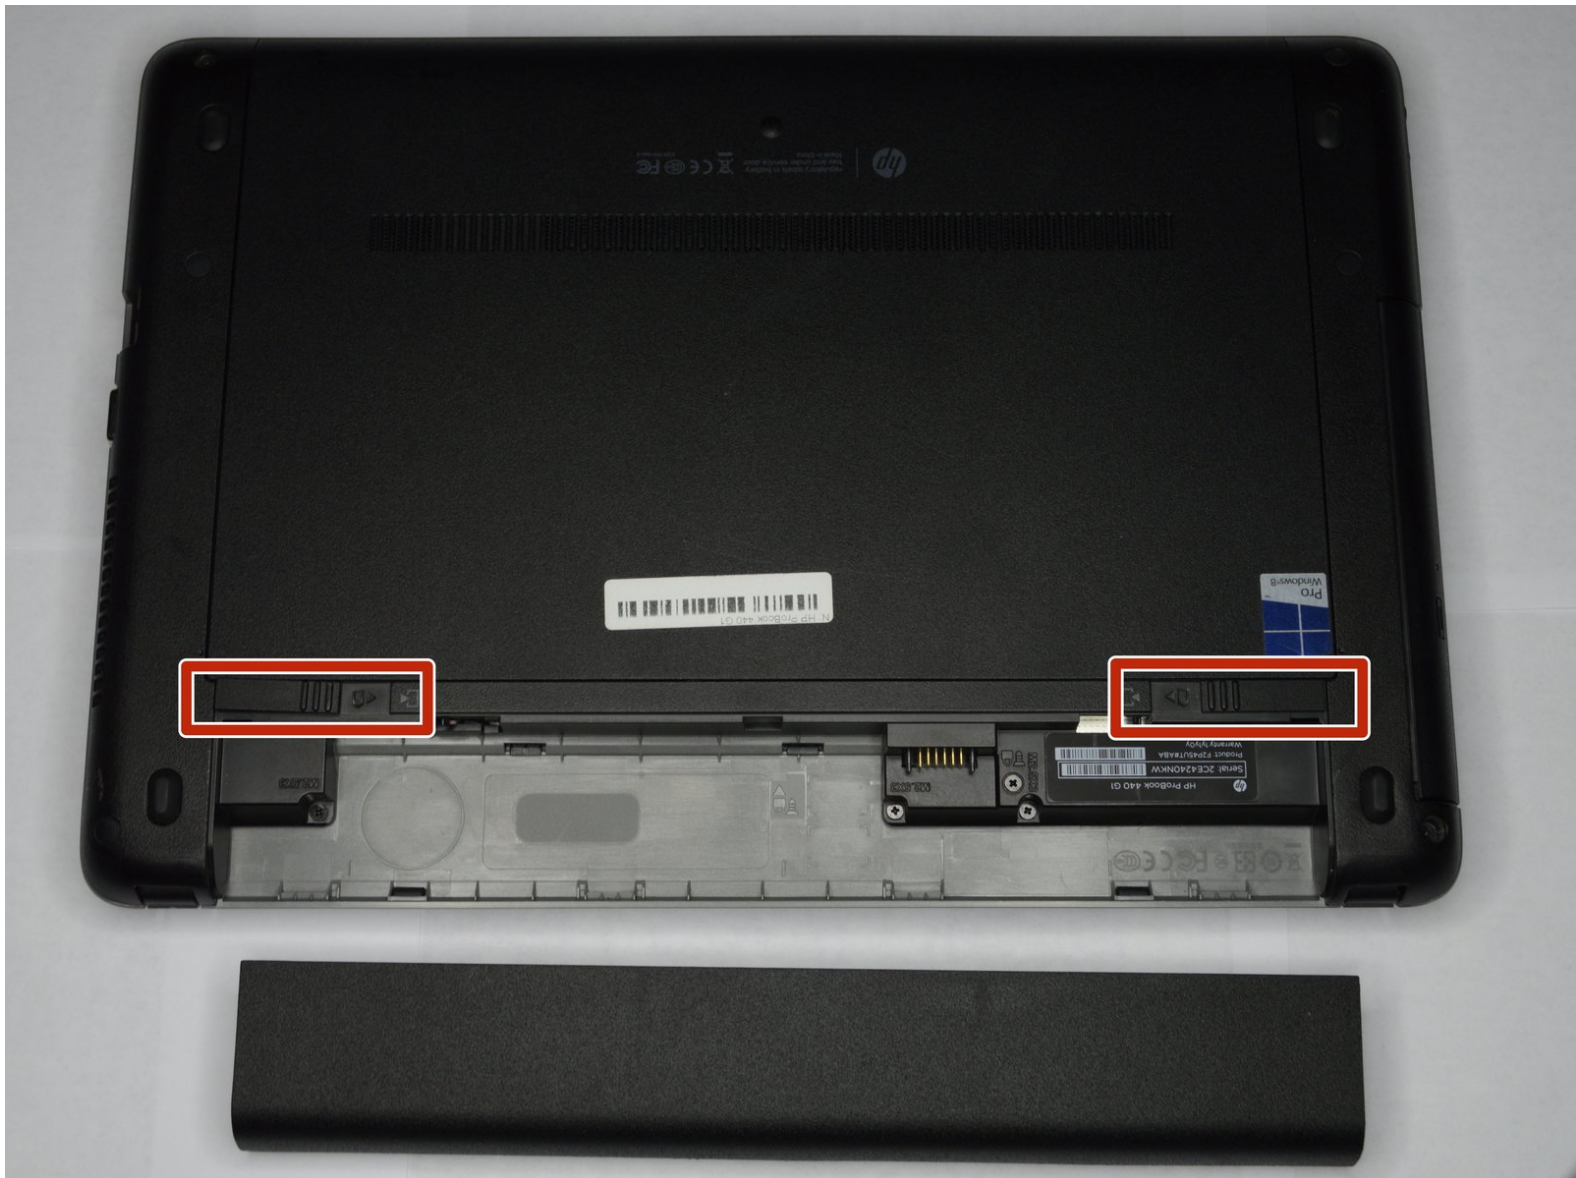

INTRODUCTION

How to remove the backplate of the HP ProBook 440 G1.

Step 1 — Battery



- ⚠ Make sure the laptop is turned off before you start.
- Push and hold the release tab on the right and left toward the center.

Step 2




- Pull the battery out.

Step 3 — Backplate



- Push and hold the release tabs on the right and left toward the center again.

Step 4

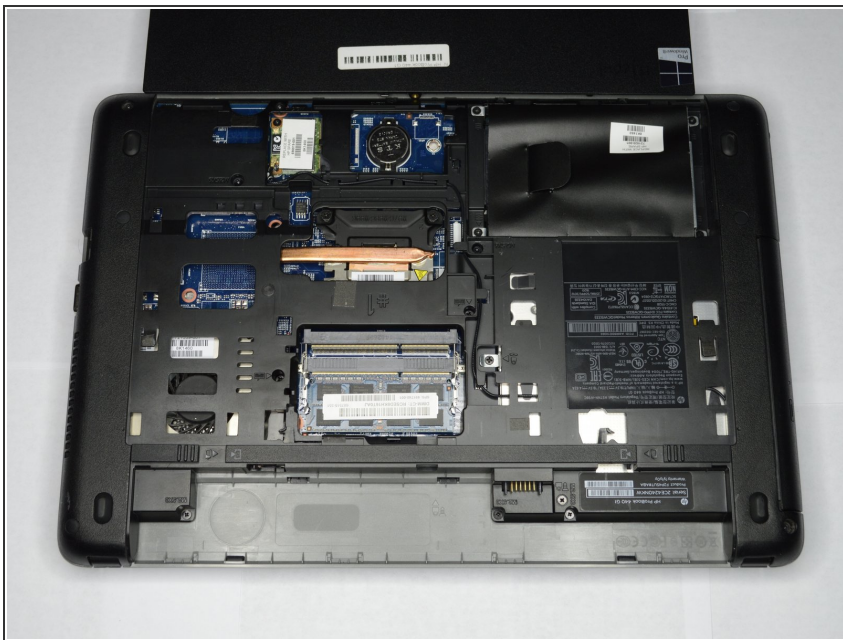

- Slide the backplate off.

To reassemble your device, follow these instructions in reverse order.