



Amazon Echo Show 5-Megapixel Camera Replacement

How to replace an Amazon Echo Show camera.

Written By: Christina Simone



INTRODUCTION

If your Amazon Echo Show 5-megapixel camera is not functioning properly, you may need to replace it. Before starting this guide, gather a T-5 Torx screwdriver and iFixit opening tool. There are some steps where no tools are necessary and your hands can be used instead. Remember to be careful and *gently* remove items, such as the rubber foot.

TOOLS:


- [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Camera




- Use the plastic opening tool to gently lift the plastic protector from the screen.

Step 2

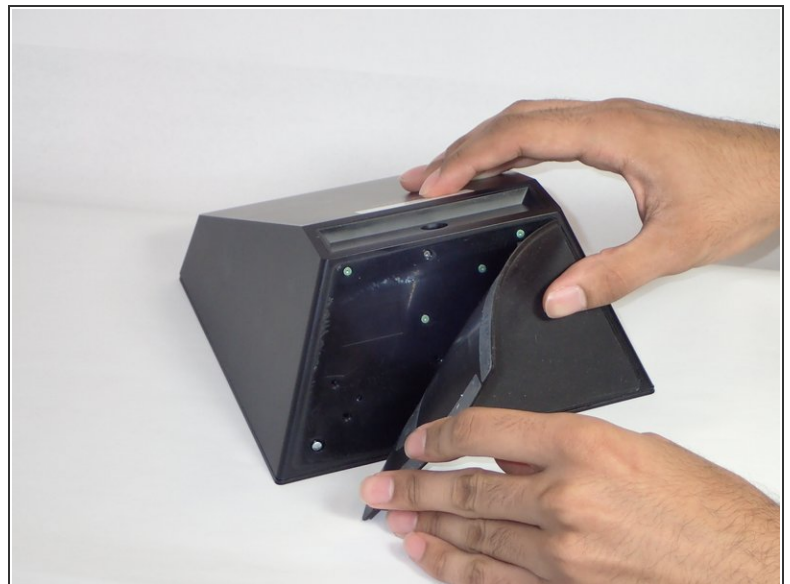


- After the protector has been removed, use your hands to gently remove the taped-in rubber foot from device.

Step 3

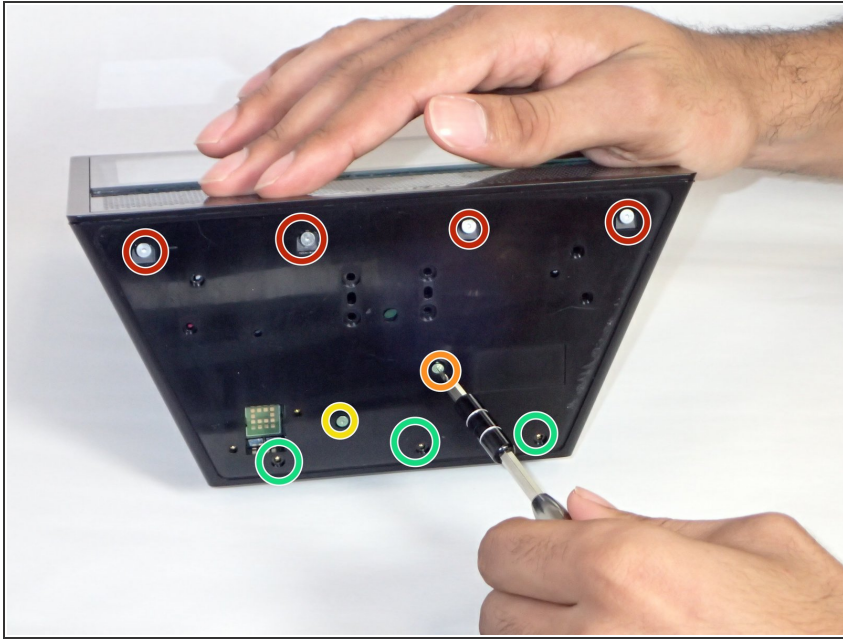

- Carefully peel off the bottom pad to expose the fastening screws.
- Remove three silver 1.4 T5 Torx screws on the top row.
- Remove one green 1mm T5 Torx screw in the middle.
- Remove a black 1.5mm T5 screw.
- Remove three green 1mm T5 screws from the bottom row.

Step 4

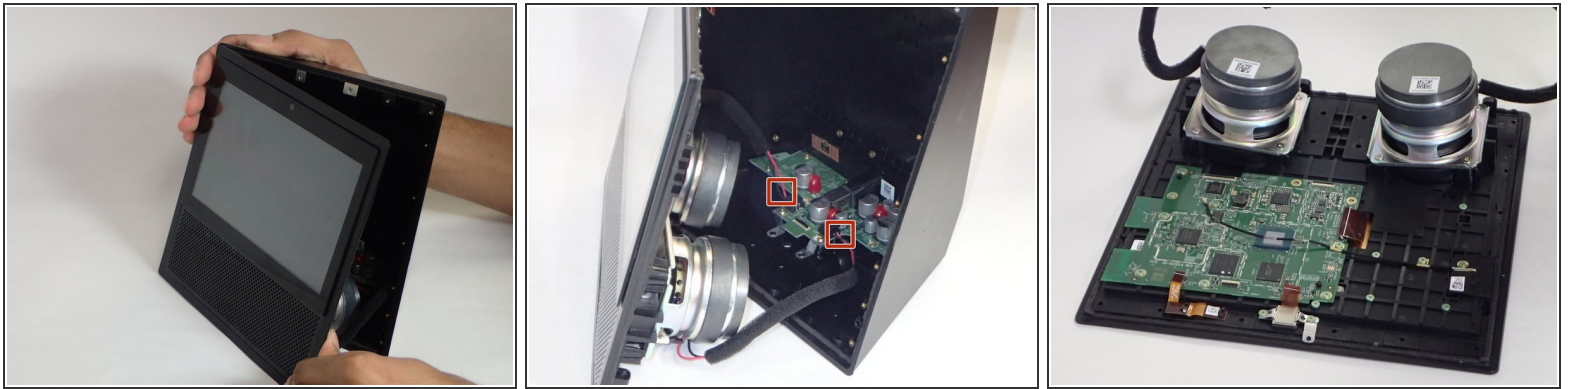


- After the screws are removed, grip the front panel and separate the front from the back. This will expose the inside of the device.

⚠ Make sure to ground yourself against a metal object nearby (ex. a metal chair, a door frame) before you touch any circuitry. An accidental static discharge can permanently damage a circuitboard.

- Use tweezers or your hands to carefully disconnect the red wires connecting the speakers to the power supply board.
- Lay the front section flat, with the screen down.

Step 5

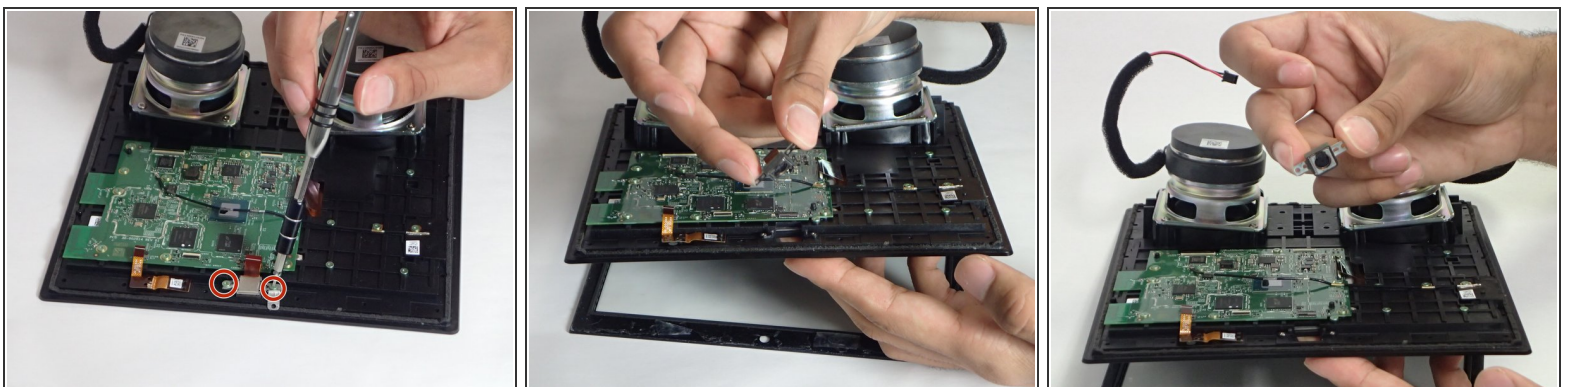

- Remove two 1mm T5 Torx screws.
- Once the screws have been removed, you can easily remove the camera from the device.

To reassemble your device, follow these instructions in reverse order.