 


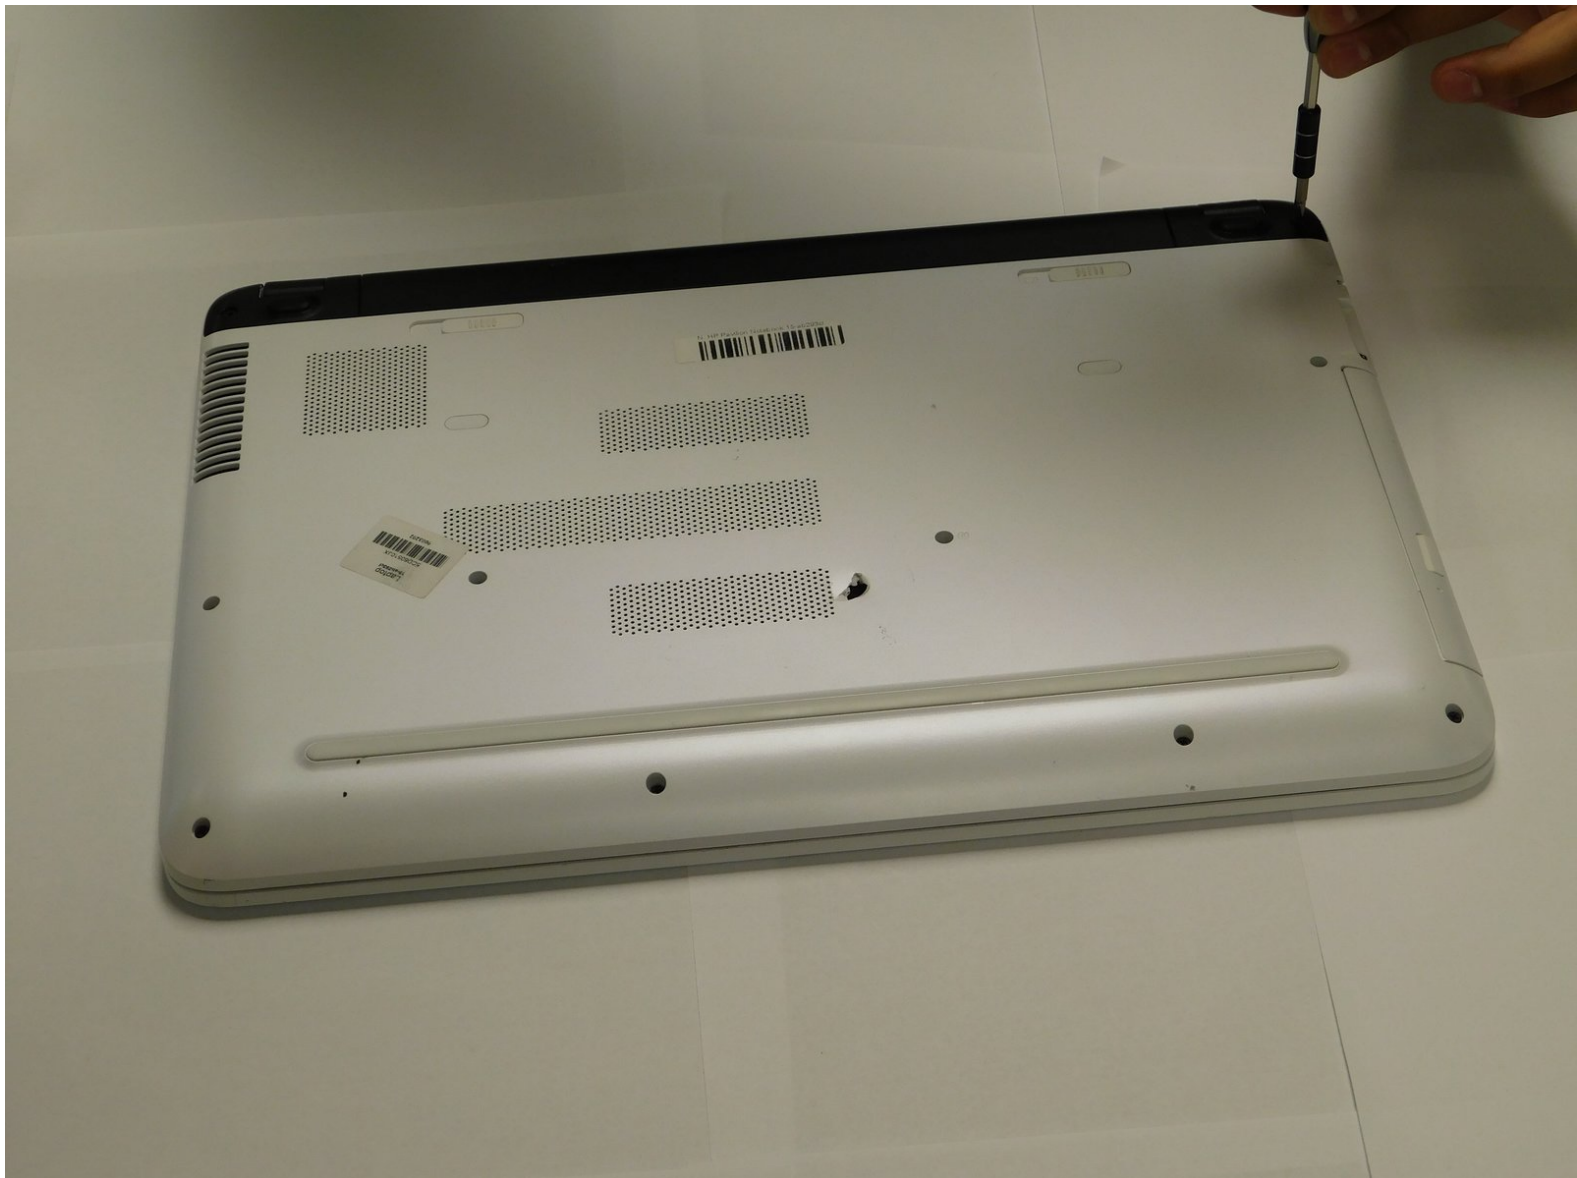

# HP Pavilion Notebook 15-ab293cl CD Drive Replacement

This guide will show you what steps to take when replacing the CD-Drive.

Written By: Esdras Teodosio Hernandez



---

## INTRODUCTION

 
Fans are an essential part of a computer. Sometimes fans can blowout due to age or simply faultiness. It is necessary to replace the fan when that occurs.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — CD Drive

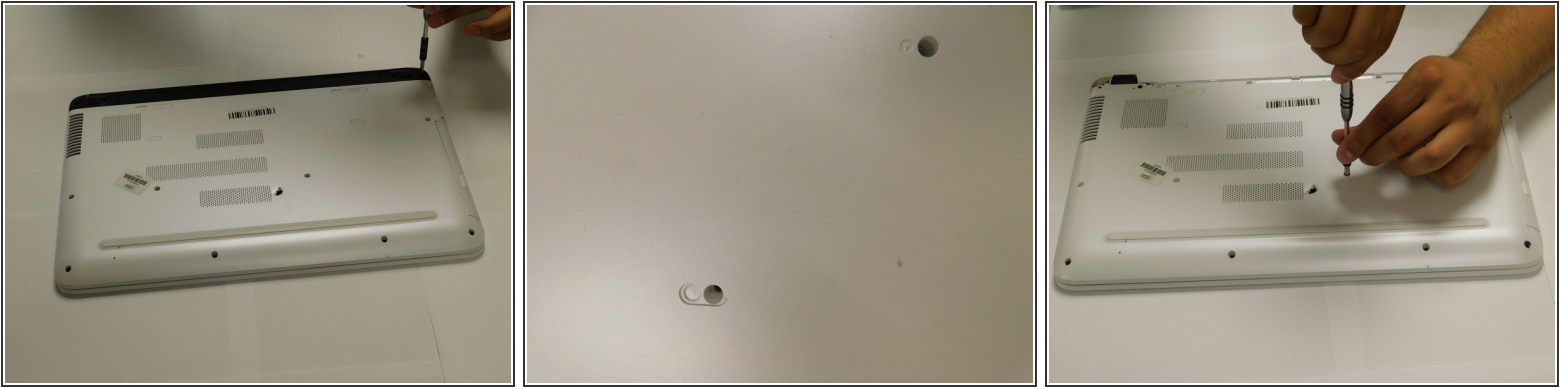

- Locate all the screws and remove them with a 3.5 mm screw with a PH0 screw driver.

## Step 2



- To pry the CD-Drive off the computer, just use a plastic opening tool. Then pull to remove the CD/DVD drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-22 05:31:41 AM.