




# Lenovo G580 Battery Replacement

This guide will demonstrate how to replace a malfunctioning battery in the Lenovo G580.

Written By: Kyle McNeil

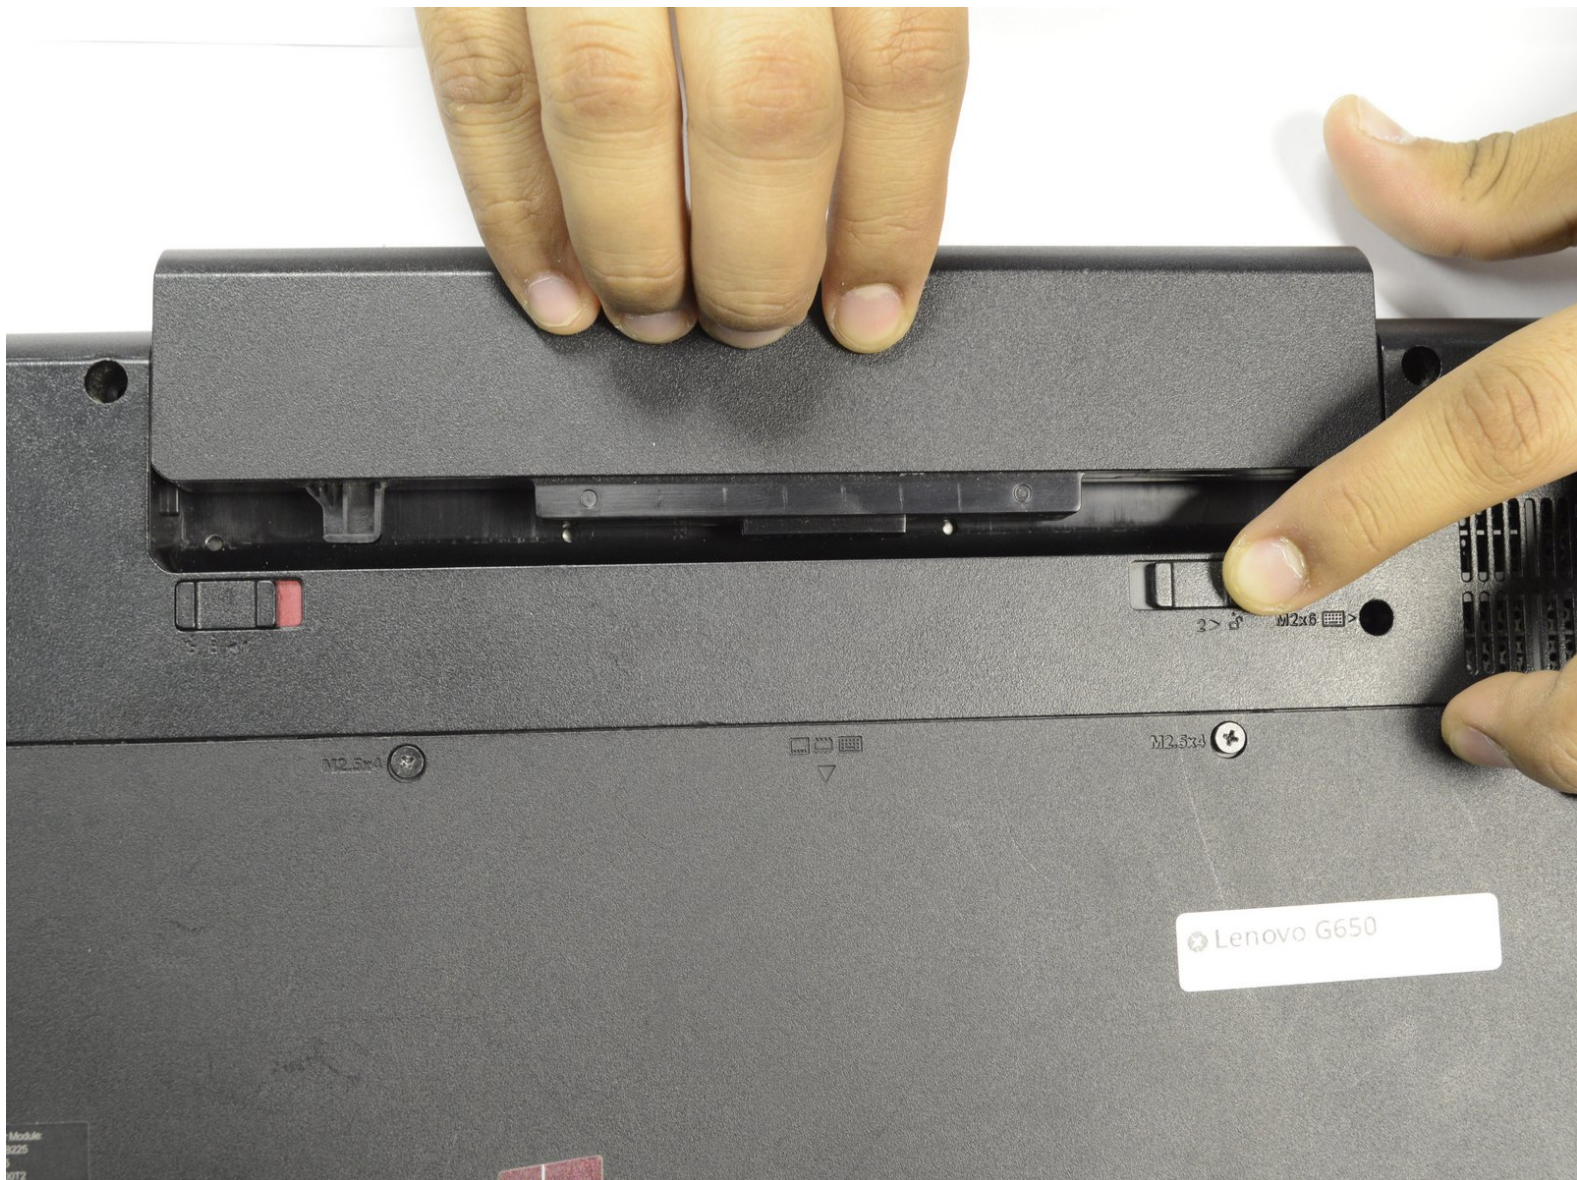

## INTRODUCTION

Batteries lose their ability to hold their charge over long periods of use. This results in the user needing to replace the battery to maintain sufficient battery life. This guide requires no tools.

### **TOOLS:**

- [Fingers](#) (1)

### **PARTS:**

- [Lenovo G580 11.1 Volt Li-ion Laptop Battery](#) (1)

## Step 1 — Battery




- Make sure your laptop is oriented backside facing upward as seen in the image.
- Locate the battery lock switch.

## Step 2




- Unlock the battery by moving the switch to the right.
- The switch is unlocked when the **RED** of the switch is present.

### Step 3

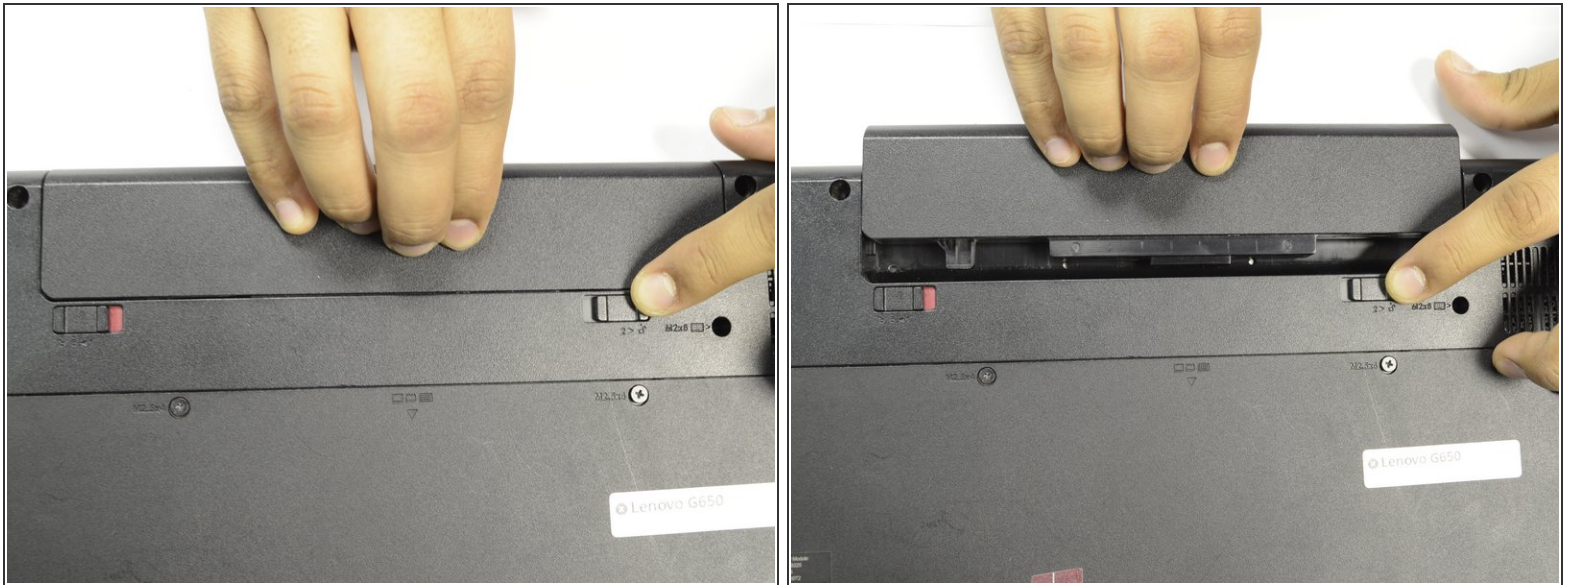

- Hold the release switch down.
- At the same time, push the battery upwards to remove the battery.

 Pulling on the battery while the battery is locked will damage the laptop. Ensure the lock is properly disengaged.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 08:11:26 PM.